



**OWNER'S MANUAL**

**20" AIR CIRCULATOR**

---



---

MODEL 1VAFCR20

# SAFETY INSTRUCTIONS

## IMPORTANT SAFETY INSTRUCTIONS

---

### CAUTION

Read Rules for Safe Operation and Instructions Carefully.

### WARNING

1. To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
2. If the power cord is damaged, it is strongly recommended to request a specialist to handle.
3. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
4. Do not leave the fan running unattended.

## RULES FOR SAFE OPERATION

---

 
 
1. Never insert fingers, pencils, or any other objects through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when moving grilles for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window. Rain may create electrical hazard.

6. The rules about cord and plug as below:
  - (1) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the products. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/ or repair.
  - (2) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
  - (3) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliance.

# INSTALLATION

## INSTALLATION INSTRUCTIONS

### Name of components

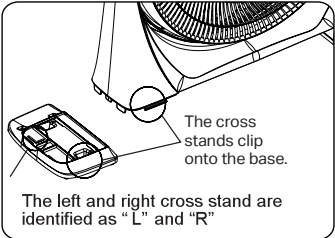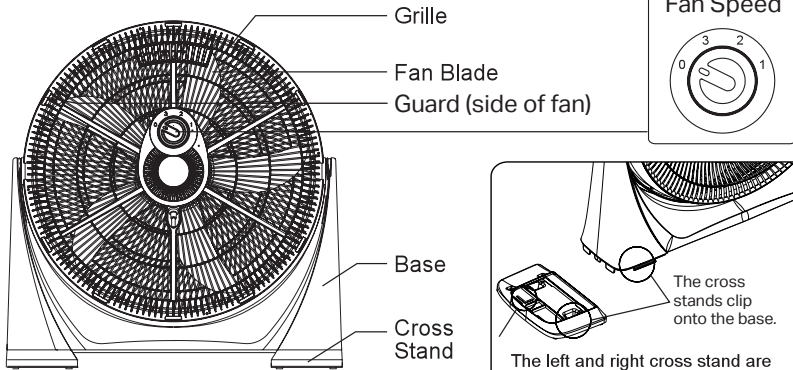


### Vertical Tilt

Push the guard slightly to adjust a comfortable position.

#### Warning:

 When adjusting the angle, do not put your hands on the grille to avoid get injured.


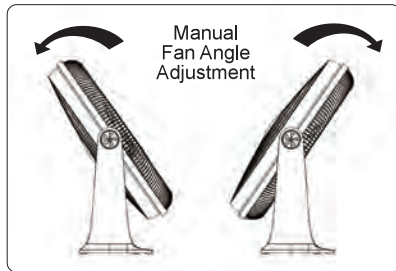


### Wall-mounted

Fix the base on the wall to adjust a comfortable position. When the fan is installed on the wall, the power cord must be located between the fan head and the fan base.

**Warning:** When adjusting the angle and starting to use the fan, ensure that it is securely fixed on the wall.

  **NOTE:** VISIONAIR WILL NOT ACCEPT LIABILITY/LOSS FOR ANY DAMAGE CAUSED BY THE UNIT FALLING OR DROPPING.

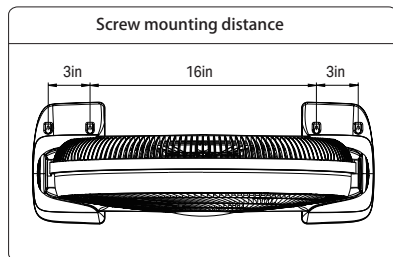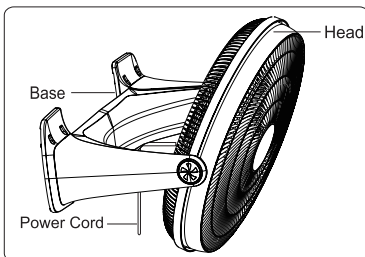

## FUSE SERVICING INSTRUCTIONS

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide the fuse cover on top of the attachment plug towards the blades.
3. Remove fuse carefully. Insert the tip of your tool into the fuse slot (close with the terminal), then pry the fuse out slowly, but not forcefully. If it feels tight, you can try several times to pry the fuse out little by little. When one side of the fuse has been pried, then you can get the fuse out entirely.
4. Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
5. Close fuse cover. Slide the fuse access cover on top of the attachment plug closed.
6. Risk of fire. Do not replace attachment plug, as thus contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged.



**NOTICE:** When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damaged or cause an accident. If it feels hard to replace the fuse, please make sure you have it inserted the right way.

# MAINTENANCE

Machines being used in areas with high particle pollution will need to be more frequently cleaned.

## CARE & MAINTENANCE

---

1. Be sure to unplug from the electrical supply before cleaning.
2. To ensure adequate air circulation to the fan motor, keep the vents at the rear of the motor housing free of dust, debris, and etc. You can use a vacuum cleaner attachment or can of air to clean these vents after the unit has been disconnected from the outlet. Do not disassemble the motor housing to clean.
3. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Thoroughly remove soap film with clean water. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use the following cleaner: gasoline, thinner, remove or bleach.
4. Be sure to not get water or other liquids inside of the motor housing.
5. Be sure to let the unit fully dry before resuming operation.

For your records, staple your sales receipt to this manual and record the following:

**Date of Purchase:** \_\_\_\_\_

**Place of Purchase:** \_\_\_\_\_

**NOTE:** Proof of purchase is required for all warranty claims.

**NOTE:** As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.



4560 W. 160th Street  
Cleveland, OH 44135

833-950-1185 | [support@visionairproducts.com](mailto:support@visionairproducts.com)

[www.visionairproducts.com](http://www.visionairproducts.com)