



OWNER'S MANUAL

1/4 HP AIR BLOWER



MODEL 1VAFBW1000

CONTENTS

OPERATION / INSTRUCTION	4
SAFETY INSTRUCTIONS	4
MAINTENANCE INSTRUCTIONS	4
TROUBLE SHOOTING	5
SPECIFICATIONS	5
DAISY CHAIN SPECIFICATIONS	6
STACKING FOR STORAGE	7

IMPORTANT NOTE:


Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

 **WARNING:** Cancer www.P65Warnings.ca.gov

INSTRUCTIONS

The Air Mover is intended to move air and to dry floors, walls, carpet, furniture, etc. Durable and easy to operate with an effective balance of static pressure and airflow, the units are suitable for a variety of applications.

1. Your Air Mover is prepped for use upon delivery. Before connecting it to power, thoroughly check for any shipping damage..
2. Plug the electrical cord into an outlet.
3. Gently position the Air Mover on a solid, level, and dry surface. The unit features three Air Mover positions that can direct airflow across flat or upward-angled surfaces.

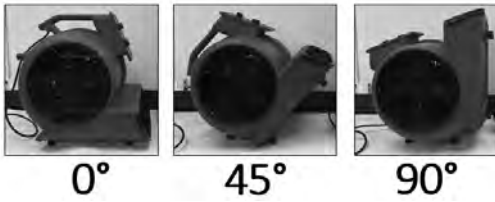

4. Set your preferred speed (1-LOW, 2- MED, 3- HIGH) using the control knob.



NOTE: Keep constant supervision on all active Air Movers.

SAFETY INSTRUCTIONS

1. To prevent electric shock, do not operate the unit in standing water. Never plug in or unplug the unit with wet hands or while standing in water.
2. To avoid risk of injury, do not direct air flow at face or body.
3. To reduce the risk of fire or electric shock, do not use the Air Mover with any solid-state speed control device.
4. Do not operate any Air Mover with a damaged cord or plug. Discard the unit or return it to an authorized service facility for examination and/or repair.
5. Unplug the Air Mover from the power supply before servicing or cleaning.
6. Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or similar coverings. Place the power cord away from traffic area to prevent tripping.
7. Do not allow children to play with or around an Air Mover at any time.
8. Do not move or carry an Air Mover while unit is operating.
9. All Air Movers in operation must be supervised at all time.

MAINTENANCE INSTRUCTIONS

1. To keep the Air Mover clean, use a damp cloth to wipe the surface of the housing.
2. Never submerge or soak the Air Mover with water.
3. When not in use, unplug and store the Air Mover in a dry indoor place out of reach of children.
4. Always disconnect the Air Mover from its power source before performing any maintenance or cleaning.

TROUBLE SHOOTING

For any problems not listed below, call your local distributor or contact our Service Department.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Air Mover not running	No power input	Plug in the Air Mover; check power source
	Switch not turning on	Turn on switch
	Air Mover fan wheel jammed	Remove material jamming fan
	Intake or exhaust blocked	Turn unit off and allow to cool, then remove blockage
Air Mover vibrates excessively	Accumulation of dirt on fan blade	Clean Air Mover fan blades


SPECIFICATIONS

Model	1VAFBW1000
Power	1/4HP
Voltage	115V/60Hz
Amp	1.8
Speeds	3
Size (L x W x H)	13" x 11" x 14"
Stackable	Yes
Cord Length	14Awg 10Ft
Overheating protection	Thermally protected
Positions	0°, 45°, 90°
Safety Marks	ETL/CETL
Housing	PP
Gross Weight	11 Lbs

DAISY CHAIN SPECIFICATIONS

- Other appliances can be plugged in the additional electrical receptacles and work whether the Air Mover is on or off. However, the total amperage must be lower than the 12-amp on-board circuit breaker.
- If the Air Mover or the plugged in appliance stops working, press the RESET BUTTON to reset the circuit

Chain max 5 1VAFBW1000 Air Movers.

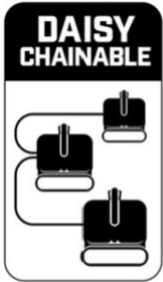

STACKING FOR STORAGE

IMPORTANT NOTE: Stacking the fan is solely intended for storage purposes, as outlined in the provided diagram. Under no circumstances should the fan be operated while stacked. This precaution is crucial to ensure safe and optimal functioning of the equipment.

Max stacking: 4 units



For your records, staple your sales receipt to this manual and record the following:

Date of Purchase: _____

Place of Purchase: _____

NOTE: Proof of purchase is required for all warranty claims.

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.



4560 West 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com | www.visionairproducts.com