 


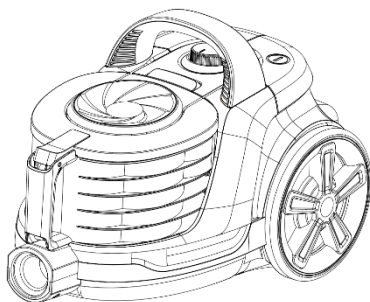

**VORTEX RED BAGLESS CANISTER VACUUM  
OWNER'S MANUAL**

**Model: VR25BCV**

**120V, 1400W**



**Atrix**

**1350 Larc Industrial Blvd.**

**Burnsville, MN 55337**

**[www.atrix.com](http://www.atrix.com)**

**[sales@atrix.com](mailto:sales@atrix.com)**

**Telephone: 952.894.6154**

**Toll Free Telephone: 800.222.6154**

**Fax: 952.894.6256**

## **IMPORTANT SAFETY INSTRUCTIONS**

When using an electrical appliance, basic precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING APPLIANCE**

#### **WARNING: TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR INJURY:**

 
1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Electrical shock may occur if used outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended instructions.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return to Atrix International.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges of corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into any openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
10. Keep hair, loose clothing, fingers and all body parts away from openings and moving parts.
11. Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
12. Do not use without filter in place.

13. Turn off all controls before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up any liquids, including flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Connect to a properly grounded outlet only.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.

**SAVE THESE INTRUCTIONS!**



## Components and Equipment

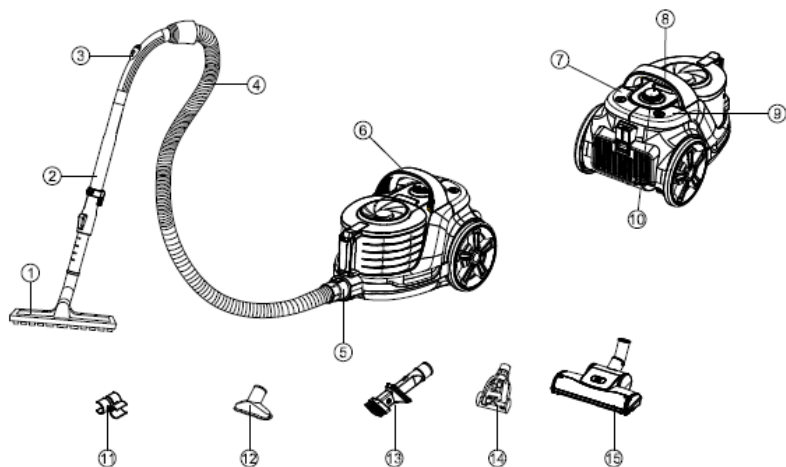


1. Hard Floor Brush (*AHC-70*)
2. Telescopic Extension Wand (*AHC61-63*)
3. Air Slide-Power Adjuster
4. Hose (*AHLRHOSE*)
5. Suction Hose Connection
6. Carry Handle
7. ON/OFF Button
8. Dust Bin Release Button
9. Cord Rewind Button
10. Suction Control Regulator/Power Adjustment
11. Accessories Holder (*AHC-64*)
12. Upholstery Nozzle (*AHC-59*)
13. 3-in-1 Tool (*RC31*)
14. Handheld Mini Turbo Brush (*RCMTB*)
15. Air Driven Turbo Brush (*WWRKPT560*)


## Prevention

 Switch off the vacuum cleaner immediately if the air intakes, the floor brushes or the telescopic wand become blocked. Before starting the vacuum cleaner up again remove the substance causing the blockage:

1. Never use the vacuum cleaner in the immediate vicinity of hot objects and do not suck up hot objects such as cigarette ends or ashes.

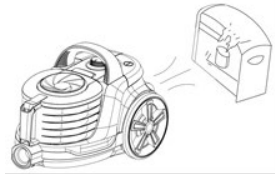

 
2. Only insert the plug in the outlet when your hands are dry.

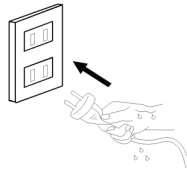

3. Remove large sharp objects from the floor before using the vacuum cleaner to avoid any possible damage to it.




 4. Do not pull by the vacuum cord when pulling out the plug.

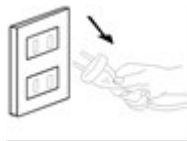


## Preparing and Assembling the Vortex Red

 
1. Fit the hose on the vacuum cleaner by inserting the rotating hose connection into the vacuum cleaner until you hear a click. To remove the hose, press the button at the side of the hose connection and then pull it out.

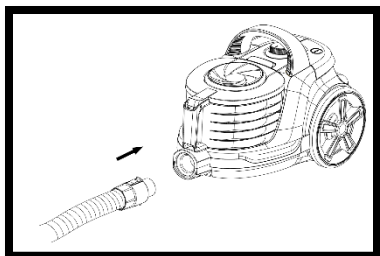

 2. Fit the telescopic tube into the other end of the hose.

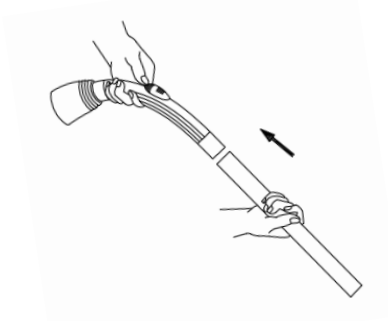

 
3. Adjust the length of the telescopic wand by pushing the locking mechanism down and pulling out the bottom section of the wand to a suitable length. When parking, shorten the wand as far as possible.

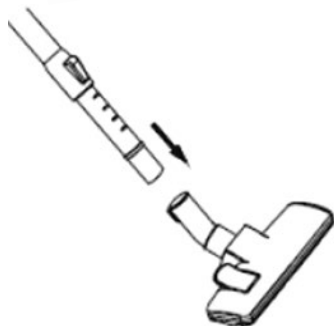



4. Fit the floor brush into the telescope tube.


## Vacuum Cleaner Use
 
### Vacuum Cleaning

1. Before using the device first pull out a sufficient length of electric power cord and plug into the outlet. The yellow mark on the electric power cord is the maximum length that should not be exceeded. To switch on the device, press the foot pedal button .

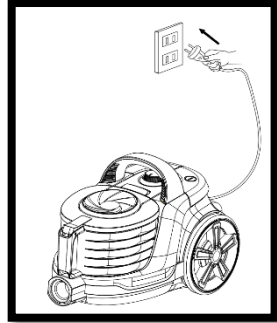

 2. To rewind the power cord, press the button  with one hand and guide the cord with the other hand to ensure that it does not whip causing damage.


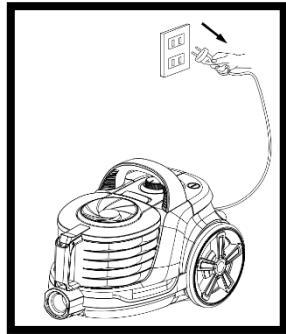


## Emptying the Vortex Red Dust Bin

Empty the dust bin regularly, at the latest when the quantity of dirt in the dust container has reached the "MAX" mark or the suction power has dropped.



1. Switch off the vacuum cleaner and disconnect the plug from the outlet. To do this, always pull on the plug and not on the cord.

  2. Release the dust container by pressing down the release button.

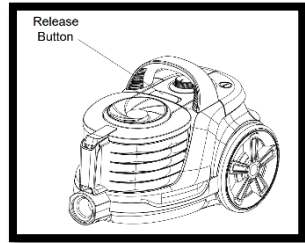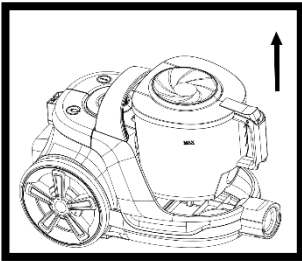

3. Lift the dust bin out of the vacuum cleaner.

  4. When emptying the dust bin, hold it low over the garbage can. Pull the lock on the cover of dust bin. Open the dust bin cover and empty the dust into the garbage can.

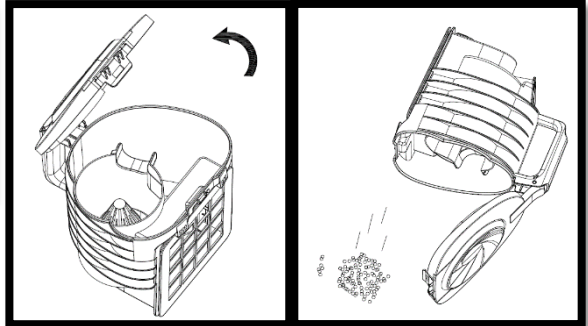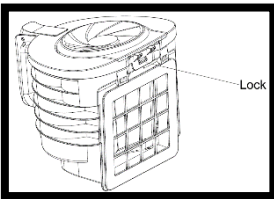


5. Carefully knock the remaining dust loose. Then close the dust bin cover.

6. Place the dust bin back onto the vacuum cleaner. Check to ensure the dust bin is securely seated.



## Cleaning the Motor Filter

 
1. Turn off and unplug cleaner.
2. Remove the dust bin and take the filter out.
3. Hold the protective motor filter over the garbage can.
4. For a quick clean, tap on side of garbage can.
5. For a deep clean, after tapping off excess dirt in garbage can, rinse with water and dry completely.
6. Insert the dry motor filter back into the dust bin.
7. Place the dust bin onto the vacuum cleaner. Check to ensure the dust bin is securely seated.

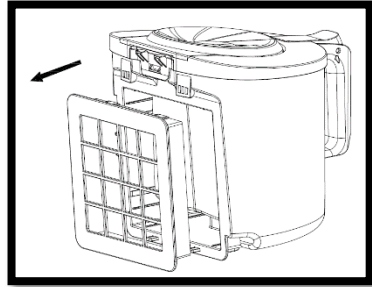

## Cleaning Exhaust Filter

The exhaust air filter cleans the air a final time before it leaves the vacuum cleaner. You can clean the exhaust air filter as follows:

 1. Switch off the vacuum cleaner and disconnect the plug from the outlet. To do this always pull on the plug and not on the cable.
2. Open the exhaust filter cover.
3. Rinse the Filter under running water and allow to dry completely.
4. Put the exhaust filter back into place.
5. Close the exhaust filter cover.

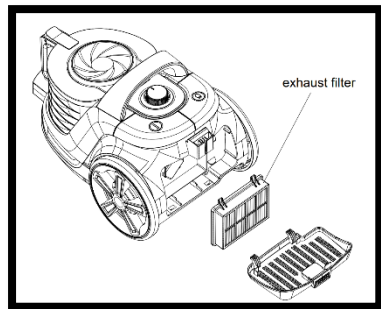

**IMPORTANT!** Never use the vacuum cleaner without filters.

## **Cleaning the Vortex Red Bagless Vacuum**

Unplug the vacuum cleaner. Clean the vacuum cleaner by wiping it with a damp cloth. Do not use any solvents or abrasive cleaning agents.

### **Environmental Tips**



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.



## **ATRIX VORTEX RED BAGLESS CANISTER VACUUM WARRANTY INFORMATION**

**Warranty/Service Information:** For warranty service information, please contact Atrix or your local Atrix distributor.

Atrix Vortex Red Bagless Canister Vacuum Limited Warranty: To the original user purchasing the Atrix Vortex Red Bagless Canister Vacuum, Atrix warrants that the vacuum will be free of defects in material and manufacture for a period of one (1) year from the date of purchase. Should any failure to conform to this warranty appear within this period, Atrix will, at its option, repair or replace the defective product. It is the user's responsibility to return the product, freight prepaid, to Atrix International. These remedies are the user's exclusive remedies for breach of this warranty.

**Exclusions to warranty coverage:** The above warranty will not apply to any special configurations or to any units that have been modified, or damaged by negligence, misuse, accident or failure to follow Atrix's Instruction Manual. Consumable supplies, such as filters, accessories, and motor brushes are not covered by this warranty.

**Disclaimer of Warranty:** EXCEPT FOR THE IMPLIED WARRANTIES OF TITLE AND AGAINST PATENT INFRINGEMENT, ATRIX MAKES NO OTHER WARRANTIES WITH RESPECT TO THE ATRIX CANISTER VACUUM CLEANER, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

**Limitation of Liability:** ATRIX WILL NOT BE LIABLE UNDER ANY CIRCUMSTANCES FOR ANY COINCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES OR ECONOMICAL LOSS, BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY IN TORT OR ANY OTHER LEGAL THEORY, EVEN IF ATRIX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, REVENUE, EQUIPMENT USE, DATA OR INFORMATION OF ANY KIND. THE LIABILITY OF ATRIX SHALL NOT UNDER ANY CIRCUMSTANCE, EXCEPT AS EXPRESSLY PROVIDED HEREIN, EXCEED THE PRICE OF THE ATRIX CANISTER VACUUM.

**To Register your Warranty Visit:**  
[www.atrix.com](http://www.atrix.com)