 




# JET SET PRIVACY SHOWER TENT

## ASSEMBLY AND USE INSTRUCTIONS

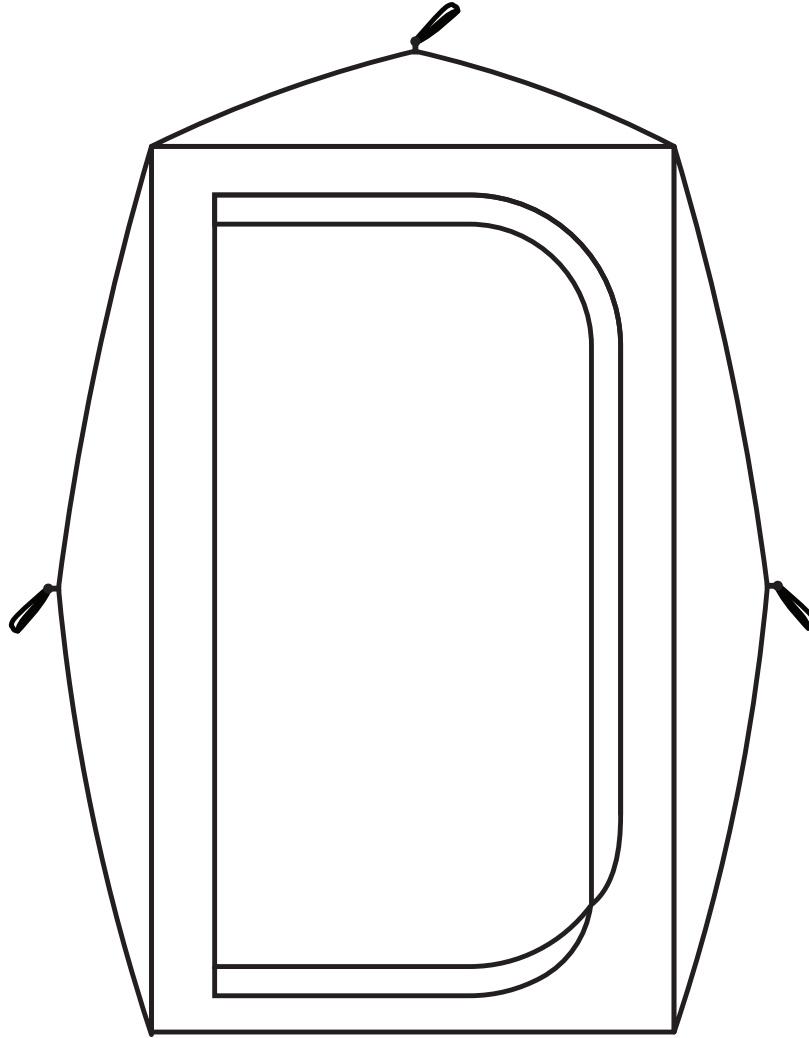

### **⚠ WARNING**

**READ AND UNDERSTAND ALL ASSEMBLY, INSPECTION, & USE INSTRUCTIONS PROVIDED BEFORE EACH USE. FAILURE TO FOLLOW INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.**

**NEVER ALLOW CHILDREN TO PLAY IN THIS PRODUCT UNATTENDED.**

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**

**THIS TENT IS MADE WITH FLAME RESISTANT FABRIC WHICH MEETS CPAI-84 SPECIFICATIONS. IT IS NOT FIREPROOF. THE FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE NOT THE TENT FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.**

**THE USE OF ELECTRICAL DEVICES IS NOT RECOMMENDED INSIDE THE TENT.**

### **WARRANTY**

Territory Tents® is an outdoor brand created and by sold Ardisam, Inc.. Ardisam, Inc. warrants this Territory Tent® product under a one-year limited warranty to be free from defects in materials or workmanship or both for a period not exceeding twelve consecutive months from the date of original purchase by the first retail consumer or commercial end user. "Consumer use" means personal recreational use by a retail consumer. "Commercial use" or "commercial application" means all other uses, including use for commercial, income producing or rental purposes. Once a product has experienced commercial use, it shall thereafter be considered as a commercial use product for purposes of this warranty. This warranty does not cover tent tears, or bent poles due to use in high wind, inclement weather conditions, unattended use or uses other than those listed in the owner's manual. This warranty applies to the original owner that provides a proof of purchase of the shelter. The warranty is not transferable. The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the twelve month consecutive period thereafter. Any unit used in a commercial application is covered for a period of 90 days after purchase. For the warranty to be valid, the product must be registered by filling out the warranty card and it must be received by Ardisam, Inc., within 30 days of purchase. Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.

## BEFORE YOU BEGIN

- Locate a level site clear of all debris and sharp objects to prevent tears while setting up your tent.
- For easy set-up in windy conditions, make sure to position one of the corners of the tent into the wind.
- Do not set up your tent under any overhead obstructions in case of falling objects or lightning strikes in inclement weather.

## SAFETY AND MAINTENANCE INSTRUCTIONS

Ultraviolet (UV) rays are an invisible part of sunlight. Prolonged exposure to UV rays can cause fibers to fade and degrade. This tent will last longer if you limit its exposure to UV rays. Pitch the tent in shade when possible and don't leave the tent up longer than necessary.

- Take down the tent when not in use to avoid unnecessary fading from outdoor elements. Fading or discoloring of fabric is not covered under your warranty.
- Take down the tent when not in use to avoid unnecessary damage.
- Use extra tie-down ropes during excessive winds.
- Never put the tent away wet. Always put away dry and clean to avoid mildew and other problems.

## LONG TERM STORAGE

Make sure your tent is completely dry and clean before storing for long periods of time. Store your tent in a cool, dry place away from rodents.

## SET-UP INSTRUCTIONS

1. Remove the tent from the carry bag. Remove the tie strap from around the tent. (SEE FIGURE 1)



FIGURE 1

2. Lay the tent flat on the ground and check that there is no material twisted or overlapping the ends of any poles. **DO NOT** force tent when folding or unfolding. Watch for the entanglement of poles. (SEE FIGURE 2)

**NOTE: When unfolding, check that the Territory Tents® logo and webbing loop handles are visible. This is the EXTERIOR of the tent. The poles and hubs are the INTERIOR of the tent.**



FIGURE 2

3. Find the webbing loop handle located on the exterior of the roof. The roof is a square-shaped panel made of light gray fabric. Proceed to pull outward on the webbing loop handle until the roof pops open. (SEE FIGURE 3)

**NOTE: For added assistance, grasp the top seam of the panel and place your foot on the bottom edge when popping open the roof to help hold the tent in place.**



FIGURE 3

## SET-UP INSTRUCTIONS CONT.

4. Find the webbing loop handle located on the exterior of each wall. Proceed to pull outward until the wall pops open. Do this to all side walls. **(SEE FIGURE 4)**

**NOTE: For added assistance, grasp the top seam of the panel and place your foot on the bottom edge when popping open a side wall panel to help hold the tent in place.**



FIGURE 4

5. Once all three walls are popped open, locate the zipper slit on one of the corners opposite the tent door. This zipper allows the tent to be collapsed and folded when unzipped. Zip the zipper down to the ground to enclose the tent. **(SEE FIGURE 5)**



FIGURE 5

6. Assemble the floor by spreading it out on the interior of the tent and aligning the corner cording loops with the webbing stake loops on the exterior of the tent. **(SEE FIGURE 6)**

**NOTE: The tent floor is designed to be semi-removable and can be rolled up inside the tent when not in use.**



FIGURE 6

7. Locate the ground stakes and tie-down ropes in the carry bag, then fasten the stakes through each webbing stake loop and the floor cording loops. Hammer stakes through each webbing loop completely. **(SEE FIGURE 7)**

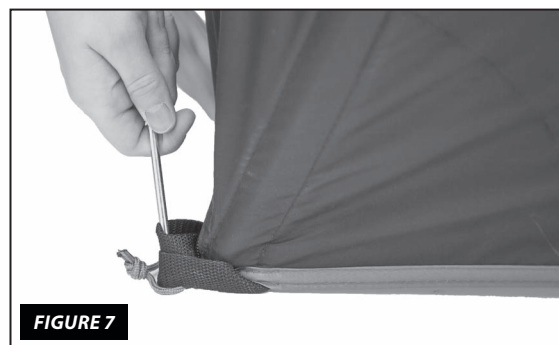 


FIGURE 7

8. Tie the guy lines to each eyebolt on the wall exterior. **(SEE FIGURE 8).** Then loop the other end to a ground stake. Use the slider on the tie-down rope to achieve proper tension.

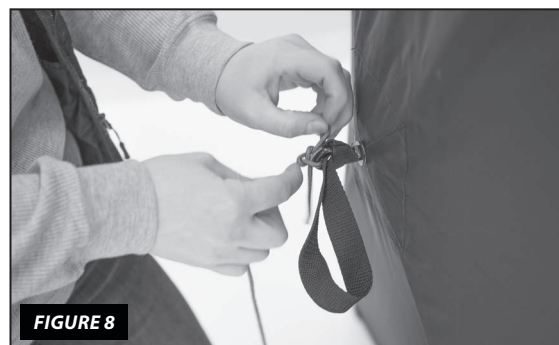 


FIGURE 8

## USE INSTRUCTIONS

1. Located on the exterior of the back wall of the tent are two clotheslines that can be used for hanging items like towels or clothes.
2. There are storage pockets located on the inside walls and dry storage pockets located on the roof of the tent interior.
3. For shower use, there are multiple drawstrings located on the interior of the tent for attaching a shower system. Feed the shower head/hose through the cording and slide the toggle to fasten the shower to your desired position. **(SEE FIGURE 9)**

**WARNING: DO NOT hang heavy objects in the tent to prevent collapsing.**

4. For shower use, there are two hose ports located on one corner of the tent. Use these ports for shower systems placed outside the tent. Slide the shower head/hose through the hose port from the exterior and attach the shower to the interior of the tent. **(SEE FIGURE 10)**

**NOTE: The upper hose port is best used for gravity-fed shower bags that can be hung on a tree or structure outside the tent, and the lower hose port is best used for plug-in or generator shower systems that sit on the ground outside the tent.**

**NOTE: There is ample room inside the tent for shower systems like pressure/foot-pump showers, battery-powered showers, or submerged pump showers.**



## TAKE-DOWN INSTRUCTIONS

1. Remove all stakes and tie-downs.
2. Zip all windows shut.
3. Unzip the zipper located on one of the corners opposite the door.
4. From inside the tent, gently pull the roof poles/hub down to collapse the roof. DO NOT stand directly underneath the hub when collapsing.
5. From outside the tent, zip the door shut to prevent tangling of poles. Push the poles/hub inward to collapse the wall. Do this to each wall.
6. Once all the hubs are collapsed, gather all corners of the tent and fold them together into a tight cone shape. Do not force the tent when folding and watch for entanglement of poles.
7. Take the provided packing strap and wrap it around the folded tent and secure for easier insertion into the carry bag. Place the folded tent back into the carry bag with the hubs inserted into the closed end of the bag.

**WARNING: The tent must be free of water or moisture prior to storage to prevent mold or mildew growth.**



**TERRITORY TENTS®**, A DIVISION OF ARDISAM, INC.  
1730 Industrial Avenue, Cumberland, WI 54829 | 800-345-6007