




BNS RECHARGEABLE HANDY FAN

OWNER'S MANUAL

Model No. F19

SKU No. 2448598

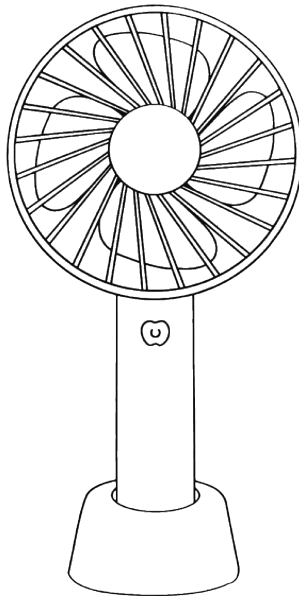

PLEASE SAVE THESE INSTRUCTIONS

WARNING: READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE.

IMPORTANT INSTRUCTIONS

1. When operating, the fan blade revolves at a high speed. Please don't put a finger or other objects in the fan blades.
2. Please don't use the fan in humid and wet weather or wet environment, as it could cause the product damage or to malfunction.
3. Please charge the fan with standard DC 5V source. Remove the USB cable when charging is completed.
4. Don't place the fan on flammables when charging.
5. If the fan gets too hot or out of shape, or if the battery is leaking while charging, please stop charging immediately.
6. Please keep the product at 32°F-104°F.
7. Please don't place the product in a fire, the battery will explode.
8. Please don't hit or smash the product. Repeated hitting may damage the product.
9. Please don't dismantle, change or repair the product by yourself.
10. Please don't replace battery by yourself, consult professional guidance.

READ & SAVE THESE INSTRUCTIONS

WARNING: Shock Hazard

Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

WARNING: Fire Hazard

Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat.

DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Product Specifications:

Charging Input: DC 5 Volts

Input current: 1 A

Speed Level: 3 Speeds –High / Medium / Low

Battery capacity and model: 1,200 mAh, 18650

Product dimension: 4.20" (L) x 2.56" (W) x 8.46" (H)

Remarks: Working hours and charging hours will differ based on different products.


What's in the box

Fan - *1

USB Cable - *1

User Manual - *1

Product diagram

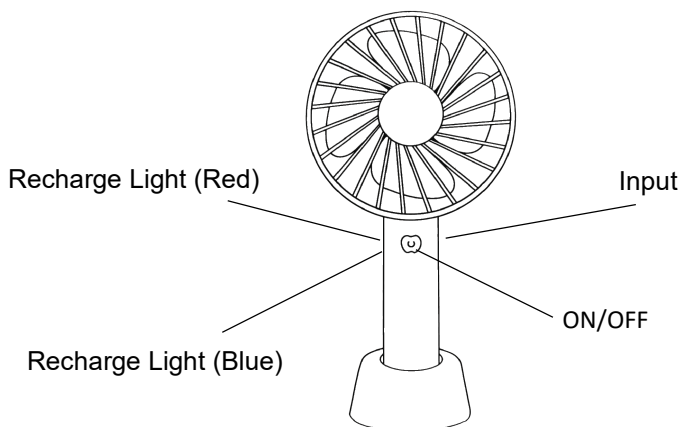

Charging the Fan:

1. Connect the fan with power through USB cable (included).
2. A RED LED light represents charging status.
3. When the Red light flash, it's charging. When the Red light always on, it is fully charged. (The recommended charging time is 2 hours.)
4. When the fan is in use status, the LED light will turn BLUE color.

WARNING: DO NOT REMOVE THE BATTERY AND CHARGE IT SEPARATELY!

Operating the Fan

1. Fan Operation: To start the fan, press the CONTROL BUTTON repeatedly to the desired speed. LED lights will display blue.
2. Press BUTTON once – fan will start on LOW speed.
3. Press a second time for MEDIUM speed.
4. Press a third time for HIGH speed.
5. Press a fourth time and the fan will turn OFF.

Warning:

1. Don't disassemble the product by yourself
2. Don't put the product in wet place
3. Don't put the product near hot place
4. Don't put the product near any liquid

Care and Maintenance

Cleaning: CAUTION — Before cleaning the fan be sure to turn off the fan. Clean the grille surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER. Replace front grille before fan use. Allow fan to dry completely before use. Periodic grille cleaning with a vacuum will prevent dust build up. The motor is sealed and does not require any interior maintenance, cleaning or lubrication.

Repair: DO NOT OPERATE THE FAN WITHOUT THE GRILLE IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

Storage: Keep original carton for storage of the fan.