



 WATERPORT

HYDROSPRAY

INSTRUCTION MANUAL

WHAT'S INCLUDED



HydroSpray
Pump System



- 1 Clear Hose
- 2 Spray Nozzle
- 3 Filter Wrench
- 4 Battery Terminal Adapter
- 5 12V Cigarette Adapter
- 6 Red Hose

Warning, do not use for potable/drinking water, only to be used for rinsing gear and showering.

HYDROSPRAY DIRECTIONS

Step 1: To begin operating your new HydroSpray you will need to plug your power cord into the Anderson outlet (red) located on the right side of your box. Make sure you hear a click, this ensures a tight fit. You can choose between the 12V cigarette lighter attachment or the battery terminal attachment. Please note RED goes to Positive (+) and BLACK goes to Negative (-). Make sure you remove the silicone cover before plugging any terminals into your box.



Remove plug cap



Plug in until you hear a click.



Cigarette lighter adapter



Battery terminal adapter Red goes to Positive (+), Black goes to Negative (-)

Step 2: Attach your clear hose (hose with orange filter) to the inlet quick connect located on the right side of the box (Black colored). **BE SURE THE RED RUBBER PLUG IS REMOVED.** This will be the inlet that feeds to the pump's filter. Make sure when attaching the hose you hear a "CLICK" as this ensures the hose is securely fastened.



Remove red plug.



Connect clear hose with a click.

Step 3: Attach your outlet hose (red) to the second inlet (red) located on the left side of your tank. **BE SURE THE RED RUBBER PLUG IS REMOVED.** Make sure when attaching the hose you hear a "CLICK" as this ensures the hose is securely fastened.



Remove red plug.



Connect red hose with a click.

Step 4: Insert your spray nozzle into the red hose, make sure you hear a "CLICK" as this ensures the hose is securely fastened.



Step 5: Turn your system to the “ON” position by pressing down on the switch located on the right side of the box. If you are using the 12V Cigarette Adapter make sure the switch on the plug is in the “ON” position. If you are using the terminal clips you only need to turn the system “ON” via the box ON/OFF switch.



Turn on the pump.



Turn on the Cigarette Lighter Adapter.

Step 6: IMPORTANT Allow your pump to prime. When you place your filter in any water source it may take up to 20 seconds to prime. To allow the pump to prime hold the nozzle handle down (as if you are spraying water) and allow the pump to begin the flow cycle. Once the pump has primed water will begin to spray out of the nozzle.




CLEANING YOUR FILTER

Please use the provided tool to clean your filter. The need to clean your filter depends on how much debris has run through your system. If you are running lake, stream, or water with sediment we recommend cleaning your filter when debris can be seen building up inside the filter.

Step 1: To remove your filter place the provided tool around the clear plastic part of your filter. You will notice grooves located on the outside, make sure the tool is snug on a groove and spin it to the left, Please **NOTE:** Going in a clockwise motion will tighten the casing.

Step 2: Remove the mesh from the filter and rinse thoroughly, make sure no debris is present. If your pump appears to have debris stuck inside that cannot be removed after taking the filter apart, we recommend removing the four screws located on the bottom to help access the area. **WARNING: Do not deform the mesh as it is designed to fit around the plastic inlet.**

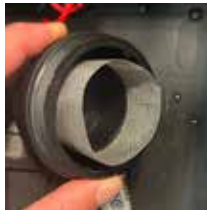

Step 3: When placing your filter in lakes, rivers, or streams do your best to keep the filter elevated on rocks or other hard debris to reduce the amount of sand being filtered through the pump. If the filter is located on a sandy bottom we recommend sticking with the “jet” setting.

REPLACING YOUR FUSE

Make sure system is not plugged in or operating. If your system is not operating properly this may be due to a blown fuse. To access your fuse, locate the fuse protector connected to the black wire. You can also follow the black wire from your on/off switch. To open the casing simply pull up on the middle section and the case will open (pull up on the lip portion). Pull the fuse from the case and replace.

PLEASE READ BEFORE OPERATING

- 1) **WaterPORT:** If you are running your system directly off a WaterPORT you will need to make sure the WaterPORT cap is removed to allow proper air flow through the pump.
- 2) Do **NOT** run any other liquids besides water through your pump.
- 3) Only use fresh water sources.



- 4) Do NOT run water above 115° F or 46° C
- 5) Make sure all water is removed from the box before stowing away. Note that there might be water in the box when you first get the HydroSpray. This is from testing.
- 6) When you are done using your system please be sure to apply all silicone end caps to ensure all open holes are plugged and waterproof.
- 7) Unplug the system when not in use.

ADDITIONAL INFORMATION

WARRANTY

COVERED PRODUCT:

WaterPORT™ Portable Pressurized Water System and accessories.

LIMITATION OF DAMAGES:

In no event shall the manufacturer WaterPORT™, LLC, a California limited liability company be liable for consequential damages for breach of this warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to the buyer.

WARRANTY COVERAGE:

WaterPORT™, LLC warrants the Covered Product to be free of all defects in material and workmanship for 90 days from the date of original purchase. This warranty extends to the original buyer only.

Within the period of this warranty, WaterPORT™, LLC will repair or replace, free of charge, any part proving defective in material or workmanship. All warranty repairs and service must be performed by an authorized WaterPORT™, LLC technician.

All expenses related to replacing or repairing a defective part under this warranty shall be assumed by WaterPORT™, LLC except for the following expenses, which shall be assumed by the buyer: The cost of transporting the product to the WaterPORT™ Returns Department at the address listed below.

WARRANTY EXCLUSIONS:

This warranty does not apply to any costs, repairs, or services for the following

- Repairs necessitated by use other than normal personal, family, or household use.
- Damage resulting from misuse, abuse, accidents, alterations, or improper installation.
- Damage arising from either road hazards or driving off road.
- Cosmetic damages including, but not limited to, scratches or discoloration.
- Damage arising from liquids other than water.
- Damage arising from high temperatures.

Corrective work necessitated by repairs made by anyone other than a WaterPORT™, LLC authorized service technician.

ADDITIONAL INFORMATION

WARRANTY

HOW TO OBTAIN WARRANTY SERVICE:

If the Covered Product needs to be returned, please email sales@thewaterport.com to request an RMA number.

The buyer should then carefully pack the Covered Product, preferably in the original packing materials, and deliver it, together with a copy of the original purchase receipt and a description of the problem, to the following:

WaterPORT
457 Deseret Dr. Suite 1
Kaysville, UT 84037
Attn: WaterPORT Returns Department RMAXXXXXX

IMPORTANT: Please include a return address

SHIPPING METHODS:

For your records, please select a tracked shipping method such as UPS, FedEx, or USPS to monitor the shipment of the Covered Product to the WaterPORT™ Returns Department. We recommend that the buyer insure the product being shipped. We accept no liability for Covered Products lost or misplaced in shipment.

30 DAY MONEY BACK GUARANTEE:

This warranty is in addition to the 30 day money back guarantee.

NOTICE TO BUYER:


This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You have the right to bring any action at law or equity to resolve disputes concerning or to enforce the provisions of this warranty.



WaterPORT

Copyright © 2022 WaterPORT. All Rights Reserved.

www.theWaterPORT.com

 @TheWaterPORT