



Congratulations on your purchase of a FLIPO® product. Our products will help to enhance the beauty of your home and provide many years of enjoyment. FLIPO® offers a wide variety of unique toys of the highest quality. To ensure the maximum performance of your toy, please read and save these instructions.

BATTERY INSTALLATION

1. Remove your plush toy from the packaging.
2. The battery compartment is located inside your toy; open the hook & loop closure located on the underside of your toy to access it.
3. Use a screw driver to remove the battery cover.
4. Insert three 1.5 volt AA batteries according to the polarity diagram located in the battery compartment. For optimal performance, use alkaline batteries.
5. Replace the battery cover and screw; tighten the screw to close.

OPERATION

1. An ON/OFF switch is located inside your toy; open the hook & loop closure located on the underside of your toy to access it.
2. Slide the ON/OFF switch to the ON position.
3. When first turned on your toy may move and make noise; this is normal.
4. A light sensor triggers your toy. The sensor is located in the head of the toy; motion in front of the sensor will cause lighting to change and activate your toy.
5. Your toy will roll around and laugh for one complete cycle; it will remain off until activated by motion again.
6. To turn your toy off, squeeze the ON/OFF switch located on the toys left front foot. When squeezed to turn off, your toy will say "Bye-Bye".
7. If the power switch is in the ON position, the toy can be activated by squeezing the toys left front foot. When squeezed to turn on, your toy will say "Hello".
8. To completely turn off your toy, slide the ON/OFF switch to the OFF position.

CHOOSING A LOCATION

Your toy should only be used on a flat, dry surface. Your toys sensor is light activated; do not use it in dark or poorly lit conditions. Do not use the toy in a place in which activation may cause it to fall, such as stairs, ledges, tables, etc. – dropping the toy may cause permanent damage to it.

WARNINGS

- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- For best results, use alkaline batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per manufacturer's recommendations.

BATTERIES NOT INCLUDED

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

*Flipo Group
613 First Street
La Salle, IL 61301*

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Manufactured by Flipo Group Limited La Salle, IL

Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com • Fax: (815) 223-9266

MADE IN CHINA