

CYBER FLYER™ DINO

With Infrared Controlled Technology


READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING. SAVE THIS MANUAL FOR FUTURE REFERENCE.

Thanks for your purchase of another awesome Flipo Toy! Your package includes 1 Dino Cyber Flyer and 1 USB cable for charging its internal battery. To charge and use your Dino Cyber Flyer, please read and follow these instructions.

Figure 1 Dino Cyber Flyer & Charging Cord



Figure 2 Charging Port & ON/OFF Switch

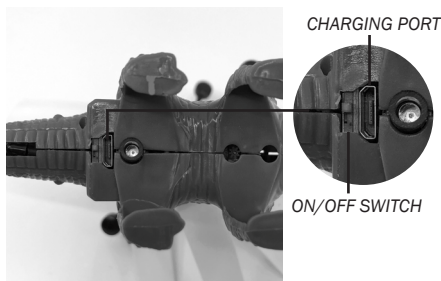

PRODUCT SPECIFICATIONS

- Includes 1 Dino Cyber Flyer And 1 USB Charging Cable
- Red & Blue LED Illuminated Eyes
- Battery Type: Lithium 3.7V/75mAh
- Charging Time: Up To 30 Minutes
- Flying Time: Up To 7 Minutes

CHARGING YOUR CYBER FLYER

Your Dino Cyber Flyer has an internal rechargeable lithium-poly battery. To charge, simply plug the included USB cable into a power block and the USB port located on the belly (**Figure 2**) of the Dino Cyber Flyer's body. While charging, a red LED located near the base of the Dinosaur's tail will light up and remain illuminated until the battery is fully charged. When the battery is charged, remove the USB cable.

FLYING YOUR CYBER FLYER

**** IMPORTANT **** It is recommended to fly your Dino Cyber Flyer indoors ONLY. Always operate it in open spaces so it can fly freely without hitting objects. Small rooms or spaces are not recommended when operating the Dino Cyber Flyer.

1. Turn on your Dino Cyber Flyer by sliding the ON/OFF switch located on the belly (Figure 2) of the Cyber Flyer's body to the RIGHT - the eyes will illuminate.
2. Hold the Dino Cyber Flyer in your hand at waist level for approximately 4-5 seconds until the rotors begin spinning. When this occurs, release the Cyber Flyer.
3. Once released, your Dino Cyber Flyer will fly. After a few seconds, the rotors will slow and the Dino Cyber Flyer will slowly drop.
4. The Dino Cyber Flyer has a sensor that reacts to the proximity to a surface. If you place your hand underneath the flying Dino Cyber Flyer, its rotors will accelerate, and it will rise.
5. The Dino Cyber Flyer's rotors will accelerate at a faster rate if the body is nearer to a surface.
6. The best way to control the Dino Cyber Flyer is to keep your hand or other surface at a moderate distance away from the sensor. Being too near to the sensor may cause the Dino Cyber Flyer to accelerate at a rate that may cause it to move erratically.
7. If your Dino Cyber Flyer should fall or land the rotors will automatically quit spinning. Should this occur, slide the ON/OFF switch OFF by sliding the switch to the left and then turn ON again.
8. When you are done flying your Dino Cyber Flyer slide the ON/OFF switch to the left/OFF position.

YOUR DINO CYBER FLYER IS EQUIPPED WITH A LI-POLY RECHARGEABLE BATTERY - PLEASE ADHERE TO THE FOLLOWING USE AND SAFETY PRECAUTIONS.

- Do not throw the battery/ Dino Cyber Flyer against a hard surface.
- Keep the battery/ Dino Cyber Flyer in a cool and dry environment.
- Do not overcharge the Dino Cyber Flyer's battery.
- Do not connect the Dino Cyber Flyer directly to an electrical outlet.
- Do not solder, pierce, cut, disassemble or alter the battery in any manner.
- Turn off your toy's power switch after use.

USE & SAFETY

- Fully charge your battery before using your product for the first time.
- Use only the USB cable provided with your product to charge.
- Do not store your product in a high-temperature environment including heat caused by intense sunlight.
- Do not place product in fire or other excessively hot locations; exposure to fire or temperature above 212° may cause an explosion.
- Do not disassemble this product or attempt to modify it in any way.
- Do not dispose of this product in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws.

WARNINGS

- Changes or modifications to this toy are expressly NOT APPROVED. The product's warranty is VOIDED if the owner or operator of this toy makes any such changes or modifications.
- Do NOT touch moving rotator blades. Do not play with or fly above someone's head. ADULT SUPERVISION IS REQUIRED!
- Keep hands, hair and loose clothing away from the rotor blades when power switch is turned ON.
- Use the product as directed in this manual.
- Do not attempt to change the Dino Cyber Flyer's internal lithium battery.
- Keep the Cyber Flyer away from direct heat.
- Keep away from liquids and spills; do not submerge the Dino Cyber Flyer in water.
- The toy is not intended for use by children under the age of 8.

FCC WARNING STATEMENT

1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
2. "Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
3. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer of experienced radio/TV technician for help."

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

*Flipo Group
613 First Street
La Salle, IL 61301*

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Distributed by Flipo Group Limited La Salle, IL

Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com • Fax: (815) 223-9266

MADE IN CHINA