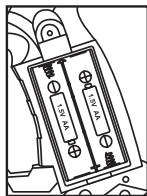 
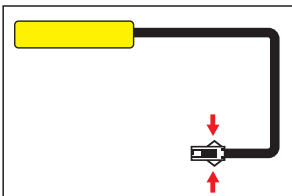 
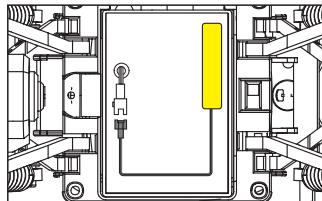 
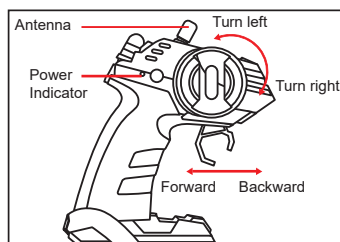 


Please read this instruction manual carefully before using.

- For Ages 6+

FIGURE 1

FIGURE 2

FIGURE 3

FIGURE 4


REMOTE BATTERY INSTALLATION

1. Loosen and remove the lock screw located on the side of your remote control and remove the battery compartment lid.
2. Insert 2 AA batteries according to the polarity information located in the compartment; make sure the (+) and (-) poles of each battery are positioned correctly, (**Figure 1**).
3. Replace the battery compartment door and screw; tighten screw completely to lock in place.

VEHICLE BATTERY CHARGING

Your Timber Rover is powered by a rechargeable lithium battery. To charge the battery, please do the following:

1. Loosen and take out the lock screw located on the bottom of your Timber Rover and remove the battery compartment lid.
2. Remove the rechargeable cell by pressing down on the release lever located on the female connector, (**Figure 2**).
3. Attach the wired end of the lithium battery to the USB charging cable included with your Timber Rover by inserting the male end of the cell into the female connector; align the two pins of the connector with corresponding receptacles of the male end.
4. Plug the USB end into a PC or charging block. **WARNING:** Only use a charging block rated at 5.0 volts or lower.
5. One side of your USB charging cable will illuminate in red while charging. When charging is complete, the light will turn off. Fully charge the battery before first use.
6. After charging, reinstall the lithium battery into the Timber Rover by inserting the male end of the cell into the female connector; align the two pins of the connector with corresponding receptacles of the male end (**Figure 3**). Replace the battery compartment door and screw; tighten screw completely to lock in place.

OPERATION

1. Activate your Timber Rover by moving the red toggle switch located on the bottom of the vehicle to the ON position. To deactivate, move the switch to the OFF position.
2. Use the trigger of the remote to control the direction your Timber Rover moves. Pulling the trigger back will move it forward; pushing the trigger forward will move it in reverse, (**Figure 4**).
3. Your Timber Rover turns using the dial located on the top of your remote. To turn right, move the dial forward/clockwise. To turn left, move the dial backward/counterclockwise, (**Figure 4**).

WARNINGS:

- Not suitable for children under 6 years of age.
- Installation of batteries should ALWAYS be done by an adult.
- Keep fingers, hair and loose clothing away from the vehicle's tires and wheels.
- Don't pick up the vehicle while in motion.
- Don't put your vehicle or remote control near any source of heat.
- Don't operate your vehicle in dangerous places.
- Only use charging blocks rated at 5.0 volts or lower.
- Don't let the vehicle get wet. Don't run through water or operate in the rain.
- Do not disassemble the vehicle or remote control.
- If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used.
- Watch for and avoid obstacles.
- Turn the vehicle off when not in use. Remove the remote control's batteries if not used for a prolonged period.

BATTERY CARE:

DISPOSABLE BATTERIES

- Failure to insert batteries in the correct polarity may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- For best results, use alkaline batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per manufacturer's recommendations.

RECHARGEABLE BATTERIES

- Fully charge your battery before using your product for the first time.
- Use only the rechargeable lithium battery and USB-C cable provided with your product to charge.
- Do not store your product in a high-temperature environment including heat caused by intense sunlight.
- Do not place product in fire or other excessively hot locations; exposure to fire or temperature above 212° may cause an explosion.
- Do not dispose of the battery in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws.
- Do not dispose of batteries in fire.

FCC INFORMATION

This device complies with part 15 of the FCC Rule. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AJGILH-C022

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

*Flipo Group
613 First Street
La Salle, IL 61301*

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Manufactured by Flipo Group Limited La Salle, IL

Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com • Fax: (815) 223-9266

MADE IN CHINA