

Thank you for choosing our product! Please read this instruction manual carefully before using.

## Parts



Acrobat Stunt Car X1



Remote Control X1



3.7V Battery X1



USB Charging Cable X1



Mini Screwdriver x1



Instruction Manual

## Battery Charging & Installation




Connect the battery to the charging cable, then plug the USB charging cable into the USB port of a computer or a USB Charger. Your cable has a small red LED that will illuminate while charging; when charging is complete, the LED will turn off.



### Remote Control - Battery Installation

Use a Philips screw driver to remove the screw keeping the battery compartment cover in place and remove the cover.

Insert 2 AA batteries into the battery compartment according to the polarity markings located there. Replace the cover and screw, being sure to tighten completely.

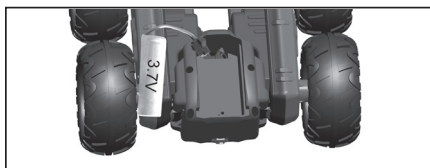

After charging is complete use a Philips screw driver to remove the screw keeping the battery compartment cover in place and remove the cover. Connect the 3.7 V battery to the cable located in the battery compartment.



Making sure the battery is in the compartment and the cable is not protruding, replace the cover and screw, being sure to tighten completely.

## Remote Control Function




### Message Illumination Instructions

When your Acrobat stands & spins its LEDs display an illuminated message. **To change the message, press the Light Switch button while spinning to toggle through different messages.** To turn the display OFF, press and hold the Light Switch button while spinning. To turn the display back ON, press and hold the Light Switch Button while spinning.

# Operation

Turn on the car and remote control's power switches. When the remotes red LED has stopped flashing your Acrobat and remote are connected - use the joysticks and begin playing. NOTE: Cannot operate the car when the remotes LED indicator light is flashing.

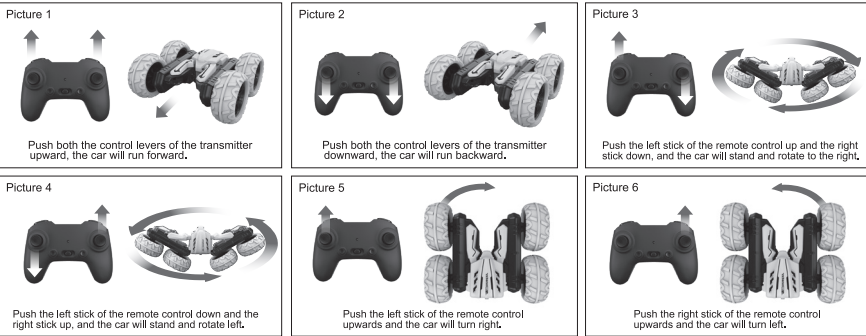

## CARE & MAINTENANCE

If you plan to discontinue use for an extended time, remove all batteries.

To clean wipe with a damp cloth.

If the Acrobat slows down or doesn't respond to the remote control, batteries may need to be charged/replaced.

## WARNINGS

Not suitable for children under 3 years due to detachable small parts.

Installation of the battery should ALWAYS be done by an adult.

Keep fingers, hair and loose clothing away from the vehicles tires and wheels.

Don't pick up the vehicle while in motion.

Don't put your vehicle or transmitter near any source of heat.

Don't operate your vehicle in dangerous places.

Avoid driving on sand and loose gravel.

Don't let the vehicle get wet. Don't run through water or operate in the rain.

Do not disassemble the vehicle or remote control.

If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used.

For best results, operate on hard flat surfaces.

Only use the USB cord and battery included with your Acrobat RC Stunt Car.

Only use the USB cord included with your Acrobat RC Stunt Car to charge the rechargeable battery.

Follow the polarity markings when installing or replacing batteries.

Do not mix old and new batteries.

Do not swallow batteries.

For best results, use alkaline batteries.

Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.

Batteries must be recycled or disposed of properly.

## FCC INFORMATION

This device complies with part 15 of the FCC Rule. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AYCU-S638

## 30 DAY LIMITED WARRANTY

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group  
613 First Street  
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Distributed by Flipo Group Limited La Salle, IL  
Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com • Fax: (815) 223-9266

MADE IN CHINA