



## Instruction Manual

### ITEM NO: TOY-HDM-GR


Thank you for choosing our product! Please read this instruction manual carefully before using.

For Ages 6+

#### BATTERY INSTALLATION


##### CONTROLLER:

1. Use a Phillips-head screwdriver to remove the screw holding the battery compartment door in place located on the rear of the remote.
2. Install 2 x AA batteries according to the polarity diagram located in the battery compartment.
3. Close the lid, reinstall the lock screw and tighten.

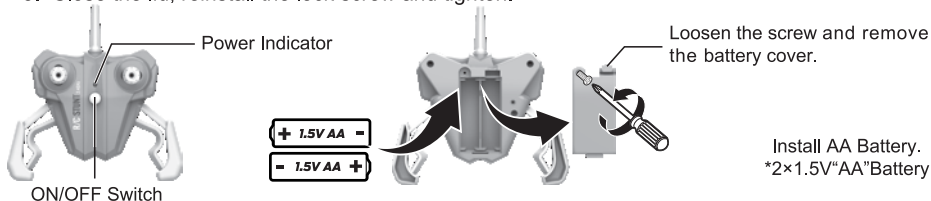

##### MOTORCYCLE:

1. Use a Phillips-head screwdriver to remove the screw holding the battery compartment door in place located on the bottom of the motorcycle.
2. Remove the battery cartridge and install 4 x AA batteries according to the polarity diagram located in each battery chamber.
3. Reinstall the battery cartridge so the two metal anodes make contact with the springs located in the battery compartment.
4. Close the lid, reinstall the lock screw and tighten.

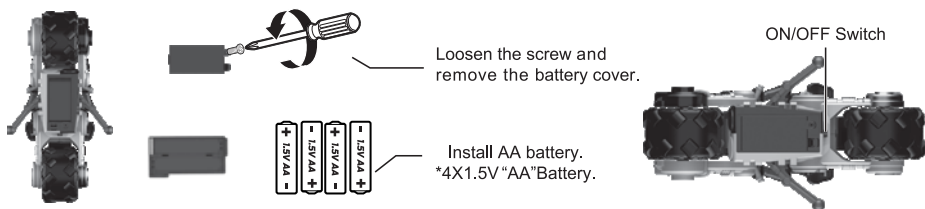

#### OPERATION

##### DRIVING YOUR MOTORCYCLE

1. Slide the power switch located on the bottom of the motorcycle to the ON position.
  2. Turn on the remote by pressing in the power button located on the center of the remote. A red LED will flash, indicating the remote has successfully paired with the motorcycle.
- NOTE: Your vehicle and remote use 2.4 GHz technology, allowing multiple vehicles to be used separately in the same room without interference. To do so, activate and pair one vehicle and one remote and then do the same for each other vehicle/remote sequentially.

#### TROUBLE SHOOTING

If your motorcycle does not work, please check the following:

Check to see if you need new batteries.

Metal railings or other wireless toys/transmitters may cause interference - try playing with your toy in a different location.

## WARNING

Not suitable for children under 6 years due to detachable parts.  
Installation of the battery should ALWAYS be done by an adult.  
Keep fingers, hair and loose clothing away from wheels.  
Don't pick up while in motion.  
Don't put your vehicle or remote control near any source of heat.  
Don't operate your vehicle in dangerous places.  
Avoid driving on sand and loose gravel.  
Don't let the vehicle get wet. Don't run through water or operate in the rain.  
If the toy is damaged and any broken parts are exposed, the vehicle should not be used.  
Watch for and avoid obstacles.  
For best results, operate on hard flat surfaces. Operation on pliable surfaces such as carpeting or rugs may prevent some stunts.

## BATTERY SAFETY

Do not mix old and new batteries.  
Do not swallow batteries.  
For best results, use alkaline batteries.  
Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.  
Batteries must be recycled or disposed of properly.

## FCC INFORMATION

This device complies with part 15 of the FCC Rule. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## 30 DAY LIMITED WARRANTY

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.  
During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group  
613 First Street  
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



## WARNING:

CHOKING HAZARD - small parts,  
Not for children under 3 years.



Distributed by Flipo Group Limited La Salle, IL  
Questions or Comments?

Call: (815) 223-9942 • Email: [info@flipo.com](mailto:info@flipo.com) • Fax: (815) 223-9266

MADE IN CHINA