

Please read this instruction manual carefully before using.

- For Ages 3+
- Adult guidance is strongly recommended.

CONTENTS

- 1 x Spin Gear Stunt Car
- 1 x Remote Control
- 1 x USB Charging Cable
- 1 x Rechargeable Battery

FIGURE A


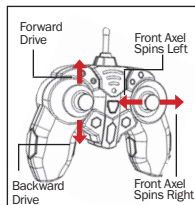


FIGURE B

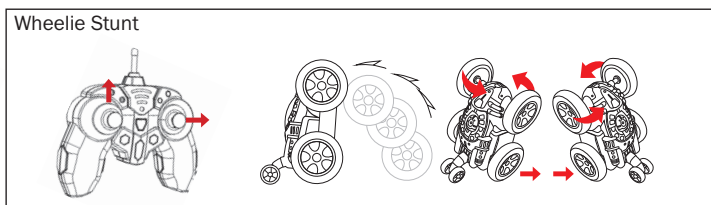

BATTERY INSTALLATION & CHARGING

Remote Control

1. Loosen the lock screw located on the rear of your remote control until it stops. Lock screw is not fully removable for safety. Remove the battery compartment cover by lifting the integrated screw tab.
2. Insert two AA batteries according to the polarity graphic located in the compartment; make sure the (+) and (-) poles of each battery are positioned correctly.
3. Replace the battery compartment cover and tighten screw completely to lock in place.

Spin Gear Car

1. Loosen the lock screw located on the underside of your Spin Gear until it stops. Lock screw is not fully removable for safety. Remove the battery compartment lid by pushing the integrated safety tab in the direction of the "Open" arrow.
2. Remove rechargeable battery from the battery compartment, depress battery connector safety lock, and separate wire connectors.
3. Plug the USB charging cable into a USB port, or a USB AC adapter and insert the adapter into an electrical outlet.
4. Connect the battery connector to the connector on the USB cable. The red light on the charging cable will light when charging. When batteries are fully charged, the light will turn OFF.
5. When battery is fully charged, disconnect the battery connector from the USB charging cable, and unplug the cable from the power source.
6. Reconnect battery to the battery cable in the battery compartment, reinsert battery, replace battery compartment cover, and tighten the screw.

OPERATION

1. The Spin Gear is activated by moving the black toggle switch located on the bottom rear of the vehicle to the ON position. To deactivate, move the switch to the OFF position. When first turned ON the blue lights in the car will illuminate. **Note:** The remote control will automatically be linked to the Spin Gear when the car is turned ON.
2. Drive the car by operating the joysticks on your remote control (**Figure A**).

SPINNING STUNT MOVES – Your Spin Gear is capable of any number of spins, turns, wheelies and other stunts. To do so, simply move your car backward or forwards with the left joystick, while also using the right joystick of the remote to make the front axle twist. Different combinations of pushing these buttons will create different stunts. (**Figure B**)

Basic Stunt Joystick Combinations

Wheelie – Simultaneously push the left joystick up and the right joystick to the right.

360° spin – While in wheelie position, push the right joystick in either direction.

Front spin donut – With all wheels on the floor, push the right joystick in either direction.

Note: With practice, the types of joystick stunt combinations and use of obstacles will improve and increase.

WARNINGS:

- Not suitable for children under 3 years of age.
- Installation of batteries should ALWAYS be done by an adult.
- Keep fingers, hair and loose clothing away from the vehicle's tires and wheels.
- Don't pick up the vehicle while in motion.
- Don't place your vehicle or remote control near any source of heat.
- Don't operate your vehicle in dangerous places.
- Avoid operating on sand, gravel or other loose surfaces.
- Don't let the vehicle get wet. Don't run through water or operate in the rain.
- Do not disassemble the vehicle or remote control.
- If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used.
- Watch for and avoid obstacles.
- For best results, operate on hard flat surfaces. Operation on pliable surfaces such as carpeting or rugs may prevent some stunts.

BATTERY CARE & SAFETY:

- Do not overcharge the rechargeable battery. When the battery is fully charged, immediately remove it from the charger.
- Only use the rechargeable battery included with your vehicle.
- Only use the USB cord included with your vehicle to charge the rechargeable battery.
- Do not charge battery near flammable materials or leave unattended during charging.
- Charging should always be supervised by an adult.
- Failure to insert batteries in the correct polarity may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- For best results, use alkaline batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per manufacturer's recommendations.

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

*Flipo Group
613 First Street
La Salle, IL 61301*

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Manufactured by Flipo Group Limited La Salle, IL

Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com • Fax: (815) 223-9266

MADE IN CHINA