



Light Speed™ II

RC LED Sports Car | Instruction Manual

Please read this instruction manual carefully before using.

- For Ages 8+
- Adult guidance is strongly recommended.

CONTENTS:

- 1 x Light Speed II Car
- 1 x Remote Control
- 1 x Rechargeable Battery
- 1 x USB Charging Cable
- 1 x Water Fill Bottle

BATTERY INSTALLATION & CHARGING

Inserting the Remote-Control Batteries

1. Loosen the lock screw located on the battery compartment cover on back of your remote control. Remove the battery compartment cover by pressing the integrated tab in the direction of the “Open” arrow.
2. Insert two AA batteries according to the polarity graphic located in the compartment; make sure the (+) and (-) poles of each battery are positioned correctly.
3. Replace the battery compartment cover; replace and tighten screw completely to lock in place.

Charging the Car Battery

1. Loosen the lock screw located on the underside of your Light Speed II. Remove the battery compartment lid by pushing the integrated safety tabs towards the “Open” arrows.
2. Remove rechargeable battery from the battery compartment, depress battery connector safety lock, and separate wire connectors.
3. Plug the USB charging cable into a USB port, or a USB AC adapter and insert the adapter into an electrical outlet.
4. Connect the battery connector to the connector on the USB cable. The red light on the charging cable will light when charging. When the battery is fully charged, the light will turn OFF.
5. When battery is fully charged, disconnect the battery connector from the USB charging cable, and unplug the cable from the power source.
6. Reconnect battery to the battery cable in the battery compartment, reinsert battery, replace battery compartment cover, and tighten the screw.

OPERATION

1. Your remote control is ON at all times.
2. Your Light Speed II is activated by moving the ON/OFF toggle switch located on the underside of the car to the ON or MUSIC position. Both positions will activate the LED lights.

Note: In the MUSIC position, your car will rev, honk its horn, and play music.

3. The buttons on the left side of the remote move the car forwards or backwards.
4. The buttons on the right side of the remote turn the car to the left or right.

Misting Function

1. Fill the included water fill bottle with purified water.
2. Remove the water reservoir cap located on the top of the spoiler on the rear of the car.
3. Place the water fill bottle nozzle in the spray reservoir hole and squeeze the water bottle gently to fill.
4. Remove the water bottle and replace the cap.
5. Press the Misting button in the center of the remote once to turn the Red Misting light and the Misting function ON.
6. Press the Misting button in the center of the remote a second time to turn the Red Misting light and the Misting function OFF.

WARNINGS:

- Not suitable for children under 8 years of age.
- Installation of batteries should ALWAYS be done by an adult.
- Keep fingers, hair and loose clothing away from the vehicle's tires and wheels.
- Don't pick up the vehicle while in motion.
- Don't place your vehicle or remote control near any source of heat.
- Don't operate your vehicle in dangerous places.
- Avoid operating on sand, gravel or other loose surfaces.
- Don't run through water or operate in the rain.
- Do not disassemble the vehicle or remote control.
- If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used.
- Watch for and avoid obstacles.
- For best results, operate on hard flat surfaces. Operation on pliable surfaces such as carpeting or rugs may prevent some stunts.

BATTERY CARE & SAFETY:

- Do not overcharge the rechargeable battery. When the battery is fully charged, immediately remove it from the charger.
- Only use the rechargeable battery included with your vehicle.
- Only use the USB cord included with your vehicle to charge the rechargeable battery.
- Do not charge battery near flammable materials or leave unattended during charging.
- Charging should always be supervised by an adult.
- Failure to insert batteries in the correct polarity may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- For best results, use alkaline batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per manufacturer's recommendations.

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

*Flipo Group
613 First Street
La Salle, IL 61301*

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Manufactured by Flipo Group Limited La Salle, IL

Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com

MADE IN CHINA