



**Item# 10102150**

## **ARCHED ALUMINUM RAMPS 90"**



### **WARNING:**

Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

## Warning

1. Never overload ramps. Maximum capacity for your ramp is 3000 lb. (Evenly distributed load).
2. Always use safety strap to securely fasten the ramp to the vehicle. This prevents the ramp from slipping off the back of the truck.
3. Carefully roll or winch equipment up or down the ramp. Never drive or ride your equipment while loading or unloading. We are not responsible for any damage or injuries that can occur when loading and un-loading.  
**USE AT YOUR OWN RISK!**
4. Make sure the ramp is aligned with the wheels of the equipment being loaded or unloaded.
5. Always load or unload on a solid, level and stable surface with the vehicle in gear, the parking/emergency brake on, and engine off.
6. Use as a loading ramp only.
7. Ramp surfaces must be clean, dry and free from oil, grease or water.
8. Maximum recommended height is 30 inches.
9. Inspect ramp before each use. Tighten any loose hardware. Replace any worn or damaged parts. Replace safety strap if webbing is frayed or worn. Do not attempt to use a ramp that is damaged in any way. No modification, alteration, or deviations to the ramp are authorized by the manufacturer. Proper care and maintenance of the ramp are essential to safety.
10. Proper use of this product is critical to safety. We neither guarantees nor is liable for any damage resulting from improper use. The liability of this product is limited to its purchase price if it proves to be defective in material and/or workmanship.



## Specifications

Rated Capacity	3000 lb.
Ramp Dimensions (unfolded)	90" x 12"

## Usage

### Step 1

Be sure you are loading on a hard, level and stable surface and that the vehicle you are loading into is parked with the emergency/parking brake in "Park" and the engine is "off". Unfold and place the lip of the ramp against the back of the vehicle.

### Step 2

Secure the ramp to the vehicle using the adjustable strap. After the strap is secure, test the ramp by pulling backwards on it. Make sure it does not slide back or disengage from the loading surface.

### Step 3

Once the ramp is secure and the area is safe to proceed with loading, move the vehicle to be loaded between the ramps and center the load between both ramps.

### Step 4

Proceed with loading the vehicle, making sure the ramp is sustaining the load and not bowing from weight.

### Step 5

Continue until the vehicle is fully loaded. Secure the brake and tie down as needed.

### Step 6

Unhook the adjustable strap and fold the ramp and lock into the folded position. Store in a clean, dry and safe place where damage will not occur.