

R e n t A C o o p[®]



MULTI-USE PET & BOUNDARY FENCING




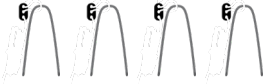
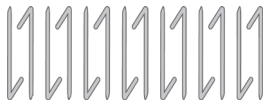
INSTRUCTION BOOKLET

TABLE OF CONTENTS

PACKAGE CONTENTS	2
INSTALLATION INSTRUCTIONS	3
FENCE POSTS & HOOK STAKES	4
U-SHAPED STAKES & GUYLINES	5
STORING THE FENCE	6
REPAIR KIT	7
CONTACT INFORMATION	8

v.21.11


PACKAGE CONTENTS

- 1x Instruction Booklet 
- 1x Roll of Netting with 13 built-in 13mm double-spike posts spaced 8 1/3' apart (color may vary)

- 1x Extra Post

- 4x U-Shaped Stakes with Guylines

- 14x Hook Stakes

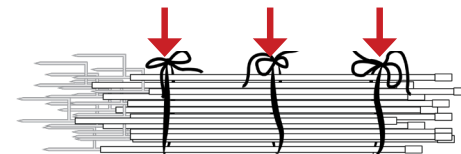- 1x Repair Kit (contents may vary based on fence model)


INSTALLATION INSTRUCTIONS

- 1 Decide on the “floor plan” of your fence. To the left are two examples of setups using one 100' roll of netting.
- 2 Take the bundle of netting out of the box.
- 3 Untie and remove the three ties from the bundle .


SAVE THE TIES




- 4 Unroll the bundle.

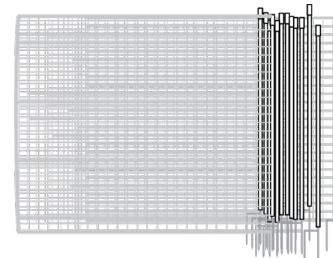

- 5 Unfold the netting as you lay out the approximate floor plan desired.

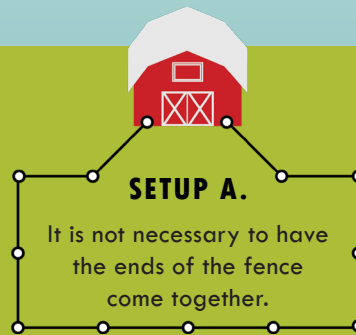


The metal clips do not need to be connected for the fence to work.

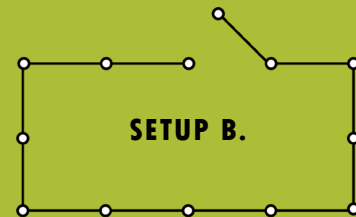


FENCE POSTS & HOOK STAKES


- 6 Stick the first post into the ground.
- 7 Place the remaining 12 posts of the fence in the shape you need, making sure the double-spike stakes are securely in the ground.

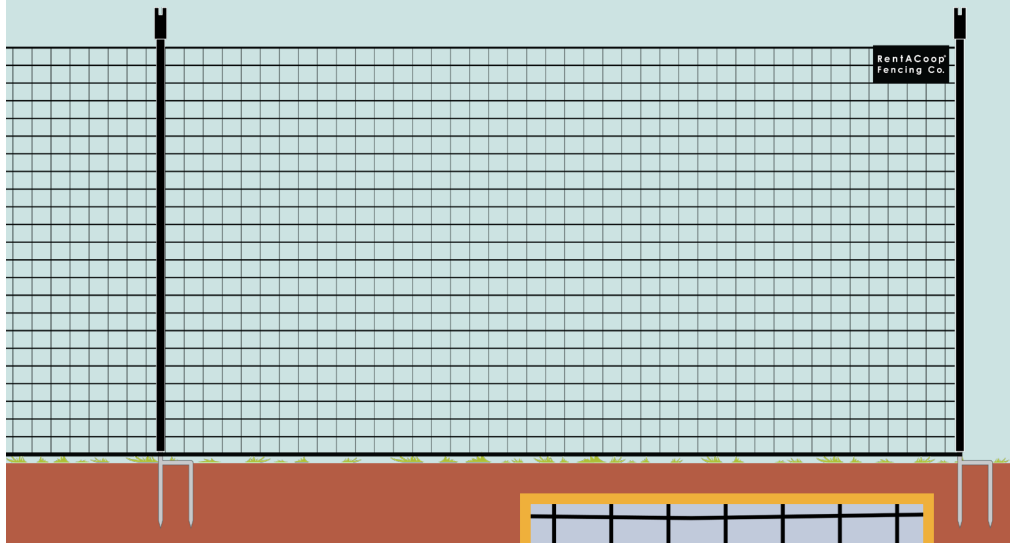


- 8 **OPTIONAL:** Secure the netting by placing hook stakes on the last bottom line of the netting.

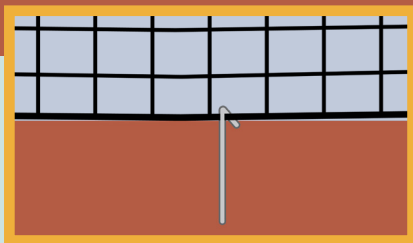


U-SHAPED STAKES & GUYLINES

- 9 Reinforce the fence using the provided U-shaped stakes and guylines. 

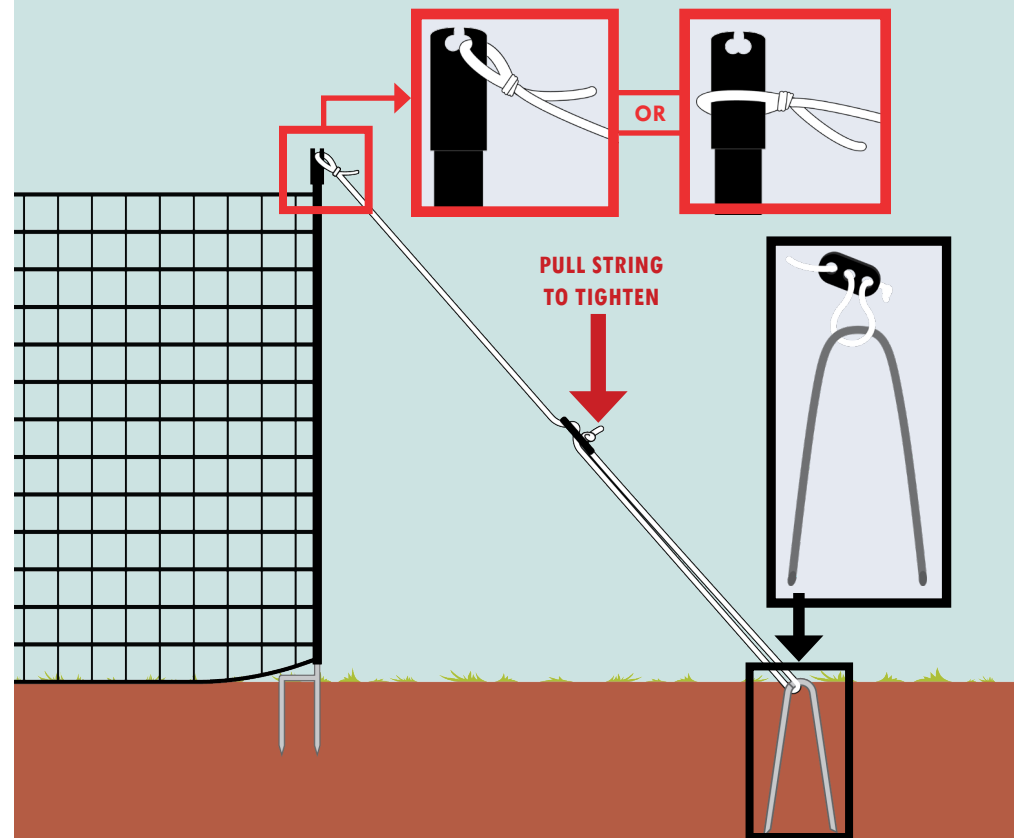


STORING THE FENCE


1

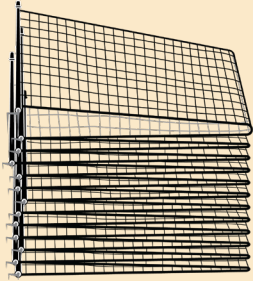

Start at one end of the fence and remove the post from the ground. As you continue to remove each posts, fold the fence into pleats like an accordion while grouping the posts together onto one side as shown in the diagram.

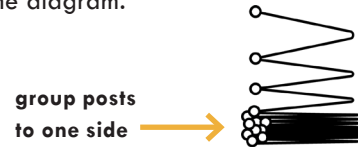


2

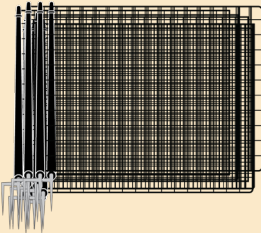

Lay the folded netting flat on the ground.

3

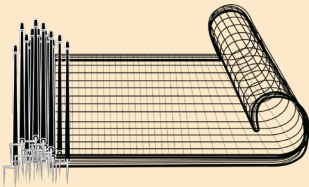


Starting at the end without the posts, roll the netting towards the posts. Tie the roll together using the three strings it came with.

REPAIR KIT


REPAIR KIT CONTENTS MAY VARY



rope
[non-electric wire]

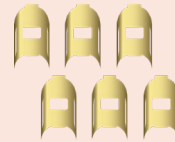

brass rope clamps

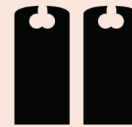

fence post caps



bottom-post wire connectors

Fixing Broken Wires:


1. Remove the damaged portion of the wire.
2. Measure out the replacement wire.
3. Tie one end to one side of the break with a reef knot and do the same for the other side of the break.



4. Place a brass rope clamp around each of the knots and clamp together with pliers.

Bottom-Post Wire Connectors:

1. Position the last, bottom wire between the space in the bottom-post wire connector.

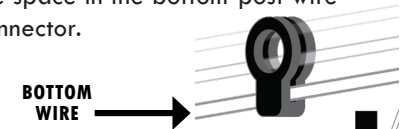

2. Insert the metal spike (the one located directly under the post) through the openings in the connector.





RentACoop®

QUESTIONS?

CONTACT OUR
EGG - SPERTS

info@rentacoop.com

1 800-642-3571

M-F 9-5 EST



@rentacoop #rentacoop