



OWNER'S MANUAL

RADIANT HEATER

11" | 1500 / 1250W



MODEL 1VAHW11

TECHNICAL DATA

Model: 1VAHW11

Voltage: 120V~ / 125 Amps

Watts: 1250 / 1500W

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual.
Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

CONTENTS

Safety Information	4-6
In The Box	7
Product Diagram	7-8
Instructions For Assembly	9
Instructions For Use	10
Maintenance.....	11

IMPORTANT NOTE:

Read the manual carefully. Make sure to save this manual for future reference.
Illustrations in this manual are for explanatory purposes only, your actual
product may look slightly different.

SAFETY GUIDELINES

 **WARNING:** Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in fire, electric shock, or serious personal injury.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read all the instructions before using this unit.
2. **CAUTION:** Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handle(s) when moving this heater. DO NOT place it against walls, furniture, curtains, etc.
4. The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
5. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
6. Extreme caution is necessary when any heater is used. DO NOT leave invalids or children unattended with an operating heater. DO NOT leave heaters unattended when in use.
7. Always unplug heater when not in use.
8. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped, or damaged in any manner. Discard damaged heater or return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
9. This heater is not intended for use in bathrooms, laundry areas, showers or swimming pools and similar locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.

SAFETY GUIDELINES

(Continued)

10. DO NOT touch the control panel or plug with a wet hand.
11. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
12. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
13. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
14. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
15. To avoid fire or shock hazard, plug the unit directly into a 120V AC electrical outlet.
16. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
17. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
18. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
19. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
20. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
21. Always use on a dry, level surface. Use on floor only.
22. DO NOT use outdoors.
23. **WARNING:** To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.

SAFETY GUIDELINES

(Continued)

24. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user service able parts.
25. Always use the product in an upright position.
26. This heater cannot achieve accurate temperature control of the environment, and thus cannot be used as insulation device for storage environment, items, animals and plants.
27. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

CAUTION: Always plug heaters directly into a wall outlet. Never use with an extension cord or power strip.

TIP-OVER SAFETY FEATURE

This heater is equipped with a shut-off safety feature. Once the heater is tipped over, an internal switch will automatically shut the heater off. Once the heater is restored to an upright position, the heater will reset.

OVERHEAT SAFETY FEATURE

This heater is equipped with an overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheating and possible fire, the heater will automatically shut off.

- A thermal overload protector is built in to prevent overheating. When an "overheat" temperature is reached, the heater will automatically shut off. Operation can resume only when the user resets the unit.
- To reset the unit, unplug the heater, ensure the power is turned off, and wait 15 to 20 minutes for the unit to cool down.
- Follow OPERATING INSTRUCTIONS to return heater to operating mode.

 
WARNING: It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

PRODUCT DIAGRAM


IN THE BOX

- Infrared Radiant Heater
- Owner's Manual
- Base Feet
- Screws (4 Pcs.) Screws are pre-assembled in the bottom of the unit

PRODUCT DIAGRAM

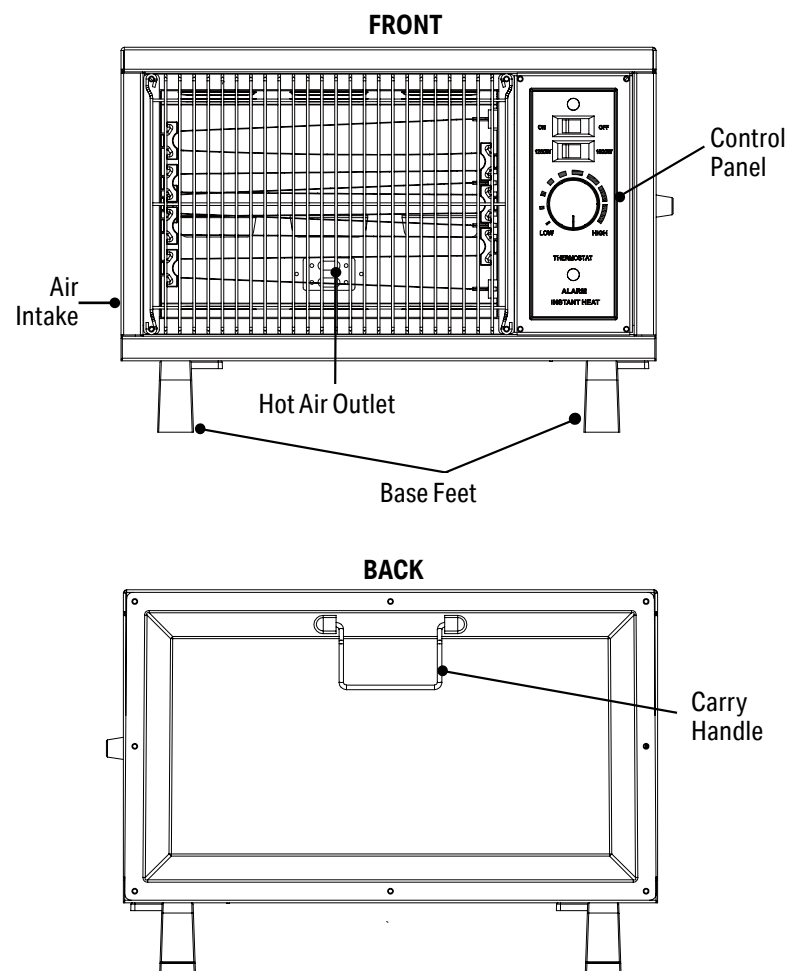

CONTROL PANEL

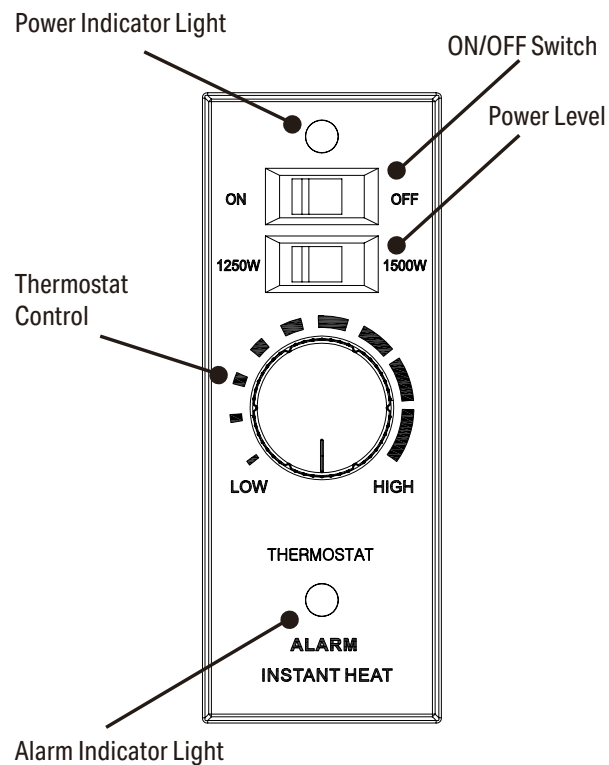 

To complete assembly, please follow these steps in order:

1. Place heater upside down.
2. Ensure Front of Heater and Front of Legs are in correct position. (Fig. 1)
3. Insert Base Feet into notches on bottom of heater. Slide toward front of heater until secure. (Fig. 2)
4. Use 2 screws to secure each leg. Ensure they are tightened securely. (Fig. 3)

NOTE: The heater cannot be operated without the feet attached. It is essential to ensure that the feet are securely fastened to the unit before turning it on.

Fig. 1

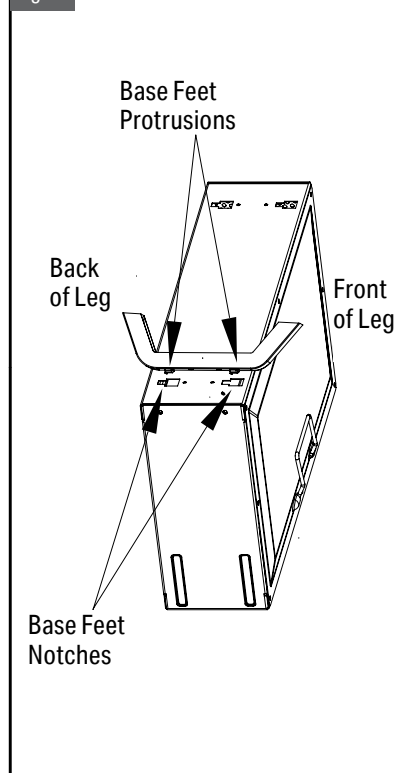 


Fig. 2


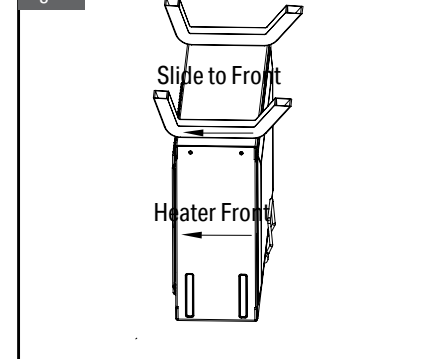 


Fig. 3

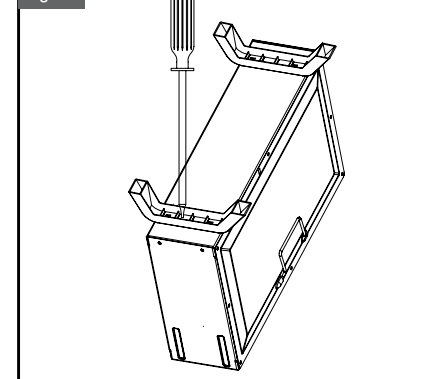 

INSTRUCTIONS FOR USE

NOTICE: When the heat function is used for the first time, a slight odor may be present. This is normal and should not occur again unless the heater is not used for an extended period of time.

1. Place the product on a flat, level surface, only in the upright position.
2. With the power in the OFF position, plug the unit directly into a 120V AC electrical outlet.
3. Turn ON the power switch at the front of the product.

STARTING UNIT AND SELECTING HEAT MODE

SWITCH ON PANEL	FUNCTION
	Turn the heater ON by pressing the HEAT ON/OFF button.
	Turn the heater OFF by pressing the HEAT ON/OFF button.
	Press the Mode button to toggle between the heat modes. HIGH Mode (1500W) LOW Mode (1250W)

SELECTING DESIRED TEMPERATURE

SWITCH ON PANEL	FUNCTION
	a. To lower temperature, rotate the Knob counter-clockwise toward the "LOW" position.
	b. To raise temperature, rotate the knob clockwise toward the "HIGH" position.

NOTE: After room has reached the desired temperature, slowly rotate the temperature knob counter-clockwise until the heater shuts off (you should hear a faint "click"). By leaving the thermostat at this setting it will automatically maintain this temperature.

NOTICE: Do not plug the heater into a circuit that is servicing other electrical needs.

MAINTENANCE

1. Turn the POWER OFF.
2. Unplug the unit and let it cool completely.
3. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary.
4. After cleaning, dry the unit with a soft cloth.
5. Wait until the unit is completely dry before use.

⚠ WARNING

- **DO NOT** let liquid enter the heater.
- **DO NOT** use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- **DO NOT** immerse the heater in water.
- **DO NOT** operate the heater without the grill in place.
- **DO NOT** use the heater if it has malfunctioned or become damaged in any way.

STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

TROUBLESHOOTING

If the heater will not operate, please check the following:

1. Check if the power cord is plugged into an electrical outlet. If not, plug in to appropriate outlet.
2. Check if electricity to the outlet is working.
3. Ensure power is turned to ON position.
4. Make sure heater is placed on a flat solid surface.
5. See SAFETY FEATURES section for additional information.

NOTICE: The product is equipped with an **overheat safety feature** protector which will switch off the heater in case of accidental over heating (*ex. Obstruction of air intake and outlet grills, motor turning slowly or not at all*).



4560 W. 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com
www.visionairproducts.com