

## WARRANTY DISCLAIMER

Pittman Outdoors warrants that for the period of one year from the date of original retail purchase, this product will be free from defects in material and workmanship. Pittman Outdoors, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

To receive a replacement product under Pittman Products International's 1 Year Warranty, you will need to:

- All returns must have a Returned Goods Authorization number (RGA). Every package must be clearly marked with the RGA number. RGA numbers are good for 30 days from the date of issuance. Products returned without viewable RGA numbers will be refused. No returns on special order, clearance or discounted items. Returned products are subject to a **20% Re-Box/Restocking fee**. Products must be properly packed to prevent shipping damage. All returned product must be shipped pre-paid. The cost of transporting the product to Pittman Products International for warranty service/replacement is the responsibility of the purchaser.
- Send entire product to Pittman Products International with a letter stating:
  - The nature of the problem with the product.
  - Your name, return shipping address and a daytime phone number.
- Send us a copy of the original sales receipt.
- This warranty is valid for the original retail purchaser from the date of the initial retail purchase and is not transferable.

The purchase date on the receipt must be within 1 Year of the date you ship the product to us. Please ship the product, letter and copy of receipt via courier (e.g. UPS, FedEx Ground) or Insured Post to:

Pittman Products International  
Attn: Returns  
650 South Jefferson Street, Suite D  
Placentia, California 92870

Pittman Products International is not responsible for returned shipments lost in transit. You are encouraged to use a shipment system that offers you a tracking number. Please allow 6 to 8 weeks for replacement. Customer is responsible for all return shipping costs.

**YOUR RIGHT UNDER STATE LAW:** This warranty gives you specific rights and you may also have other rights, which vary from state to state.

© 2024 Pittman Products International  
All rights reserved.

Made in China.

Our Customer Service Department is available Monday - Friday, 9 AM to 4 PM Pacific Standard Time, to answer any questions you may have about your new Pittman Outdoors product please call us toll free at 1 (800) 981-2339. U.S.A. or 1 (657) 275-9100 outside U.S.A. We can also be reached at [customerservice@pittmanoutdoors.com](mailto:customerservice@pittmanoutdoors.com)

[www.pittmanoutdoors.com](http://www.pittmanoutdoors.com)

Model# PPI-HEAT\_CHR



## HEATED CAMPING CHAIR OWNER'S MANUAL



Chair Dimensions:  
26.77" (L) x 25.98" (W) x 40.55" (H)

**WARNING:** THIS PRODUCT IS NOT FLAME RESISTANT. DO NOT PLACE THIS PRODUCT NEAR OPEN FLAME OR OTHER SOURCE OF IGNITION.

**PLEASE NOTE:** A USB POWER BANK IS NOT INCLUDED!

- The chair is an electrical device. Do not use in or around water.
- Do not attempt to disassemble, repair, or service this product. No serviceable parts are contained inside. Contact Pittman Products International at 650 South Jefferson Street, Suite D Placentia, California 92870 for service or repair. Call: 1-800-931-2339 U.S.A. - 1 (657) 275-9100 outside U.S.A. Email: customerservice@pittmanoutdoors.com

**WARNING:**

- Maximum load for this chair is 400 lbs. (181 KGS). Do not exceed the maximum weight capacity. Overloading the chair may cause structural damage and compromise its stability, leading to potential injury.
- Ensure that the chair is fully unfolded and locked into place before sitting. Sitting on a partially unfolded chair can cause it to collapse unexpectedly. Do not lean back excessively, doing so may cause it to lose balance and collapse, posing a risk of injury.
- Watch hands and fingers during unfolding/folding as pinching hazards may occur.
- Avoid placing the chair on uneven or unstable surfaces. Uneven terrain can cause the chair to tip over, leading to potential injury.
- Regularly inspect the chair for signs of wear and tear. Discontinue use of this chair if the stitching or the side braces are not securely sewn.
- This product is not fireproof. Keep it away from fire and heat sources.

 **WARNING: Cancer and Reproductive Harm-**  
[www.p65Warnings.ca.gov](http://www.p65Warnings.ca.gov)

## FEATURES

### DUAL HEATING ZONES

Heating elements in both the backrest and seat keep you warm during cold weather outings.

### 3 HEAT SETTINGS

Low, Medium and High heat settings allow you to easily personalize your comfort and heat level with a simple push of a button.

### USB-POWERED

Works with any USB power pack. (USB power pack not included)

### DURABLE WEATHER-RESISTANT MATERIALS

Manufactured from a durable, easy to clean, weather-resistant 600D Polyester making it ideal for year-round use.

### PORTABLE AND LIGHTWEIGHT

Easy to transport and set up which makes it convenient for travel or any outdoor adventure. Carrying bag included.

### HEAVY-DUTY

Constructed with a sturdy, powder-coated steel frame that can support up to 400 lbs.

### VERSATILE USE

Perfect for various outdoor activities such as camping, fishing, tailgating or watching sports.

## OPERATING INSTRUCTIONS


### TO UNFOLD THE CHAIR

While holding the chair in an upright position, place one hand on the backrest and the other hand on an armrest. Push down on the armrest while holding the backrest upright. Ensure that the chair is completely unfolded and locked into place before sitting.

### HOW TO USE HEATING ELEMENT

Open the pouch located on the side of the chair. Inside you will find a USB cable that you can plug into your 5V USB power bank (not included). Once plugged in, place the power bank into the pouch. Your chair is now ready to use.

Press and hold the POWER button for 3 seconds to turn the heating element on. The button will light up RED indicating the HIGH Setting. Press the button again, the button will light up Blue indicating the MEDIUM Setting. Press the button one more time, the button will light up GREEN indicating the LOW Setting. Press and hold the button for 3 seconds to power off the chair.

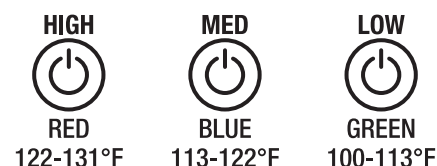

### TO FOLD THE CHAIR

BEFORE FOLDING THE CHAIR, DISCONNECT AND REMOVE THE POWER BANK FROM THE POUCH. Pull up equally on both of the armrests and gently bring them towards the center. Once the chair is fully collapsed, place the chair feet first into the carrying bag.

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. Interference can be determined by turning this product off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced Radio/TV technician for assistance.

### SCAN TO SEE MORE!

