

 


# RedStone Oil Filled Heater

## OWNER'S MANUAL

Model No. SH36-7

SKU No. 2520698

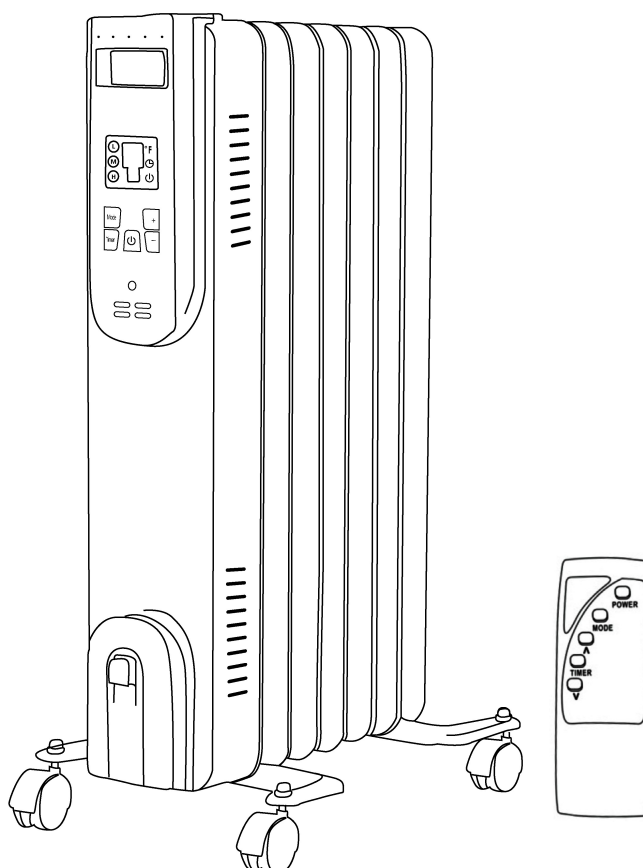

**PLEASE SAVE THESE INSTRUCTIONS**

**WARNING: READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE.**

---

Thank you for choosing our Electric Oil Heater. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

---

**PLEASE SAVE THESE INSTRUCTIONS**

# **IMPORTANT SAFETY INSTRUCTIONS**

## **READ AND UNDERSTAND ALL INSTRUCTIONS,** **SAFETY WARNINGS, BEFORE USING THE** **HEATER**



**WARNING!**



### **! POTENTIAL FOR ELECTRICAL HAZARD IF NOT ADHERED TO!**

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs,

- runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
  11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
  12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
  13. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
  14. To avoid fire or shock hazard, plug the unit directly into a 120 V AC electrical outlet.
  15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
  16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
  17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
  18. Always use on a dry, level surface. Use on floor only.
  19. DO NOT use outdoors.
  20. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
  21. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
  22. CAUTION: To prevent electric shock, match wide blade of plug to wide slot and fully insert.
  23. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
  24. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

## **SAVE THESE INSTRUCTIONS**

## SPECIFICATIONS

|                   |                                              |
|-------------------|----------------------------------------------|
| Voltage Rating    | 120 V (60Hz)                                 |
| Power Consumption | 1500W                                        |
| Unit Size         | 13.78 in. (L) × 9.84 in. (W) × 23.62 in. (H) |

 
## SAFETY FEATURES

### Tip-Over Safety Feature

This heater is equipped with a tip-over safety feature. Once the heater is tipped over, an internal switch will automatically shut the heater off. Once the heater is restored to an upright position, the heater will reset. To continue operation, turn on the heater using the supplied remote control or the control panel on the heater.

### Overheat Safety Feature

This heater is equipped with an overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheating and possible fire, the heater will automatically shut off.

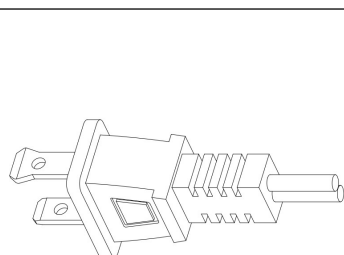

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.


**WARNING:** It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

---



## IN THE BOX

 - OIL HEATING SYSTEM
  - REMOTE CONTROL (2 AAA BATTERIES INCLUDED)
  - INSTRUCTION BOOKLET
- 

## PRODUCT DIAGRAM

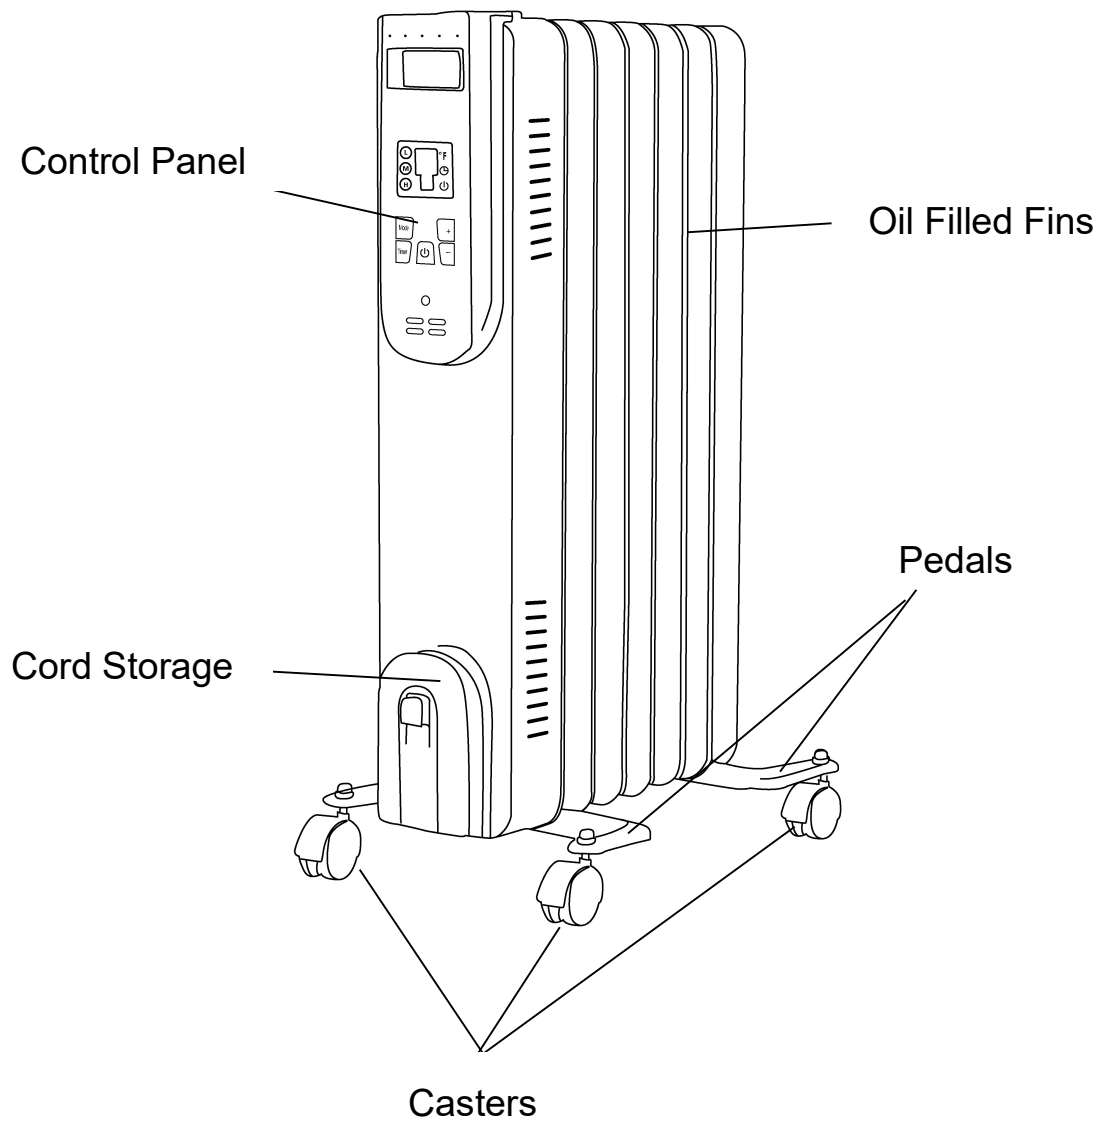

## CONTROL PANEL BUTTONS / DISPLAY

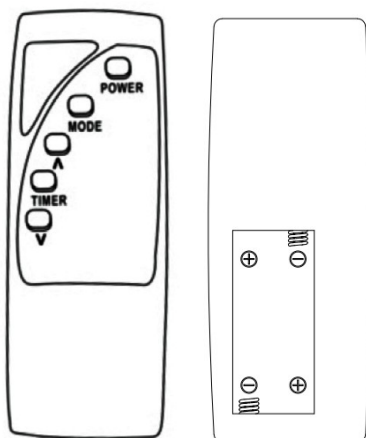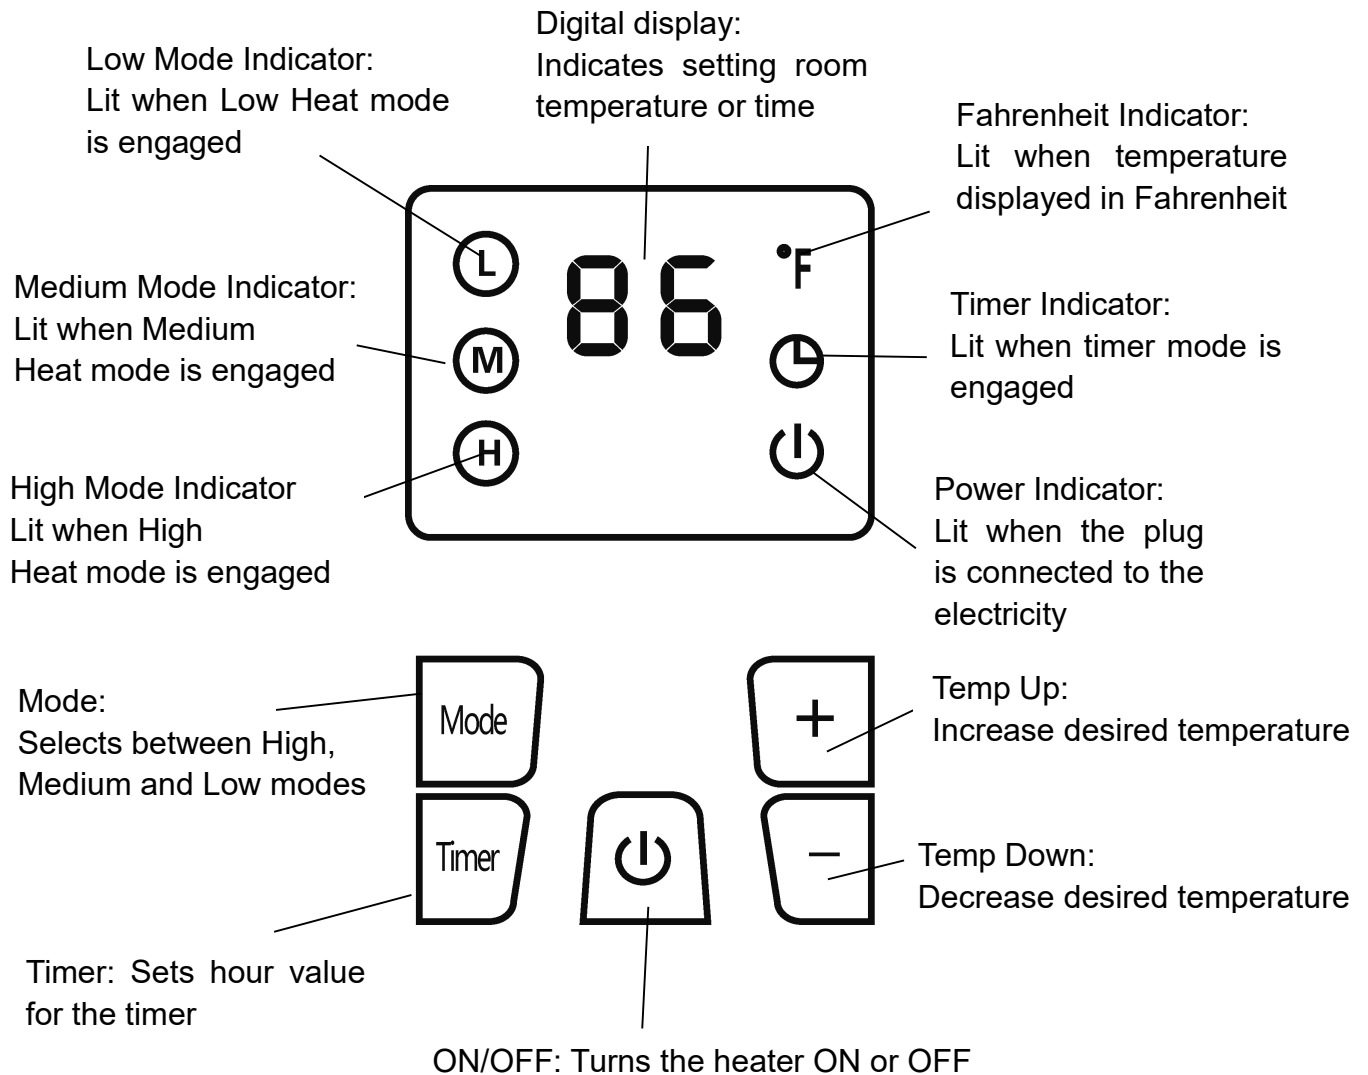  

| REMOTE CONTROL INSTRUCTION |                                       |
|----------------------------|---------------------------------------|
| <b>Power</b>               | Turns the heater ON or OFF.           |
| <b>Mode</b>                | Selects between LOW, MED, HIGH modes. |
| <b>^</b>                   | Increases desired temperature.        |
| <b>v</b>                   | Decreases desired temperature.        |
| <b>Timer</b>               | Sets hour value for the timer.        |

## Inserting and Changing the Battery

The remote control requires 2x AAA batteries (included).

1. Turn the remote control over.
2. Pull the battery cover out from the remote control.
3. The battery compartment is now visible.
4. Insert a battery into the battery compartment. Make sure the polarity is correct. If you are replacing the battery, take the old battery out of the battery compartment before inserting the new one. Dispose of the old battery in accordance with applicable regulations. Do not put your used batteries with your household rubbish. Take them to an appropriate disposal or collection site.
5. Slide the battery cover back into the remote control so that it locks into place.

**NOTICE:** If the remote control is not responsive or not working, the battery power may be low. Replace the battery following the above process.

 
**WARNING: KEEP** new and used batteries OUT OF REACH of CHILDREN.

Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

**Do NOT** dispose of batteries in household trash or incinerate.


If you do not use the heater for a long time, remove batteries from the remote (to prevent corrosion) as shown below. Store the remote in a safe place.

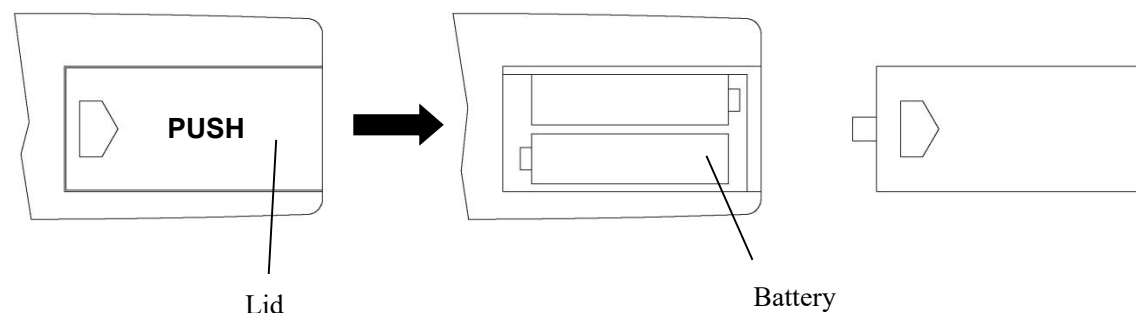

## INSTRUCTIONS FOR ASSEMBLY

Before initial use some assembly is required. Attach casters to heater body using components provided as shown in below.

 1. Turn the heater (A) upside down. Remove the wing nut (E) from the straight tip of each U-bolt (B). Hook one U-bolt under the heater base between the heater control box and the next fin.
2. Align a pedal (D) with the U-bolt tips. Insert the bent tip through one of the pedal bolt holes. Insert the straight tip through the other hole. Use the removed wing nut to secure the straight tip to the pedal.
3. Hook the other U-bolt under the heater base between the last two fins. Attach pedal in same manner as described in previous step.
4. Remove the nuts (C) preassembled to the casters (F). Insert the caster stems through the caster holes in the pedals. Use the removed nuts to secure the casters to the pedals. Turn the heater upright.

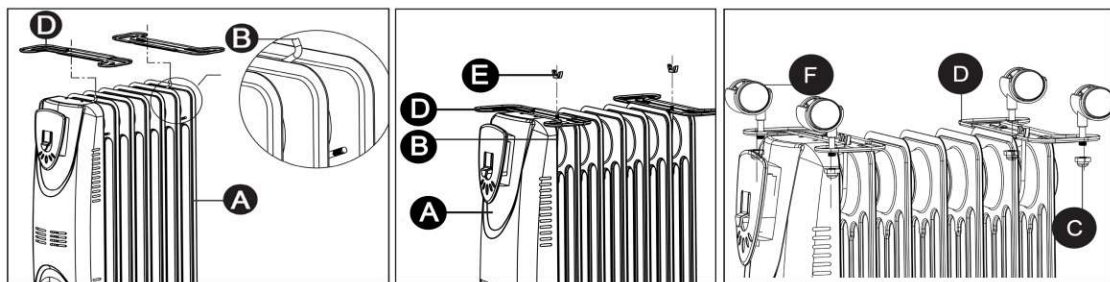

## OPERATING YOUR OIL RADIATOR

Place the heater on the floor at least 90cm away from the wall and any other objects such as furniture. Curtains or plants. Make sure the power supply used corresponds to the one on the rating label. Plug the heater into the main power supply.

### STARTING UNIT AND SELECTING HEAT MODE

| UNIT                                                                                | FUNCTION                                                         |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------|
|  | 1. Turn the heater ON by pressing the ON/OFF button.             |
|  | 2. Press the Mode button to toggle between the three heat modes. |

| Modes  |                                                                                   |                            |
|--------|-----------------------------------------------------------------------------------|----------------------------|
| High   |  | High Heat Mode uses 1500W  |
| Medium |  | Medium Heat Mode uses 900W |
| Low    |  | Low Heat Mode uses 600W    |

 
**NOTICE:** When the heat function is used for the first time, a slight odor may be present. This is normal and should not occur again unless the heater is not used for an extended period of time. It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to change the thermostat setting.

## SELECTION DESIRED TEMPERATURE

| UNIT                                                                                | FUNCTION                                                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>+ -</b>                                                                          | 1. Set the temperature by pressing the + or - button.                                                                                                                                                                                                                    |
|  | 2. Set temperature indication varies from 59°F to 95°F.<br><b>NOTE:</b> Once the temperature has been set, the heater will remain on until the room temperature increases to the set temperature. The heater will cycle ON and OFF to maintain the set room temperature. |


## SETTING POWER OFF TIMER FUNCTION

**NOTICE:** The Power-OFF-Timer Function will allow for the heater to power OFF after a certain set time, and can only be set while the heater's display is in the ON position.
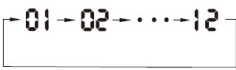
| UNIT                                                                                                                                                                | FUNCTION                                                                                                                                                                                                                                                                                            |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | 1. Turn the heater to the "ON" position.<br>2. Press the Timer button on the heater's control panel or the remote.                                                                                                                                                                                  |
|                                                                                    | 3. The digital display changes from the "temperature" to the "hours" option for the timer. Continue to press the timer button to change the number of hours you would like the heater to run before powering itself off. The hour options for the timer are from 0 to 12 hrs. (in 1 hr increments). |

## SETTING POWER ON TIMER FUNCTION

 **NOTICE:** The Power-ON-Timer Function will allow for the heater to power ON after a certain set time, and can only be set while the heater's display is in the OFF position.
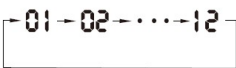
| UNIT                                                                                                                                                                    | FUNCTION                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | 1. Turn the heater to the "OFF" position .<br>2. Press the Timer button on the heater's control panel or the remote.                                                                                                                                                                        |
|                                                                                      | 3. The digital display shows the "00" option for the timer. Continue to press the timer button to change the number of hours you would like the heater's internal clock to count down before powering itself on. The hour options for the timer are from 0 to 12 hrs. (in 1 hr increments). |

---

## MAINTENANCE

1. Turn off the the heater.
2. Unplug the unit and let it cool completely.
3. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. CAUTION: DO NOT let liquid enter the heater.

4. DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
5. DO NOT immerse the heater in water.
6. Wait until the unit is completely dry before use.

---

## **TROUBLE SHOOTING**

If the heater will not operate, please check the following before seeking repair of service:

1. Check if the power cord is plugged into an electrical outlet, if not, plug in.
2. Check if electricity to the main fuse is working.
3. Overheat protection function may have been triggered. Try to press the power button, if the heater does not turn on, clear any obstructions from front and rear of heater that may have caused internal overheating. To restart the heater, unplug it to cool for 5-15 minutes, then plug in again. Make sure the obstruction has been removed before restarting.

---

## **STORAGE**

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

Distributed by:

TRACTOR SUPPLY COMPANY

5401 VIRGINIA WAY

BRENTWOOD, TN 37027

For customer support,

call: 1-888-376-9601

[www.TractorSupply.com](http://www.TractorSupply.com)

MADE IN VIETNAM