

7. MAINTENANCE AND STORAGE

1. For storage, the product shall be stored in a cool, dry and dust-free place, to avoid direct sunlight and rain.
2. During the transportation, loading and unloading of the product, it is prohibited to cast, drop, throw, trample and perform other barbaric operations on the product.

8. WARRANTY

Twelve (12) months for workmanship of the product, except for wearing parts. Warranty period starts from the product purchase date. Warranty covers material quality and workmanship only.

Warranty does not cover product for issues caused by improper usage or any operation not in accordance with the specifications of this manual. Any modification or tampering with the product in any way voids the warranty.

9. TROUBLE SHOOTING

Problem(s)	Possible Cause	Corrective Action
Power dolly do not works.	1. Power shut down.	1. Check the battery status make sure it in full . 2. Check the power switch in power on status. 3. Check the connect cable without loose.
Power dolly stop during working.	1. Batteries in low. 2. Power dolly overloaded.	1. Recharge the power dolly in full. 2. Reduce the loading weight with the capacity and re-start.

10. EXPLODED AND PARTS LIST

