 


**Kid Trax**  
**Owner's Manual**  
 Age: 3 Years  
 Weight max: 66lbs (30kg)  
 Max speed: 2.5MPH  
 Battery: 12 volt

**Zero-Turn Mower**

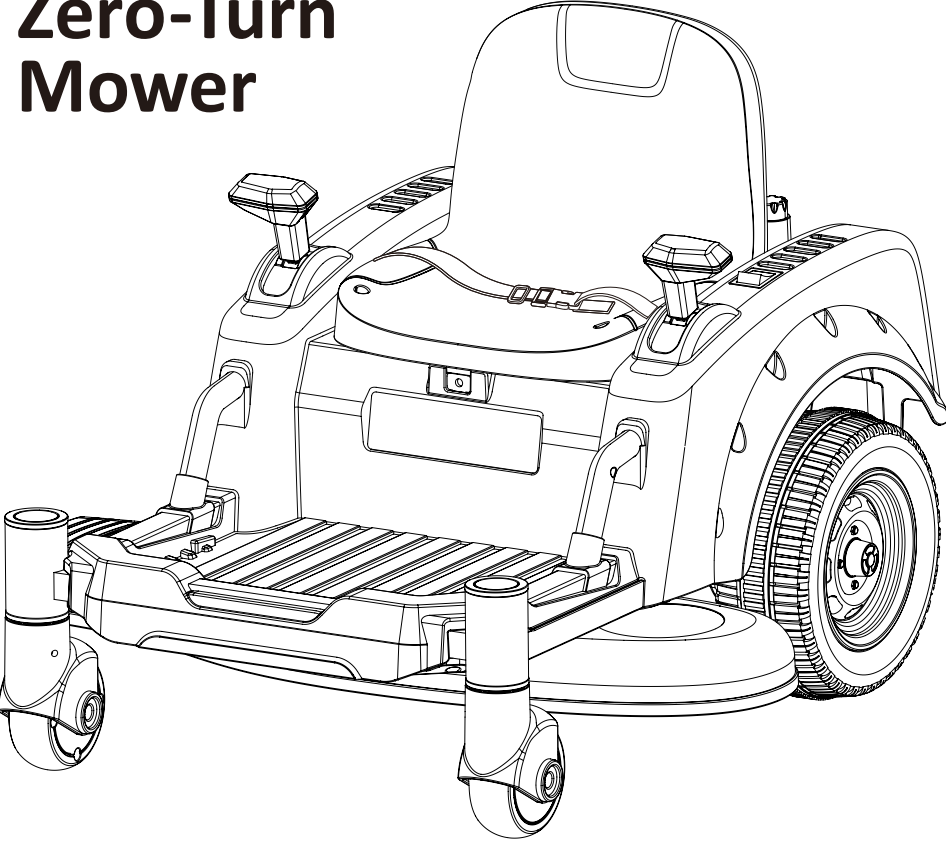

**WARNING**  
 This manual contains important safety and use information. Keep this manual for future reference.  
 • An adult must read this entire manual.  
 • Adult supervision is required at all times.

**Safety**

**WARNING**  
**FAILURE TO FOLLOW THE SAFETY INSTRUCTIONS LISTED BELOW MAY RESULT IN SERIOUS INJURY OR DEATH.**  
 The owner's manual contains assembly, use and maintenance instructions.

**Child Safety Warnings**

- Adults supervising children must read and understand this entire manual before allowing any child to use this product.
- Adults must evaluate their own children as to maturity, strength, judgment and ability to follow safety rules. Published age guidelines are not a substitute for careful evaluation of your own child.
- Adults must teach children about thinking ahead while riding as this may be the first time a child has ever controlled a motorized ride-on toy. While you supervise, see through the child's eyes, and verbally teach them about steering and avoiding obstacles in the approved riding area.
- Riding a motorized ride-on toy can be a dangerous activity, even under the best of circumstances. Good choices regarding where and when to ride, constant adult supervision of riding, and practicing careful riding by the child can all help to minimize risk. However this ride-on toy is intended to move and therefore it is possible for the rider to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate.
- If this inherent risk is not acceptable, adults should not allow children to ride this ride-on toy.

**WARNING**  
**To reduce the risk of injury, adult supervision is required.**

- Safe Riding Warnings**
- Not to be used by children under three (3) years of age or children over seven (7) years of age.
  - Do not exceed the maximum weight capacity of 66 lbs (30kg).
  - Do not allow more than one (1) rider.
  - Always instruct all children of correct sense rules and safe practices.
  - Be aware that flat, hard surfaces provide the safest experience for child riders.
  - Do not allow the child rider to operate the ride-on toy near streets, roads, sidewalks, walkways, or any other place where they may encounter other moving vehicles.
  - Never leave children unattended with this ride-on toy. Continuous adult supervision is required.
  - If necessary, adults and supervisors are always responsible for setting up gates and barriers to ensure a safe riding environment for the child rider.
  - Be aware that this ride-on toy does not have braking capabilities. Allowing use of this ride-on toy in areas that require braking may cause rolls, crashes, serious injury, or death to the child rider.
  - Teach children not to allow other children to use this ride-on toy. Communicate this message to other adults and supervisors of fellow children with which your child interacts.
  - Steerily alert children that hands, legs, hair, and clothing can potentially get caught in moving parts. Ensure they never place a body part or piece of clothing near a moving part of the ride-on toy. Avoid loose clothing.
  - Instruct children to always wear shoes when using the ride-on toy.
  - Confirm that children do not have access to the charging equipment or come into contact with any part of the ride-on toy while it is charging.
  - Do not mix old and new batteries.
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
  - Firmly instruct children to use the ride-on toy in a safe manner. Unsafe behaviors include, but are not limited to:
    - Traveling at unsafe speeds.
    - Not riding in the seated position.
    - Riding at night or in any conditions of low visibility.
    - Riding in any wet conditions including rain, snow, and ice.
    - Any kind of stunt riding: jumps, ramps, stairs, hills, tilted surfaces, or other actions involving any notable risk.
    - Any kind of off-road riding: rough terrain, dirt, mud, gravel, or any others that involve notable risk.
    - Riding near any pool or open body of water.
    - Pushing, pulling, or showing the driver in any way while operating the ride-on toy.
    - Using the ride-on toy without the battery cover or any other safety cover fully closed.
    - Pulling or hitching the ride-on toy with other similar moving ride-on toys or products.

**WARNING**

**Battery and Charging Warnings**  
 The following safety hazards may result in serious injury or death to the user of the ride-on:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium batteries).
- Contact between the positive and negative terminals may result in fire or explosion. Avoid direct contact between the terminals. Lifting the battery by the wires or charger can cause damage to the battery and may result in a fire. Always lift the battery by its case or handles.
- Plug will charge directly into a wall outlet. Do not use an extension cord when charging as the use of an extension cord can cause a fire.
- Corrosive Material Warnings
  - Battery posts, terminals and related accessories contain lead and lead compounds (acid) chemicals and are toxic and corrosive. Never open the battery.
  - Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs with the skin or in the eyes, or if the chemical is swallowed, immediately call 911.
- Flammable and Explosive Materials Warnings
  - Use of a battery or charger other than the supplied rechargeable battery and charger may cause a fire or explosion. Only use the supplied rechargeable battery and charger with the ride-on toy.
  - Do not charge the battery near heat or flammable materials.
  - Using the rechargeable battery and charger for any other product may result in overheating, fire or explosion. Never use the rechargeable battery and charger with another product.
- Electric Shock / Fire Warnings
  - Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry.
  - Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring, circuitry in the charger may cause electric shock. Always keep the charger housing closed.
  - Regularly check charger, supply cord and connector for wear and damage. Look for frayed or knined wires, any exposed inner wires, any missing insulation. If any damage is observed do not plug in the charger and do not charge the battery.

**CAUTION**

**Re-Charge Interval and Time Important!**  
 Damage to the battery may occur if it is allowed to drain completely. Do not allow the battery to drain completely.

- Check the battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred. Do not use an extension cord when charging the ride-on toy.
- On average you will need to charge the battery for 12 hours. Failure to charge the battery as directed could cause permanent damage to the battery and void the warranty.
- Only an adult who has read and understands the safety warnings should handle, charge and recharge the battery.

**Product Warning**  
**WARNING**  
 This product can expose you to chemicals including lead, and lead compounds which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

**Assembly Warnings**

- The ride-on toy must be assembled by an adult who has read and understands the instructions in this manual.
- Choking hazard to children under the age of 3 years. This ride-on toy contains small parts that are for adult assembly only. Keep small children away when assembling.
- Remove and dispose of all protective materials, plastic bags and packaging before assembly.


If you are unsure of any information in this manual or have a question regarding assembly or use please call customer service at 877-741-6154. Always keep this manual for reference and include it with resale of the ride-on toy.

**Pre-ride Safety Checklist**


- To be performed by a supervising adult**  
 Before every ride, it is important to carry out the following safety checks. Do not ride a battery-powered ride-on toy that is not in proper working condition! Replace any worn or broken parts as needed.
- Steering and Control**
- The steering wheel or handlebars are tightened and secured in the mount or dashboard.
  - The steering wheel or handlebars are positioned so that the rider can easily operate and steer the ride-on. There must be no difficulty for the rider in turning and/or operating the powered foot pedal or hand operated push button.
  - The steering wheel or handlebars are aligned so that the steering column and front wheels are oriented in the same direction.
- Wheels**
- The wheels are securely attached to the battery-powered ride-on and they are in good condition. It is acceptable to have slight lateral movement in each wheel.
  - The wheels have no holes or are not worn down in any one area and that the traction strips are intact and secured to the wheels.
  - The drive wheel is securely fastened to the gear box, which houses the motor.
- Ride-on**
- For all electrical components, make sure:
    - The battery is fully charged.
    - The charging cord is NOT attached to the ride-on in any way.
    - All connectors are securely snapped in place and will not come detached while riding.
    - No wiring is exposed, worn, or detached in any way, the motor is not hot to touch.
  - All electrical buttons, including the power button, accelerator foot pedal or hand operated button, and any buttons for lights and sounds, work properly.
  - If the ride-on's electrical components show any sign of damage or missing parts DO NOT RIDE until the condition is corrected.
- Make sure the ride-on is:**
- Clean, dry, and in good condition.
  - All plastic pieces, including fenders, seat, footrests, steering wheel or handlebars, wheels, bumpers, and/or hub caps are securely attached.
  - There are no cracks or structural problems on the ride-on toy.
  - If the ride-on toy shows any sign of damage or missing parts DO NOT RIDE it until the condition is corrected.
- Make sure all safety labels are in place and readable, and understood by the rider.**

**Parts Checklist**


Part name	Qty
A Seat	1
B Seat screws(Attached to seat)	2
C Anti-tipping bracket	2
D Rear wheel	2
E Washer(Attached to rear axle)	2
F Nut (Attached to rear axle)	2
G Hub cap	2
H Screw	2
I Spare/wheel	8
J Grass mower accessories	1
K Rear axle	1
L Washer(Attached to mower)	2
M Nut (Attached to mower)	2
N Front support cover of the universal wheel (Attached to the rear axle)	2
O Charger	1
P Socket wrench	2
Q Screwdriver	1

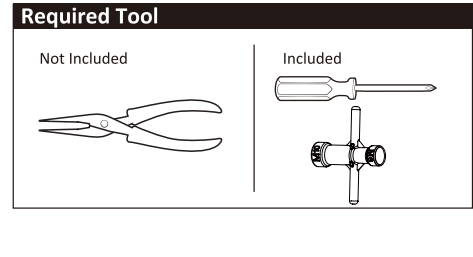


**Parts** Before you begin assembling, check that all parts listed are present.

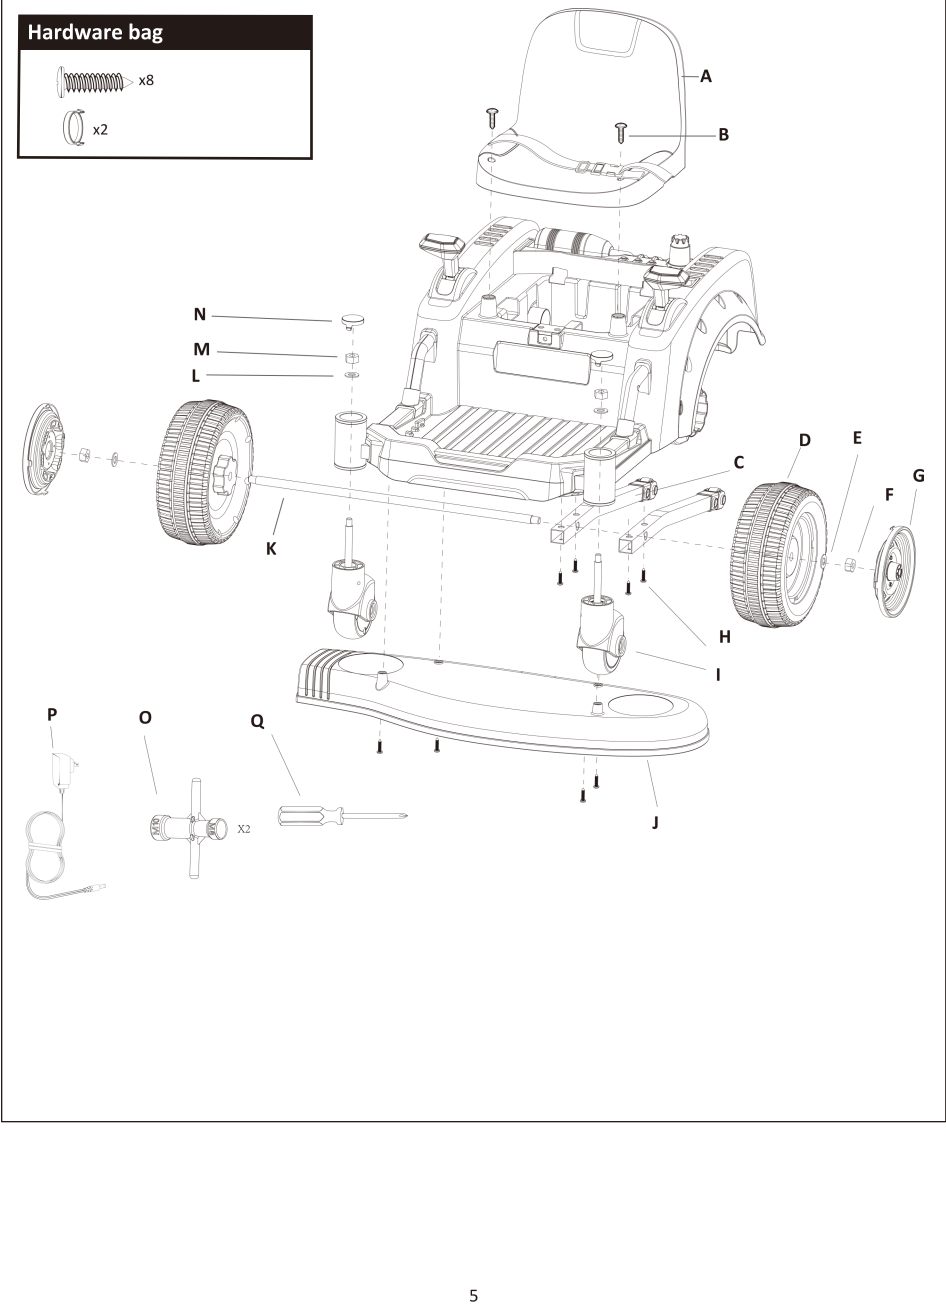


**Assembly** Follow the assembly steps in the order listed below.

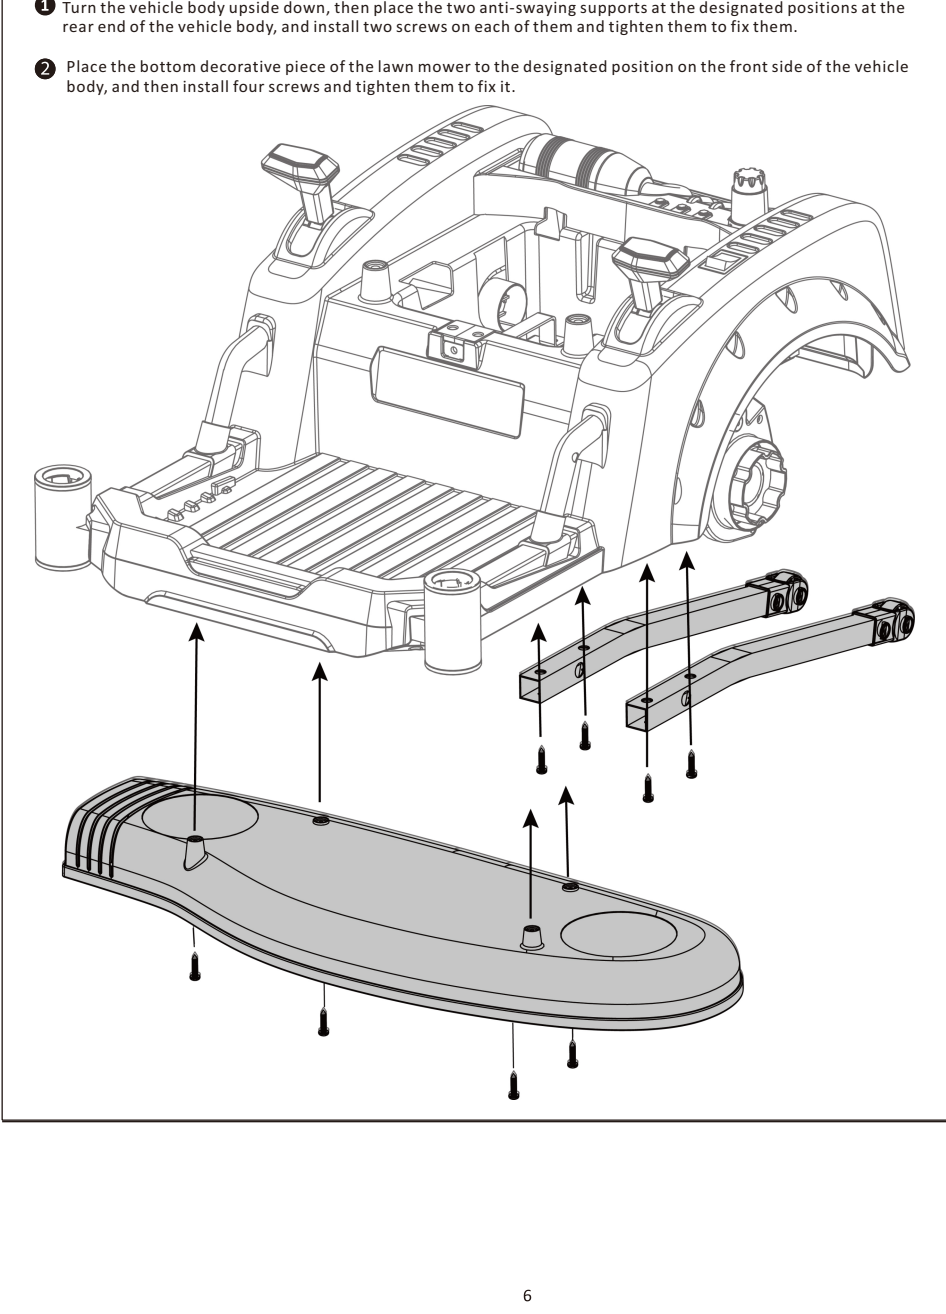


**Assembly** Follow the assembly steps in the order listed below.

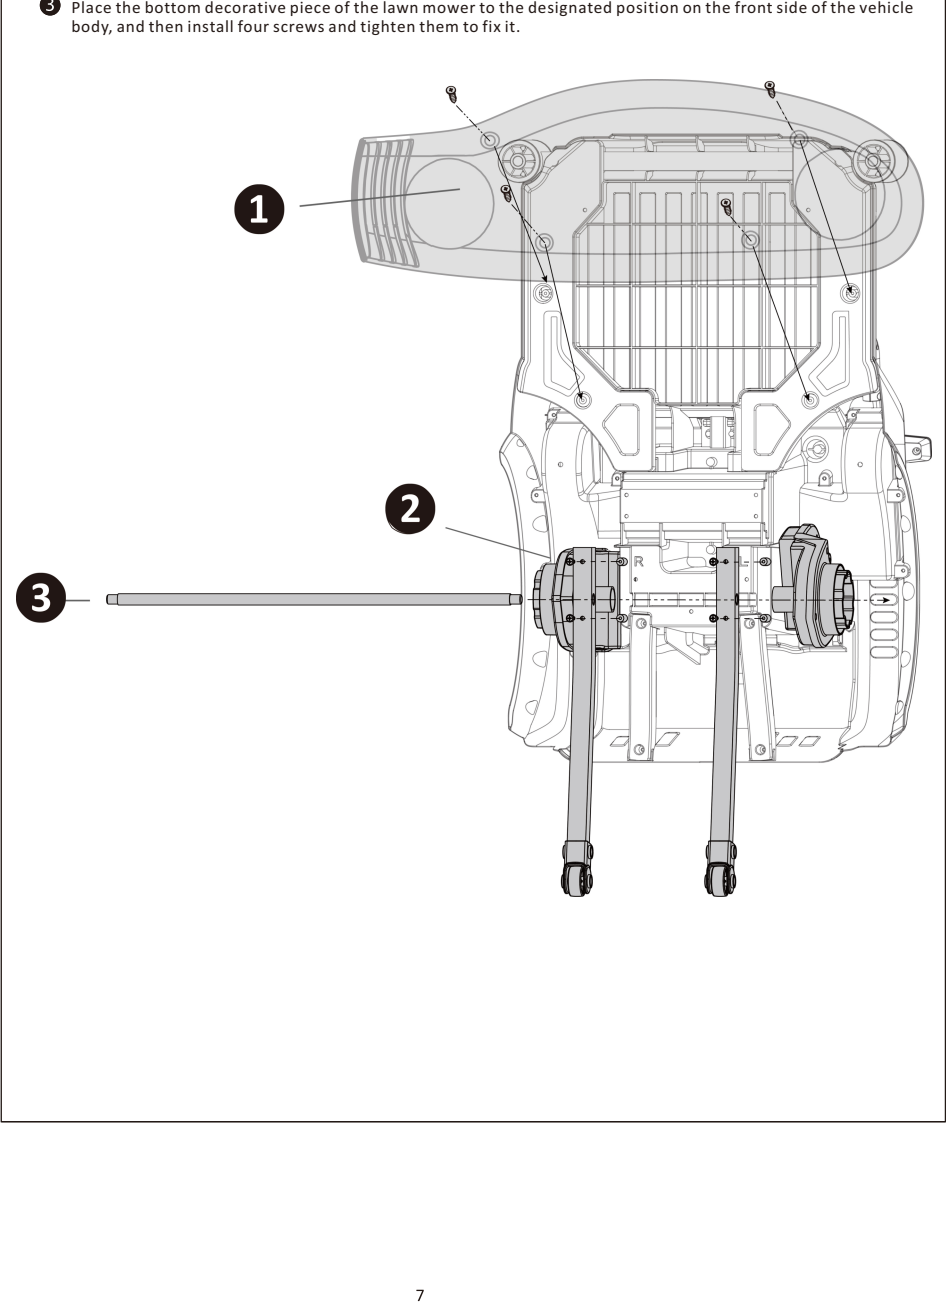

 
**Assembly** Follow the assembly steps in the order listed below.

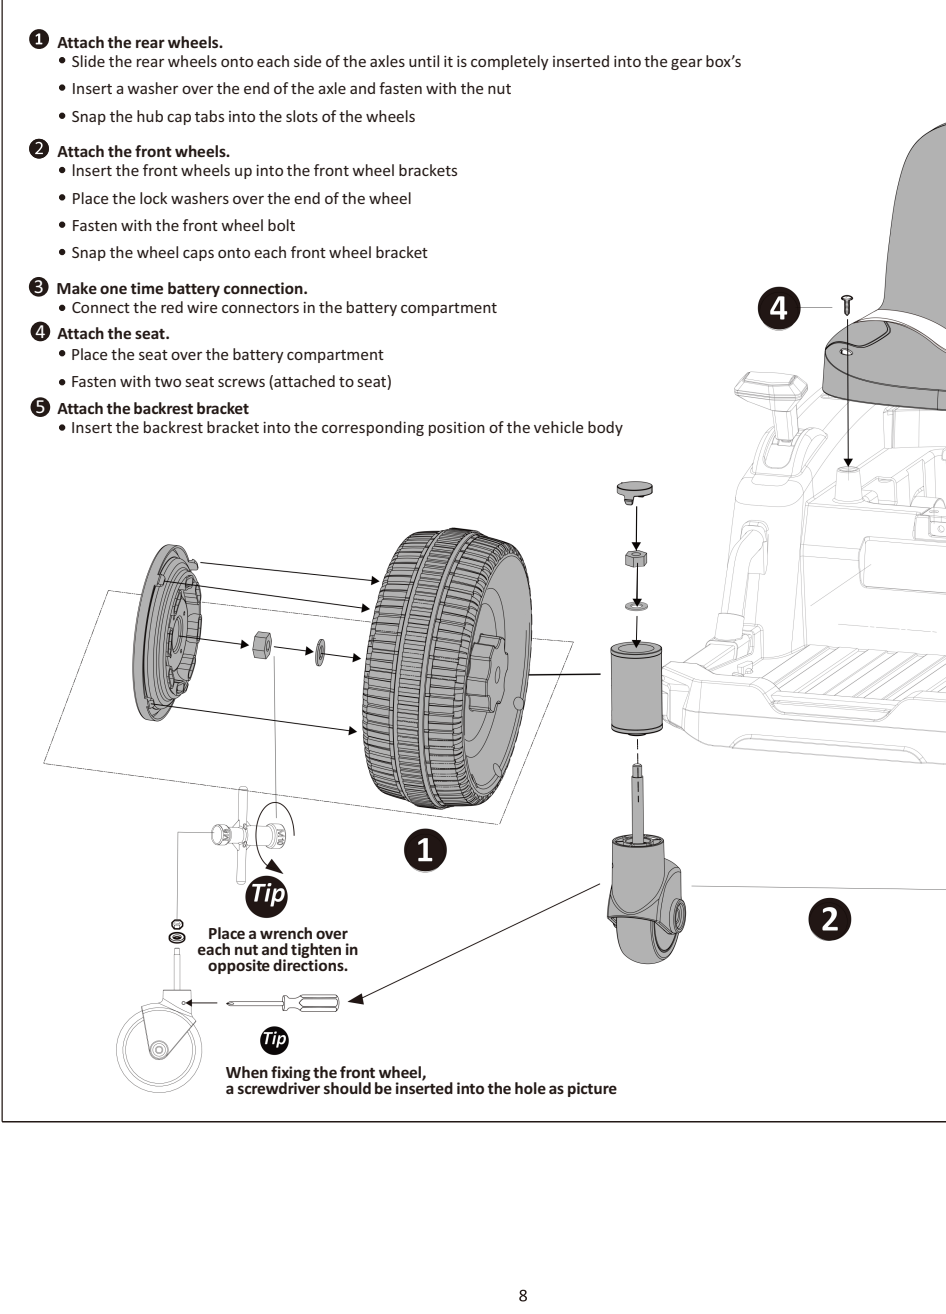


**Use**

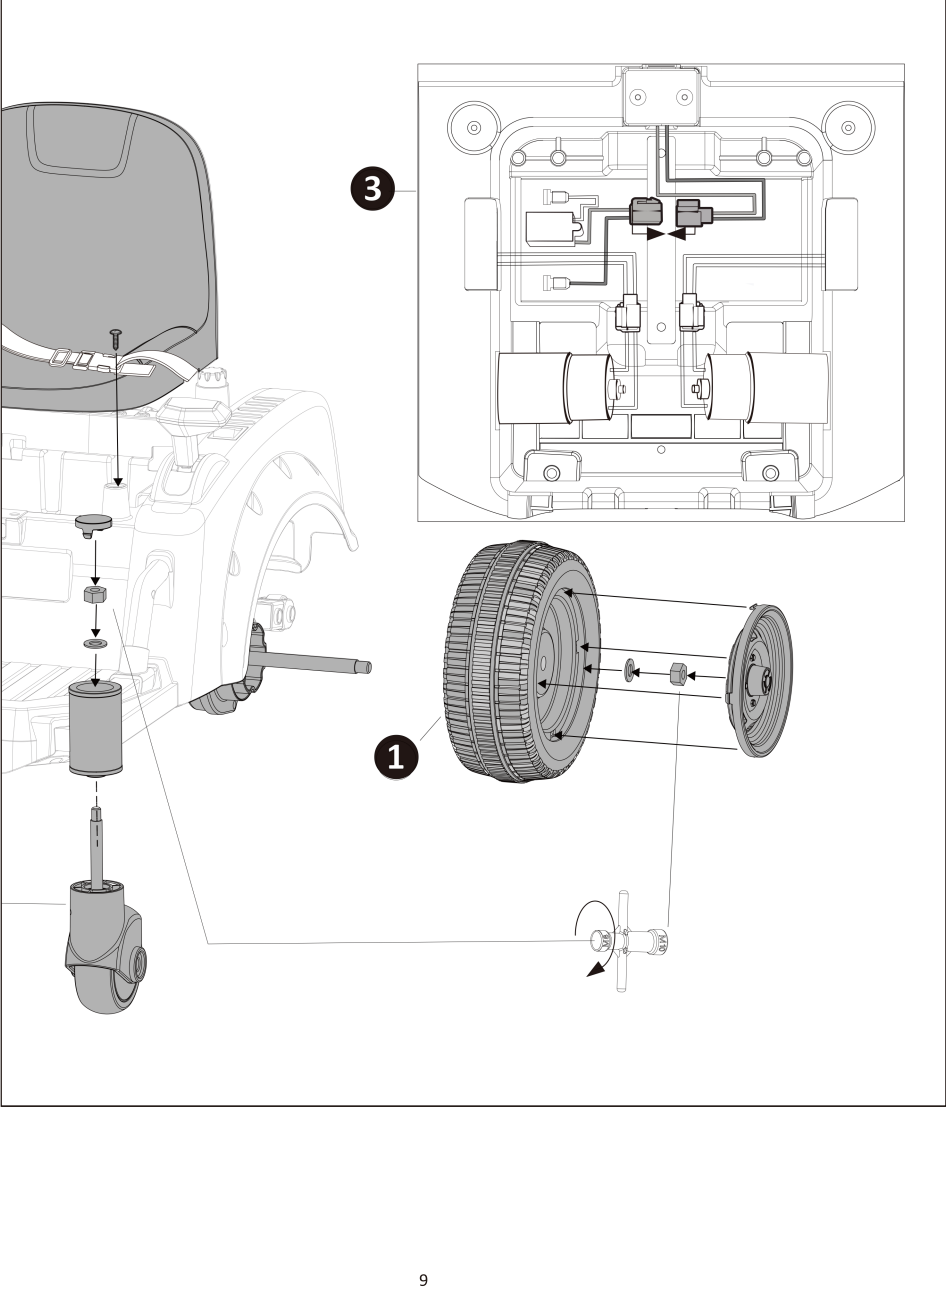

**Controls and Functions**

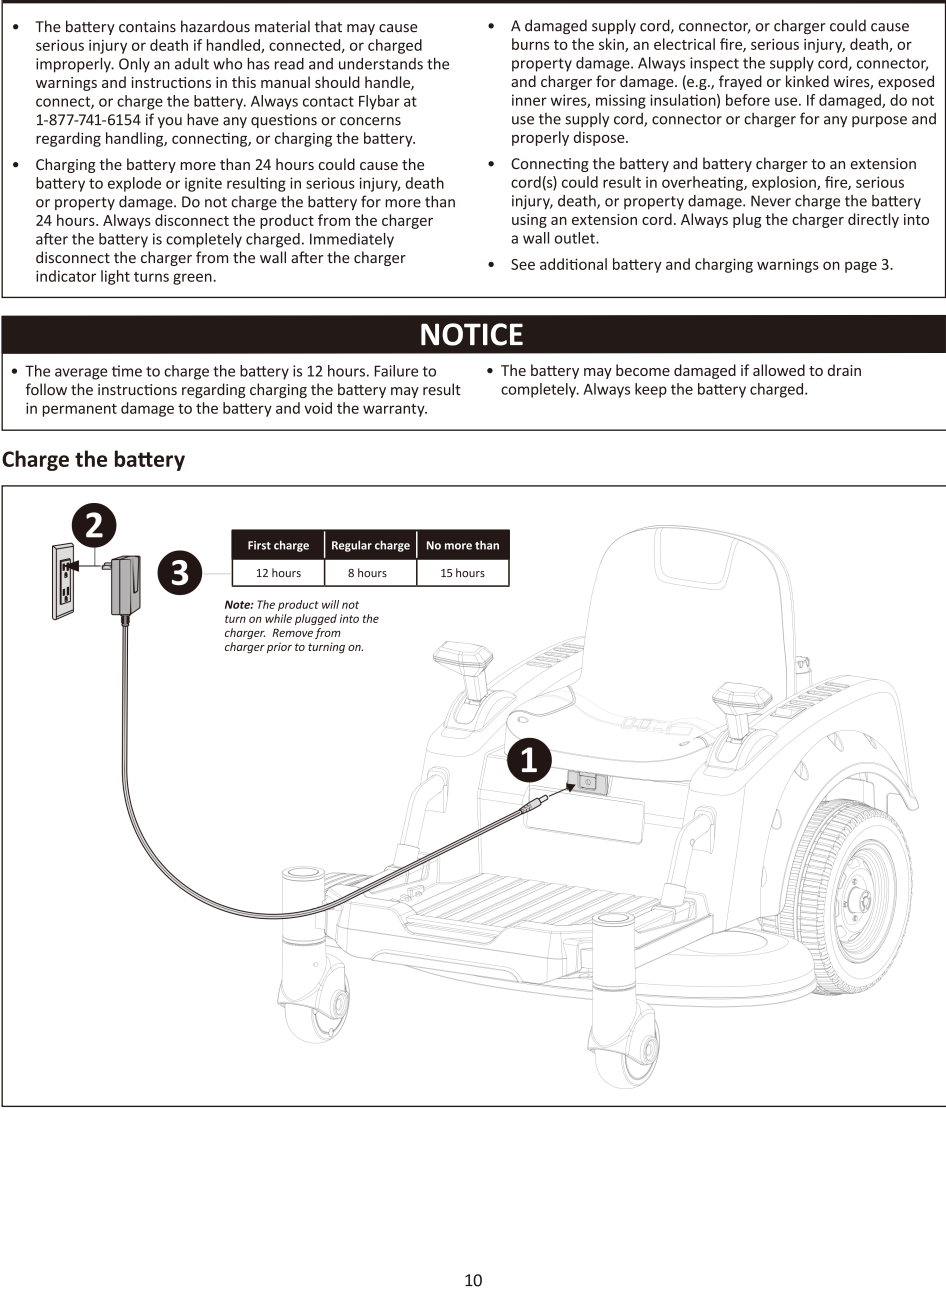

**Maintenance**

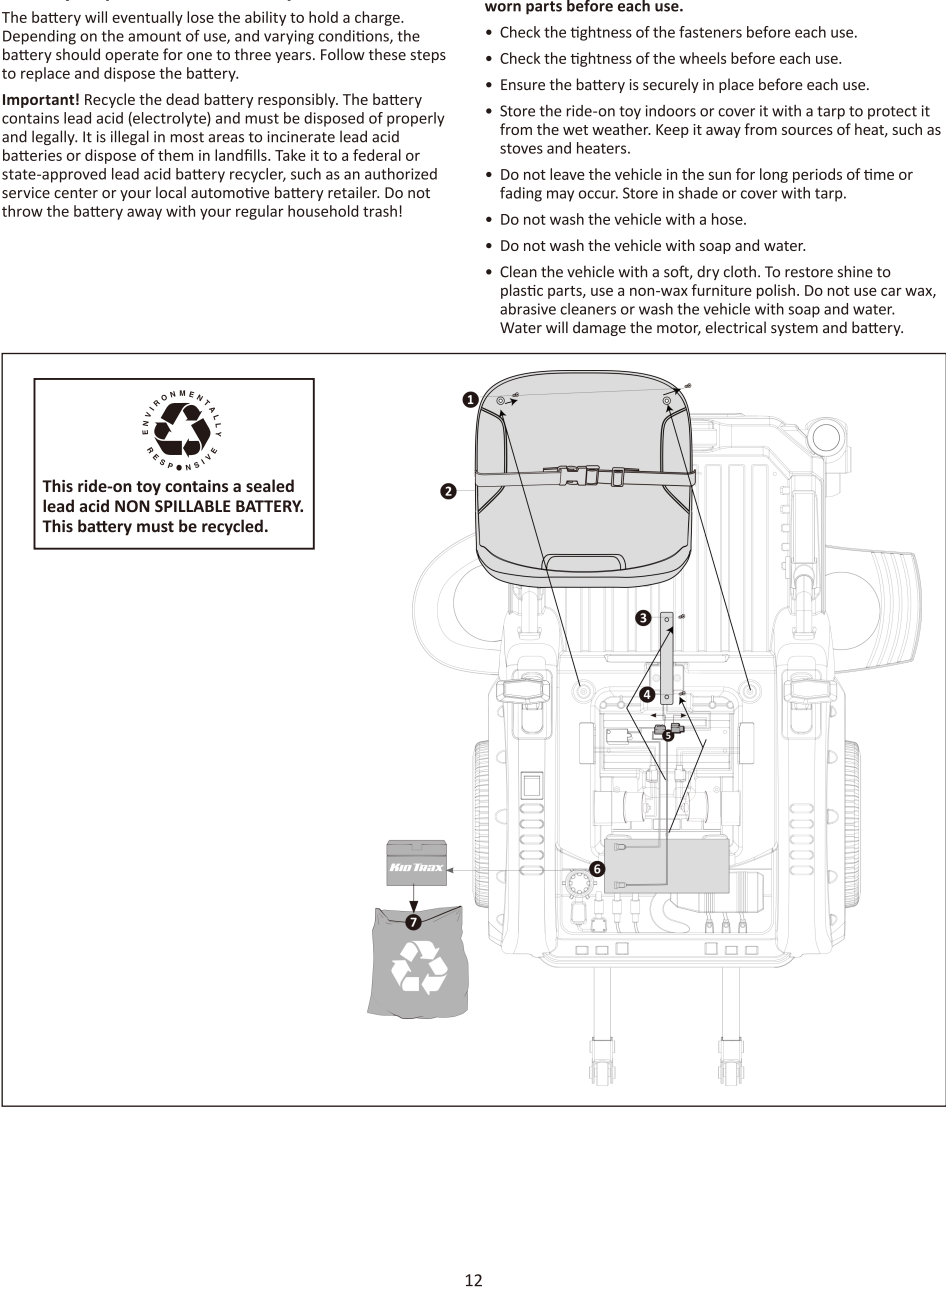 

**Service**

Do not return this product to the place of purchase. If your ride-on toy needs service, repairs or replacement parts, call:  
**Kid Trax / Flybar Consumer Relations**  
 Hours: 9:00 am - 5:00 pm (EST) Monday - Friday  
 Phone: 877-741-6154  
 Email: info@flybar.com

For a complete list of replacement parts, please contact Flybar Consumer Relations. To order parts, please have the model and serial number available, which can be found underneath the seat on the battery cover.

**FCC Statement**  
 Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warranty**

**Six-Month Limited Warranty | Six-Month Limited Warranty on Battery**

Flybar, Inc. (FB) warrants this product to the original retail purchaser as follows: The ride-on toy (except for the battery) is warranted against defective materials or workmanship for six months from the date of original purchase. The battery is warranted against defective materials or workmanship for six months from the date of original purchase. An original receipt is required to validate your warranty. FB will, at its option, provide replacement parts or replace this product. FB reserves the right to substitute if the part or model has been discontinued. To make a claim under this warranty you must contact us at www.flybar.com or call 1-877-741-6154 from 9 a.m. to 5 p.m., Monday through Friday, EST. Proof of purchase is required, and shipping charges are the responsibility of the consumer.

**Warranty Limitations**

This warranty does not include damages which arise from accident, misuse, abuse, neglect or other causes not arising out of defects in materials or workmanship, nor does it cover damages arising out of service by a third party. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Neither FB nor the dealer selling this product authorized any person to create for it any other warranty, obligation or liability in connection with this product.

**Flybar Consumer Relations**  
 Hours: 9:00 am - 5:00 pm (EST) Monday - Friday  
 Phone: 877-741-6154  
 Email: info@flybar.com

