
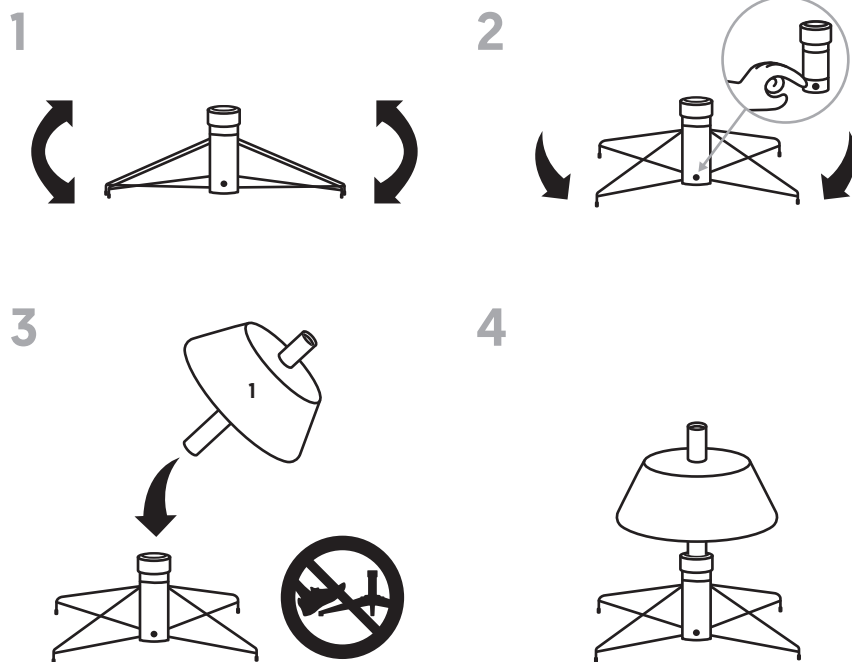




*Electrical Rating For The Tree
(For Indoor Use Only)
Input: AC 120 V, 60 Hz, 0.16 A
Output: DC 29 V, 0.28 A
Controller: 0.28 A

NEED HELP?


Before returning to store,
please visit us at www.tractorsupply.com
or contact our customer service center.

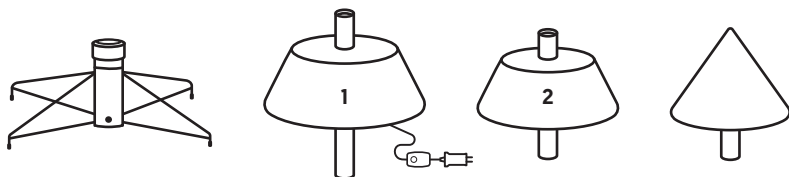

Note: Do not step on the tree stand legs during the setup. This may deform the tree stand and may result in an unbalanced tree.

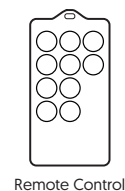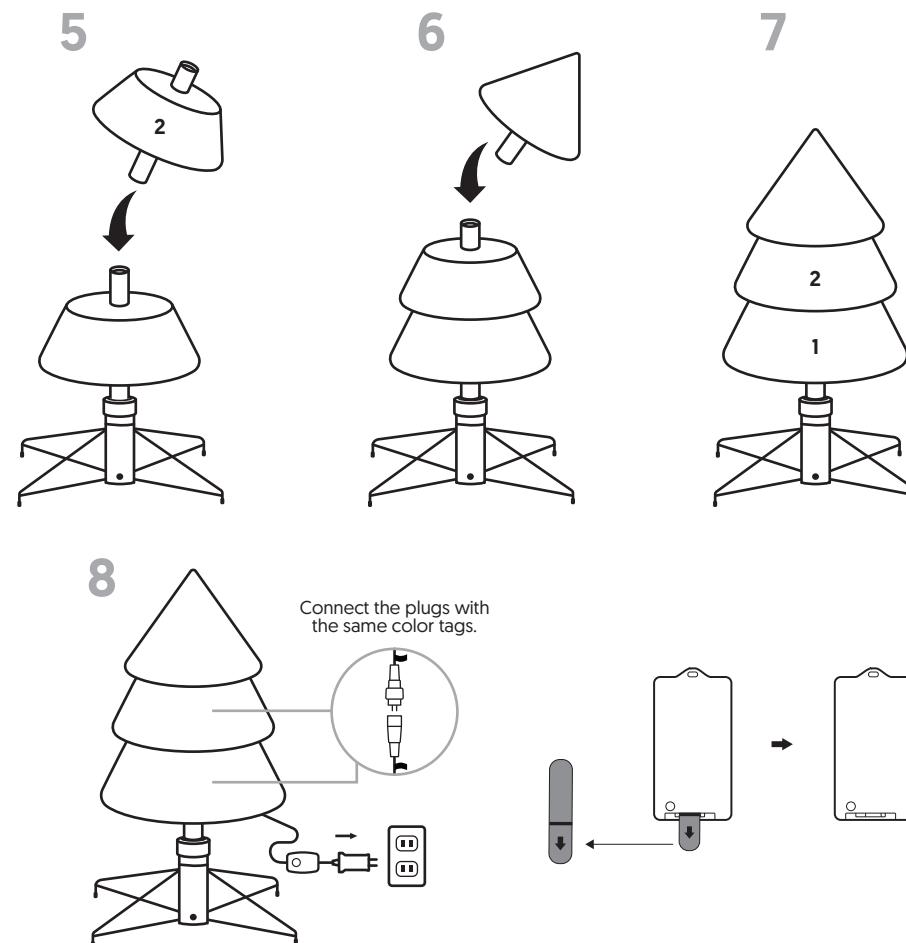


Remote Control

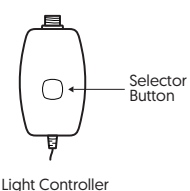

Light Controller

8 preset light effects

- | | |
|-------------------------------|-------------------------------|
| (1) Clear & Color Fading | (5) Clear & Color Slow Fading |
| (2) Clear Fading | (6) Color Steady |
| (3) Clear & Color Alternating | (7) Color Fading |
| (4) Clear Steady | (8) Combination |

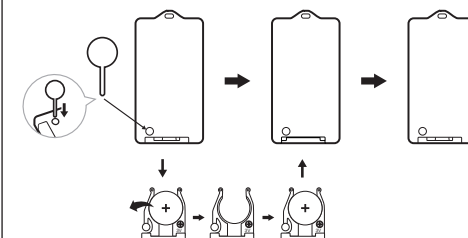

Demo Mode:

NOTE: This tree offers a Demo Mode. In this mode the light effects are displayed one by one in sequence until another light function is selected. This temporary light effect will last for 30 seconds before returning to Demo Mode.

To Activate DEMO Mode:


1. Using the Light Controller - Press and hold the selector button for 5 seconds.
2. The **clear lights will blink 3 times**, indicating that **DEMO mode is ON**.
3. The tree is now in demo mode.

To Deactivate DEMO Mode:

1. Using the Light Controller - Press and hold the selector button for 5 seconds.
2. The **multicolor lights will blink 5 times**, indicating that **DEMO mode is ON**.
3. The tree is now in normal mode.

SHAPING OF TREE

1. Shape the branches from the bottom tree section to the top.
Start with branch tips furthest from the pole and fan out the branch tips one by one. Spread the tips outwards to get the full effect of the branch tips. [Refer to image below]

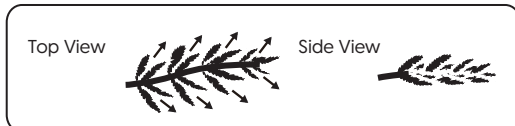

2. After shaping the entire tree, take a step back and check your tree from all angles at a distance. Look for any gaps between branches, especially the joint area between the tree sections, and finish the shaping by closing the gaps as much as possible for a nice seamless look.

For pre-lit tree, shape the tree with the lights turned on to ensure that the lights are operating correctly. Shape the light bulbs outwards, as any unfinished shaping will compromise the aesthetics of the tree.

! WARNING

1. This product contains a CR2032 button cell battery. If swallowed, it could cause severe injury or death due to chemical burns and potential perforation of the oesophagus – seek medical attention immediately.
2. Small parts, keep batteries out of reach of children.
3. If you suspect your child has swallowed or inserted a button cell battery, seek urgent medical assistance immediately.
4. Make sure the battery compartment is correctly secured (e.g. the screw or other mechanical fastener is tightened), and do not use if the compartment is not secured.
5. Dispose of used button cell batteries immediately and safely. Flat batteries can still be dangerous.
6. Inform others about the risk associated with button cell batteries and how to keep their children safe.
7. Do not expose the lights to moisture.
8. Remove batteries when not used for an extended period of time, or when depleted.
9. Dispose of the used battery properly as per the directions on batteries, and local laws and regulations regarding the disposal of hazardous waste.
10. Clean the battery contact surfaces prior to battery installation.
11. Do not dispose of batteries in fire – batteries may leak or rupture.
12. Use only CR2032 button cell battery for remote controller.
13. Non-rechargeable batteries are not to be recharged.



CAUTION

To reduce the risk of fire and electric shock:

1. Use only the power supply that was provided with this product. Using a different adapter will damage the lights and may cause fire, or electrical shock hazards.
2. a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and
b) Do not mount or support strings in a manner that can cut or damage wire insulation.


TROUBLESHOOTING TIPS

For pre-lit trees, if the tree does not illuminate

1. Ensure that all light string plugs are properly connected according to the color labels indicated and the power cord is plugged into the wall outlet.
2. Check for blown fuses at the light string plugs and power plug. Replace as needed.
Note: Make sure to use appropriate replacement fuses as indicated on the light string plug and power plug.
3. Check for loose, broken or missing light bulbs and replace as needed.
4. If the tree comes with a foot pedal, try stepping on the on/off button.

Loose Hinge Pin

1. Extra hinge pins are included for repairing the hinges.
Place the branch into the slot of the bracket.
2. Insert a new hinge pin through the hole and secure using the retainer washer.

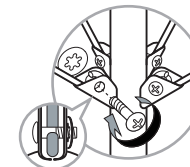

STORAGE INSTRUCTIONS

1. Unplug cord from the wall outlet first and then remove all ornaments and decorations.
2. Disassemble the tree from the top to the bottom. Start with the tree top and gently lift straight up to remove from section below and fold all branches toward the pole.
3. In case of difficulty separating the tree pole (trunk), apply a small amount of lubricant at the joint and rotate the upper pole in both directions. Lift up the upper pole again.
4. Continue by gently lifting straight up each section(s) from the section below and fold all branches toward the pole until the bottom section is removed from the tree stand.
5. Carefully place all tree sections into shipping box and tape it shut.
6. When not in use, please store your tree in a cool, dry place away from sunlight. Exposing your tree to excessive heat or humidity may damage your tree.

SPARE PARTS

This tree includes spare hinge pins and washers.

For extra parts, contact our Customer Service Center.

CUSTOMER SERVICE FOR CHRISTMAS TREES

For any questions, assistance, or missing parts, DO NOT RETURN TO PLACE OF PURCHASE. Contact us at 1-888-376-9601 or visit our website at www.tractorsupply.com. One of our customer service representatives will be happy to assist you.

Tree ID#:	Customer Name:
Tree UPC#:	Address: [No P.O. Boxes]
Store Purchased:	City & State:
Specify Problem:	Zip Code:
	Day Phone:
	Date Purchased:

TREE ID# IS LOCATED ON END PANEL OF BOX. TREE ID# IS REQUIRED WHEN REQUESTING REPLACEMENT PARTS.