



GOPOWERBIKE

GoVoyage Owner's
Manual



WWW.GOPOWERBIKE.COM



DO NOT RETURN TO STORE!

If you need any help with your new **GoVoyage** scooter, whether it is missing parts or you need help with assembly, please email us at help@gopowerbike.com. We will be sure to respond!

Welcome

Thank you for purchasing the **GoVoyage** from GoPowerBike.

We take pride in bringing you a quality product that will offer years of enjoyment. Please read and understand this manual fully before assembling and riding your scooter.

If you have any questions after reading this manual, please reference the GoPowerBike Help Center or contact us by email.

We are here to help!

Email: help@gopowerbike.com

Website: www.gopowerbike.com



Table of Contents

Using This Manual	1
General Info	2
Important Safety Information	3
Warnings	4
Getting Started	6
Unfolding and Folding the Scooter	7
Maintenance	9
Disclaimer	10
Limited Warranty	11
Additional Warranty Terms	12



Using This Manual

This manual contains details of the product, its equipment, and information on operation, maintenance, and other helpful tips for owners. Read it carefully and familiarize yourself with the scooter before using it to ensure safe use and prevent accidents. This manual contains many warnings and cautions concerning the safe operation and consequences if proper setup, operation, and maintenance are not performed. All information in this manual should be carefully reviewed and if you have any questions you should contact GoPowerbike immediately.

The notes, warnings, and cautions contained within the manual and marked by the triangular Caution Symbol should be given special care. Users should also pay special attention to information marked in this manual beginning with **NOTICE**.



Keep this manual, along with any other documents that were included with your bike, for future reference, however all content in this manual is subject to change or withdrawal without notice. GoPowerbike makes every effort to ensure the accuracy of its documentation and assumes no responsibility or liability if any errors or inaccuracies appear within.

Because it is impossible to anticipate every situation or condition that can occur while riding, this manual makes no representations about the safe use of scooters under all conditions. There are risks associated with the use of any scooter that cannot be predicted or avoided and are the sole responsibility of the rider.

General Info

Assembly and Fit

Correct assembly and fit are essential elements of ensuring the child's safety and comfort.

Mandatory Equipment and Use Locations

Before all rides, ensure you have all required and recommended safety equipment and are aware of any regulations pertaining to where the scooter can be ridden.

Changing Components or Attaching Accessories

The use of non-original components or spare parts can jeopardize the safety of the rider and invalidate your warranty.

Important Safety Information

- This product is recommended for children over 5 years old and the max weight limit (child and case storage contents) of 110lbs (50kgs).
- Always check the condition of the scooter before allowing the child to ride. Remember to check that all screws and wheels are tightly in place before using the scooter
- Always wear protective equipment such as a helmet and knee and elbow pads. Always wear sturdy shoes.
- Ride on smooth, paved surfaces and away from motor vehicles.
- To avoid a sudden stop of the scooter, avoid sharp bumps, drainage grates, and sudden surface changes. Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, visibility, and stability.
- Do not ride at night
- Brake will get hot after continuous use-DO NOT touch after braking.
- Avoid excessive speeds associated with downhill rides
- Adults must assist children with the initial adjustment procedure to unfold the scooter, adjust the handlebar and steering to height, and finally to fold the scooter.
- Obey all local traffic and scooter riding laws and regulations in your area.
- Watch out for pedestrians
- Replace worn or broken parts immediately.
- DO NOT use this product for jumping stunts or tricks. The scooter is not designed for such use.

WARNINGS

- Adult supervision is strongly recommended
- Never ride the scooter without tightening the folding mechanism
- Check all clamping devices for tightness and foot brakes prior to riding
- The handgrip contains a metal tube and a plastic end piece. Be careful not to drop or mishandle the scooter when not in use. If the scooter is dropped after use, in time, the plastic end piece, handle and tube will get damaged
- If these parts are damaged, it is strongly advised that you replace the parts as soon as possible to avoid any accident or injury that may be caused by making contact with these parts.
- It is strongly recommended that protective equipment be worn while using this scooter. The scooter should not be used on any surface other than flat, even ground. It is not designed for graveled roads, grassy surfaces, or any uneven surfaces. Riding on these surfaces could cause damage to the scooter or injury to the rider.
- Do not use in traffic
- Do not ride using only one hand
- Do not ride on a road or public highway
- Always be aware of your surroundings
- Do not exceed the maximum load capacity of 110lbs (50kg)

Fully Assembled GoVoyage



Getting Started

Starting notes:

- Remove all packaging before beginning assembly.
- If anything is missing or damaged, please contact GoPowerbike within 15 days of receipt.

help@gopowerbike.com

When contacting GoPowerBike, please indicate which scooter model you have and be prepared to forward a copy of your receipt.


Unfolding and Folding the Scooter

Step 1: Lift the latch with your finger to unfold.


Step 2: Unfold the deck to the fully down position

Step 3: Rotate and hook the safety latch to lock the deck in place.


1

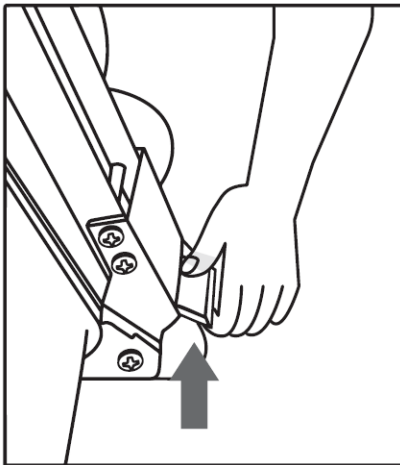

2

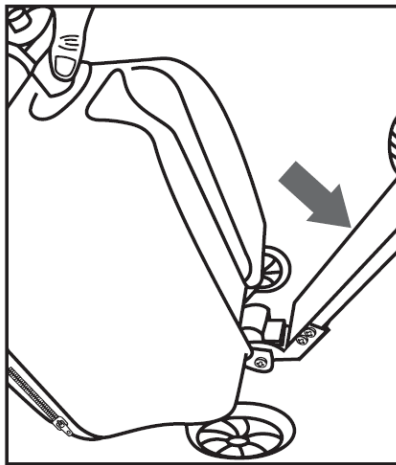

3

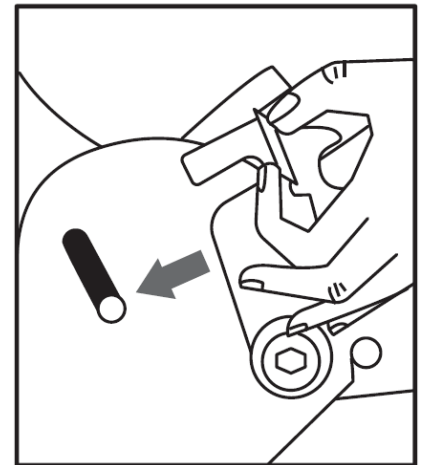


Unfolding and Folding the scooter

Step 4: Press the button on the handle and lift until the safety pins is engaged.


Step 5: Press the button on the handle and safety pin to lower the handle slowly.

Step 6: Lift the lever to fold the scooter deck.

4

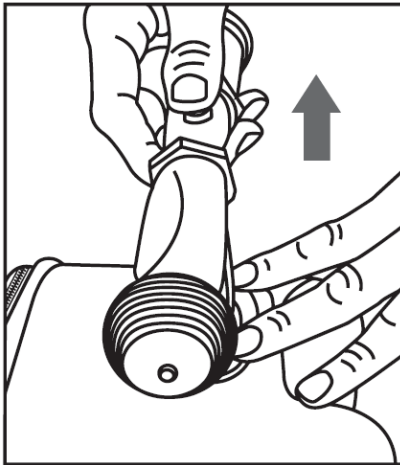

5

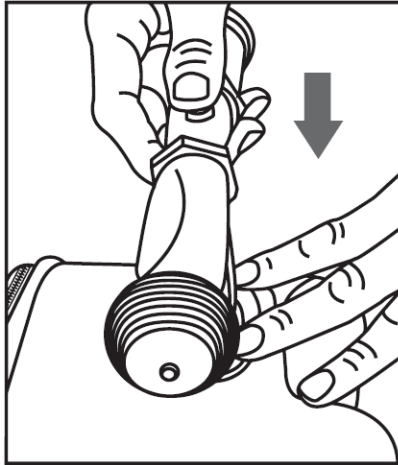

6



Maintenance

- After use, please wipe the product with mild detergent.
- Do not leave this product in high temperatures, intense sunlight or dusty areas
- Store in a dry place
- Always make sure all screws and nuts are securely tightened before every use. The self-lock fixtures may lose their effectiveness.
- No modification, other than to the manufacture's instructions, shall be made.

Disclaimer

1. Our company reserves the right to modify and give final interpretation to the product model, specification and other information contained in this manual.
2. The product model, specification, and other information contained in this manual is subject to any modification or change without notice.
3. The functions of the specific model referred to in this manual apply to this specific model only.
4. Without the prior written permission of the company, the contents of the manual may not be copied, modified, reprinted, disseminated, or published in any form.
5. Please read this manual carefully before using the product, and operate in accordance with the manual. Otherwise, the company shall not be liable for any personal or property damage, including damage to the product, caused by misuse or abuse.
6. For more information, please visit our official website: www.gopowerbike.com

Limited Warranty

Warranty Info

The GoVoyage by GoPowerBike is covered under a manufacturer's 30-Day limited warranty for the original owner against all manufacturing defects. GoPowerBike warrants this product, including all individual components against defects in material or workmanship as follows:

GOPOWERBIKE LIMITED 30-DAY WARRANTY

GoPowerBike GoVoyage Luggage scooter is warranted to be free from manufacturing defects in materials and/or workmanship for a 30-day period from the date of original purchase.

Warranty Exclusions

- Wear Parts: Parts that wear over time with regular use. Regular maintenance can extend the life of your GoPowerBike product and particularly wear parts, but even so, wear parts typically must be replaced at some point.
- Wear Parts include but are not limited to: Bearings, Bearing Braces, Tires, Tubes, Saddles/Saddle Coverings, Seats, Brake Pads/Shoes, Pawls, Free Hubs, Wheel Braking Surface, Spokes, Grips, Cables and Housing, Bushings, Kickstand, Bells, Baskets, Zippers, Bands and Other Attachments.
- Damage arising from the use of the scooter outside of normal intended use.
- Damage arising from improper tools, improper assembly, or improper maintenance performed on the scooter.
- Damage resulting from adding non-standard equipment, parts, or modifications.

Additional Warranty Terms

This warranty does not cover any damage or defects resulting from failure to follow instructions in the owner's manual, acts of God, accidents, misuse, neglect, abuse, commercial use, alterations, modification, improper assembly, wear and tear, installations of parts or accessories not originally intended or compatible with the scooter as sold, operator error, water damage, extreme riding, stunt riding, or improper follow-up maintenance. This warranty does not include normal wear and tear or consumable parts designed to wear down over time.

GoPowerBike will not be liable and/or responsible for any damage, failure, or loss caused by any unauthorized service or use of unauthorized parts. In no event shall GoPowerBike be responsible for any direct, indirect, or consequential damages, including without limitation, damages for personal injury, property damage, or economic losses, whether based on contract, warranty, negligence, or product liability in connection with their products. All claims to this warranty must be made through GoPowerBike.

Proof of purchase is required with any warranty request.

Please see our website for full warranty terms and conditions.

Determining whether damage or defect to a scooter, or covered component, is protected by this limited warranty shall be in the sole discretion of GOPOWERBIKE.

We are here to help!

If you have questions:
Contact us directly by email to
help@gopowerbike.com