

Warning and Precautions

1. Do not remove, repair, or modify the product in any way. Doing so will void the warranty
2. Do not cover the exhaust vent when operating the unit, as doing so may cause the unit to overheat and in certain circumstances catch fire.
3. Avoid vacuuming objects that can cause fire or explosions, such as cigarette buds or matches.
4. Store the vacuum out of reach of children and unplug once fully charged
5. Make sure to turn the unit off before charging with the USB charging cord. Do not use while the unit is charging with the USB cord.

This product has a 1-year limited warranty. For further information please visit our website at **www.techkogroup.com**

Copyright Reserved

User's Manual

CL-101



☎ 1-888-883-2456
✉ support@techkogroup.com

Product Introduction

1. Dustbin Cover
2. Filter
3. Dustbin Release
4. Power Switch
5. USB Power Input
6. Flexible Hose Attachment
7. Extension Attachment
8. Connection Attachments
9. Brush Attachment




Cleaning Instructions

1. Rotate the dustbin counter clockwise to remove the dustbin from the vacuum body

3. If needed, use a slightly damp cloth to wipe inside the dustbin. The filter can be rinsed under water, however, allow ample time to dry completely before reinstalling back to the dustbin to use.

2a. Remove the HEPA filter from the dustbin
2b. Empty the dustbin contents into the trash


To reinstall the dustbin and filter, insert the filter back into the dustbin, then rotate the dustbin clockwise to lock into place.

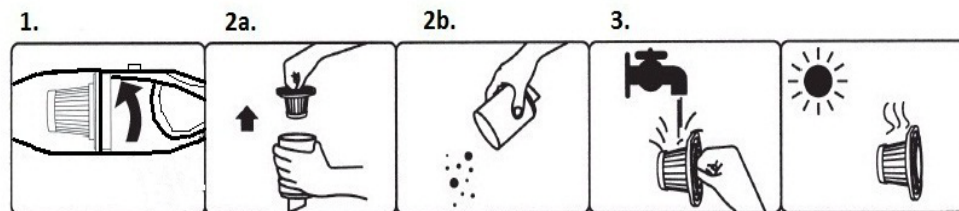

Accessories and Attachments

USB Charging Cord

1. Connect USB charging cord to a power adapter (not included) or directly to a USB port and charge the battery to full.

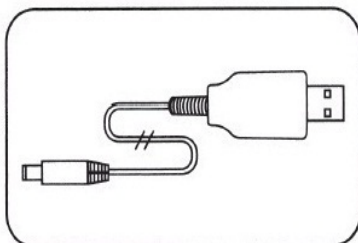

Product Specifications

Rated Voltage	Rated Power	Product Size	Product Weight	Product Material	DustCup Capacity	Power Mode
7.4 V	120 W	13*3.5*3.4"	1.07 Lbs	ABS	0.23 L	USB Charging