


The Big Auto-Fill Cup

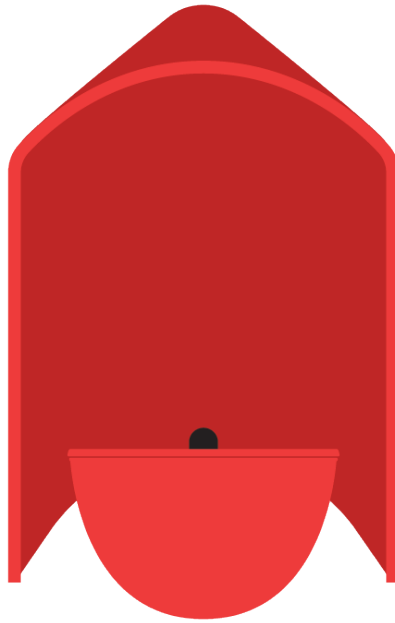


Renft ACCOOP®

TABLE OF CONTENTS

You Will Need 3

Height of Cup 3


How to Install 4

YOU WILL NEED

- Drill
- 9mm drill bit
- Water container of your choice


HEIGHT OF CUP

The top of the auto-fill cups should be shoulder-level with your animals.

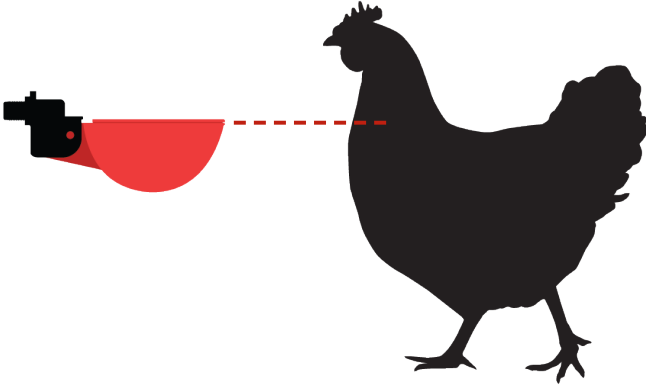


HOW TO INSTALL


- 1. Slide the threads of the cup into the hole of the cover. Using the cover is optional.

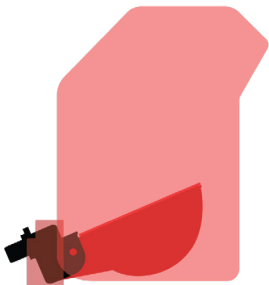


- 2. Snap into place.

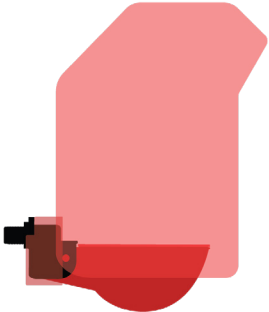


- 3. Drill hole into container of choice using 9mm drill bit.

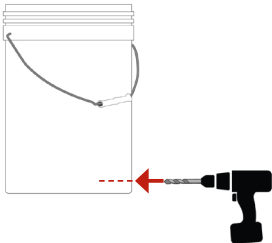


- 4. Screw cup into the container and turn to tighten.

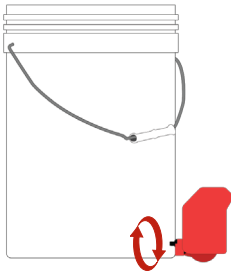

- 5. Screw wingnut onto threads of the cups from the inside of the container and turn to tighten.

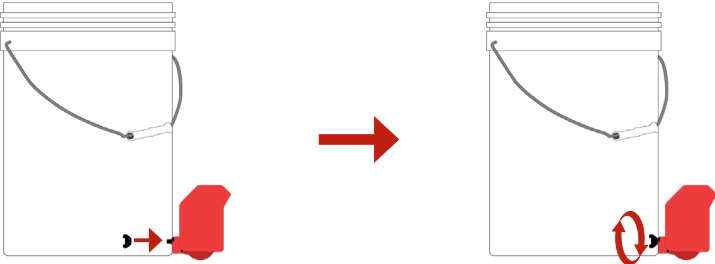

Compatible with RentACoop® S.N.A.P. System!

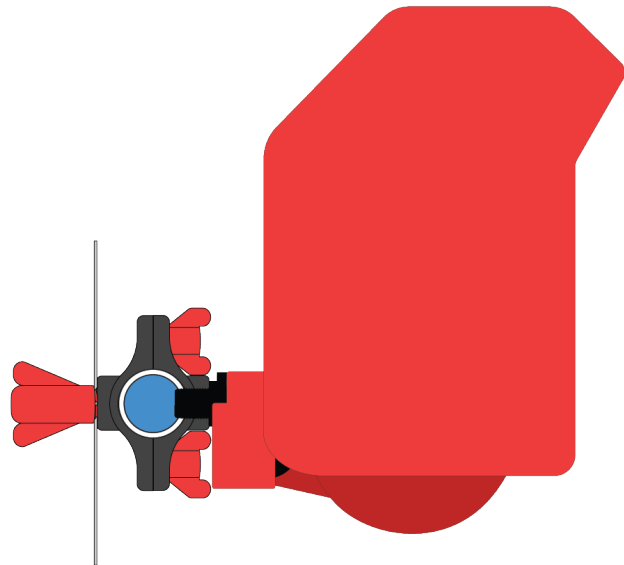

This page is intentionally left blank.



RentACoop®

QUESTIONS?

CONTACT OUR
EGG - S P E R T S

info@rentacoop.com

1 800-642-3571

M-F 9-5 EST



@rentacoop

#rentacoop