



Large Screen Digital Clock with Indoor Temperature

Instruction Manual

SKU# 2578836

PARTS LIST:


NO.	Description	Quantity	NO.	Description	Quantity
1	Digital Clock	1	2	Power Adaptor	1

Please read instructions carefully before use. Retain for future reference.

1 x CR2032 Battery Required


Front/Display

1. Time display
2. Calendar
3. Indoor temperature

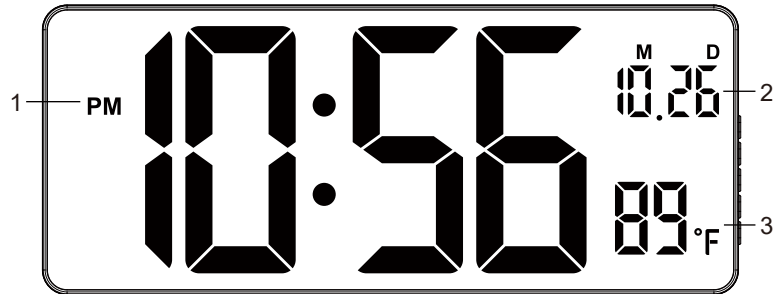

Side/Back of Display

4. ⚙️ (SET) button
5. ▲ (UP) button
6. ▼ (DOWN) button
7. 💡 (LIGHT) button
8. External power supply socket
9. Integrated hang hole
10. Battery compartment
11. Stand

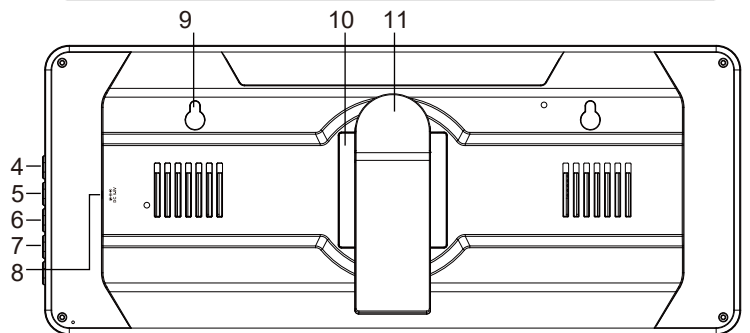

Features

- Measures indoor temperature (°C/°F).
- The large LED display makes it easy to read the time.
- Displays the month and date, allowing you to keep track of your schedule.

Default settings

1. Default time: 12:00 PM (12-hour format)
2. Default date: 1/1 (Year: 2018, format: Month/Day – cannot be changed)
3. Default temperature unit: °F

When the clock is first powered on, all segments of the LED display will light up for 3 seconds, then the clock will enter standard mode.

Display / Keys Details

The clock has 4 buttons: ⚙️ (SET), ▲ (UP), ▼ (DOWN), and 💡 (LIGHT).

1. ⚙️ (SET) button:

- a. In normal display: Press and hold to enter time setting mode.
- b. In time setting mode: Press to confirm.

2. ▲ (UP) button:

- a. In time setting mode: Increase the value.
- b. In time setting mode: Hold to scroll quickly.
- c. In normal display: Switch between 12-hour and 24-hour format.

3. ▼ (DOWN) button:

- a. In time setting mode: Decrease the value.
- b. In time setting mode: Hold to scroll quickly.
- c. In normal display: Switch the temperature unit (°C/°F).

4. 💡 (LIGHT) button:

- a. In normal display, adjust the backlight to: L4 → L3 → L2 → L1 (Brightness from high to low).

Temperature

1. Range: 0°C to 50°C (32°F to 122°F)
2. Resolution: 1°C/1°F
3. Accuracy: ±2°C/ ±3.6°F (within 0°C to 50°C)

Manual time setting

1. In standard mode, press and hold the ⚙️ (SET) button to enter time setting mode.
 - a. The setting order is: DST ON/OFF → Hour → Minute → Year → Month → Day → Exit.

2. Use the ▲ **(UP)** button to increase values. Hold to move quickly (8 steps per second).
3. Use the ▼ **(DOWN)** button to decrease values. Hold to move quickly (8 steps per second).
4. After finishing, press **(SET)** again or wait 10 seconds without pressing any button to exit.

Battery Safety Warnings:

- Use the correct size and type of battery as recommended.
- Insert batteries with the correct polarity (+/-).
- Do not mix old and new batteries, or different types (such as alkaline, carbon-zinc, and rechargeable).
- Replace all batteries simultaneously.
- Remove batteries during long periods of non-use or when exhausted.
- Do not attempt to recharge non-rechargeable batteries.
- Do not dispose of batteries in fire — they may leak or explode.
- Keep batteries away from metal objects to prevent short circuits.
- Store batteries in a cool, dry place. Avoid extreme heat, humidity, or sunlight.
- Keep out of reach of children — batteries may be a choking hazard.
- Leaking batteries can cause chemical burns or damage to the device. Handle with care.
- Dispose of batteries safely and in accordance with local regulations.

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.