

**STORAGE**

- Make sure the Ceramax pot is turned off and unplugged. Wait until the pot cools down prior to storing it.
- Do not wrap the power cord around the handle. Remove the power cord and store it separately.

**SPECIFICATIONS**

**Model No:** MDG-01/6390  
**Product:** Electric Hot Pot  
 Voltage/Freq.: 120v/60Hz  
 Power: 800W  
 Capacity: 1.5L/1.6QT  
 Made in China

CERAMAX™ ELECTRIC COOKER 1.6QT ITEM NO. 6390 DISTRIBUTED BY EMSON® NEW YORK, NY 10001, USA  
 ©2024 EMSON® ALL RIGHTS RESERVED. MADE IN CHINA.

**CERAMAX™** TM **cook HEALTHY**  
 WITH NO OIL OR BUTTER

**ULTRA PERFORMANCE CERAMIC NONSTICK**

**ELECTRIC COOKER**

LIGHTWEIGHT & PORTABLE

INTERNAL HEATING

**2 TEMPERATURE SETTINGS**  
 300°F / 350°F

**Cooking Made Easy,**  
 for all your favorite dishes.

- EASY TO CLEAN
- DURABLE CONSTRUCTION
- COOL TOUCH HANDLE
- 1.6 QUART CAPACITY

MADE WITHOUT PFOA, PFOS

**5 YEAR LIMITED WARRANTY**

**INSTRUCTIONS**



**BOIL**




**STEW**



**STEAM**



**SAUTÉ**

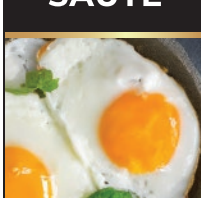

**FRY**



**WARNING:**  
Appliance for household use only.

**IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all Instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors (this item may be omitted if the product is specifically designed for outdoor use).
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

12. Before use, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
13. To avoid risk of fire, and to keep your Ceramax pot in its best condition, never leave anything cooking unattended. If overcooking occurs, turn off the heat by moving the switch to "0" position and unplugging the power cable from the wall outlet. Allow the pot to cool naturally. Be especially careful when children are around.
14. Do not preheat the Ceramax pot for more than one minute without adding ingredients or liquid to the pot to prevent dry burn.
15. Do not exceed MAX line marked inside the pot.
16. Do not use metal utensils.
17. Make sure to unplug the unit prior to cleaning. Do not use abrasive cleaners or pads.
18. After completing cooking, use extreme caution when removing the lid. Burns can result from steam inside the unit.
19. Do not use appliance for other than intended use.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way

**CSA**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

The instructions for appliances incorporating an appliance inlet, and intended to be partially or fully immersed in water for cleaning, shall state that the connector must be removed before the appliance is cleaned and that the appliance inlet must be dried before the appliance is used again.

The instructions for appliances normally cleaned after use, and not intended to be immersed in water for cleaning, shall state that the appliance must not be immersed.

The instructions for all appliances shall include:

- a warning to avoid spillage on the connector
- details on how to clean the surfaces in contact with food
- a warning of potential injury from misuse
- a statement that the heating element surface is subject to residual heat after use.

**SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY**

**BEFORE FIRST USE**

Before using your new Ceramax pot for the first time, rinse the inside of the pot with soapy water. Do not submerge the pot in water. Hand wash the lid and steamer insert in soapy water. Ceramax pot, lid and steamer insert are not dishwasher safe. Wipe the handle with damp cloth.

**USAGE**

**ATTENTION: DO NOT PREHEAT THE CERAMAX POT FOR MORE THAN ONE MINUTE WITHOUT ADDING INGREDIENTS OR LIQUID TO THE POT TO PREVENT DRY BURN.**

**SAUTE/FRY Do not use metal utensils.**

1. Make sure the Power Switch is set to "0" (OFF). Connect one end of the power cord to the handle, and the other end to a wall outlet.
2. Have all of the ingredients to be cooked nearby.
3. When ready to cook, move the Power switch to "1" Setting (Low Heat) to preheat the pot. Temperature will rise quickly, **pre-heat time should be less than 1 minute.**
4. Add your ingredients to the pot according to your recipe. Do not exceed MAX line marked inside the pot.
5. For higher temperature setting, move the switch to "2" Setting (High Heat).
6. Cover the pot with the lid, if needed.



**0 - OFF**  
**1 - Low Heat (300°F)**  
**2 - High Heat (350°F)**



**CLEANING**

When cleaning, do not use metal scour pads. Best to clean with nylon or hemp fibered sponge.

Make sure the Ceramax pot is turned off and unplugged. Wait until the pot cools down prior to cleaning it.

- To clean the Ceramax, simply wipe the inside of the pot with damp cloth. If needed, rinse the inside of the pot with soapy water. Do not submerge the pot in water.
- Hand wash the lid and steamer insert in soapy water. Ceramax pot, lid and steamer insert are not dishwasher safe. Wipe the handle with damp cloth.
- If deeper cleaning is needed, fill the pot with water (do not exceed MAX line). Connect the pot to a wall outlet and move the switch to "2" position. Bring the water to boil and turn the pot off. Let it sit to loosen the food stuck to the bottom of the pot. Empty out the water and rinse.