

## REMOTE BATTERY PLACEMENT

1. Remove the small screw from the back of the remote. Press the tab to open the battery compartment.
2. Insert 2 new AAA batteries (included), following the correct polarity.
3. Once the batteries are inserted, place the cover back on and snap it in.
4. Place the screw back in and tighten it.



## SPECIFICATIONS

**LED lights:** 1 pc RGB LED

**Batteries:** 2 AA batteries for the light (not included),

2 AAA batteries for the remote control (included)

**Remote control distance:** 16 feet (5 meters)

## BATTERY CAUTION AND DISPOSAL

- For best results, use Alkaline batteries.
- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- **Do not mix Alkaline and Standard (Carbon-Zinc) batteries.**
- **Do not use rechargeable batteries. Due to the lower voltage, the candle light will have a color variation.**
- **Do not dispose of batteries in fire.**
- **Batteries should be recycled or disposed of as per state and local guidelines.**

BELL+HOWELL® CANDLE BRIGHTS 6 PACK ITEM #2498ENC


DISTRIBUTED BY EMSON® NEW YORK, NY 10001 USA ©COPYRIGHT 2024 EMSON®

ALL RIGHTS RESERVED. MADE IN CHINA.

BELL+HOWELL®  
**CANDLE**  
brights

multi-color changing candles


6 pack LED LIGHTS

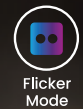

INSTRUCTIONS

## BATTERY INSTALLATION

1. Open the battery compartment by pressing on the tab. Remove the compartment door and set aside. See Diagram 1.
2. Insert 2 AA batteries (not included). Observe the polarity.
3. Place the battery compartment door back until it snaps in.

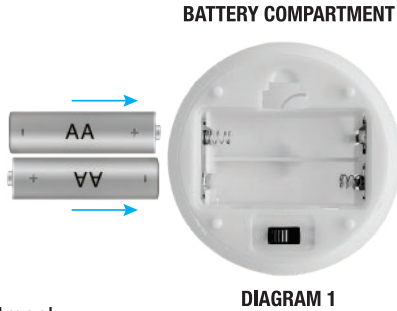

## TO PRESERVE BATTERIES


If using the candles with the remote, move the ON/OFF switch to the OFF position when not using for a period of a week or longer. This will help preserve the batteries.

## USAGE

1. Move the ON/OFF switch to the ON position. The default setting is Warm Flickering Light. See Diagram 2.
2. To turn it off, move the switch to the OFF position.
3. When the batteries become weak, a red light will flash. You may also notice dim lights and less sensitivity to the remote control. Please refer to the Battery Placement directions above to replace the batteries.



## PRIOR TO USING REMOTE

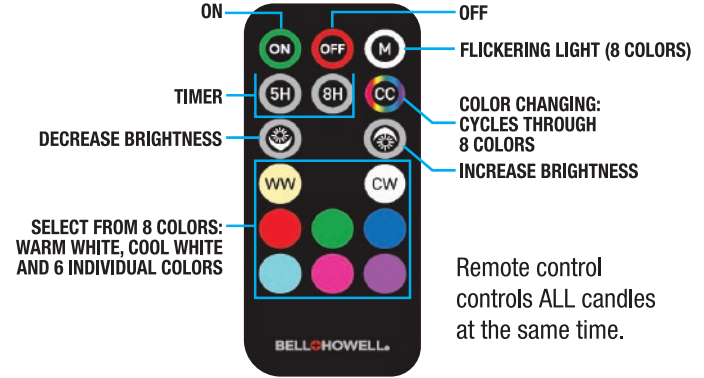

## REMOTE CONTROL USAGE

1. Move the ON/OFF switch to the ON position. The default setting is Warm Flickering light. Note: If one of the candle lights is not turning on using the remote, press the ON button a few times to make sure the lights respond to a remote signal.
2. Point the remote control at the candle. Press the **CC** button and the unit will cycle through all 8 colors.
3. Press any individual colored button to display that color (choose from 8).
4. Press the **M** button to display Flickering light (works for 8 colors).
5. Press the **WW** button for Warm White light and the **CW** button for Cool White light.
6. While the light is on, press the or buttons to adjust the brightness. This works for all 8 colors, except for **M** and **CC** modes.
7. To turn the candle OFF, press the OFF button. To turn the candle ON, press the ON button.
8. **5H** and **8H** Timer: With the candle ON, point the remote control at the candles and press the 5 or 8 hour button for the desired lighting time. Candles will be on for a duration of a set time, then turn off, then automatically come back on daily at the time when the timer was first activated. To cancel the set timer, press the OFF button, then press the ON button to reset.