


SOCKET FAN LIGHT

2-IN-1 LED LIGHT & FAN

**QUICK
GUIDE**

ASSEMBLY

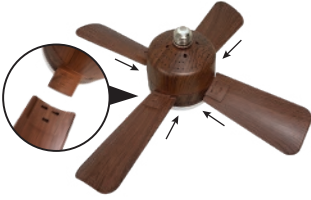

Insert each blade into the tab until it clicks in. The blades can only be inserted one way.

INSTALLATION No tools required.

Turn the power OFF using the wall light switch for that socket before installing the unit.

EQUIPPED WITH SAFETY OFF FEATURE

If the blades come in contact with an object during operation, the fan will stop.

To restart:

Option A: Turn the power OFF using the wall light switch for that socket.

Wait for 4-5 seconds, then switch it back on. Last used fan/light setting will resume.

Option B: Just wait 35 seconds before using the remote control again.



1. Remove the protective cap.



2. Hold part A and part B at the same time. Twist the Socket Fanlight clockwise to install it.

3. Turn the Socket Fanlight ON using the wall light switch for that socket. The light will turn on High setting, fan will be off. For more controls, refer to **Using the Remote** below.

USING THE REMOTE Remote working distance: up to 16 feet (5m)

NOTE: Each time a button is pressed on a remote, a short beep will sound.



- ON Go back to the default setting (Light ON High with Fan OFF)
- OFF Turns unit OFF (Fan and Light).
- Fan icon Turns fan on at low setting. Keep pressing button to cycle through other settings (Low/Medium/High/OFF).
- Light bulb icon Default light setting is High. Keep pressing button to cycle through other settings (Low/Medium/High/OFF).

MEMORY FEATURE (light switch only): If you turn the unit off via wall light switch, the last fan/light setting will be saved. Once you turn the switch back on, the default setting (Light on High/Fan OFF) will briefly engage, followed by the last fan/light setting. Please allow for approximately 5-8 seconds for the memory to restore.