

# Owner's Manual

## 11 Gallon Portable Air Tank

**CAUTION:** Before using this product, read this manual and follow all its safety rules and instructions.

Record the following for future reference:

Serial #: \_\_\_\_\_

Date of Purchase: Attach a copy of your sales receipt.

Consumer Toll Free Number:

**1-888-376-9601**

### Important Safety Instructions and Guidelines

- Save all instructions

#### **WARNING**

Improper operation or maintenance of this product could result in serious injury and/or property damage. Read and understand all of the warnings and safety instructions provided before using this equipment.

<b>Risk of Breathing</b> 	Keep children, pets and others out of the area of operation. This air carry tank does not provide breathable air for anyone or any auxiliary breathing device.
<b>Risk of Bursting</b> 	If the tank develops a leak, then replace the air carry tank. Never attempt to repair a tank by welding! Do not fill tank above rated pressure! NOTE: Discard the empty tank and DO NOT use after 7 years from the original date of purchase. This tank is stamped with a "DISCARD AFTER DATE" if purchase date is unknown. Do not alter or tamper with the pressure relief safety valve!
<b>Risk from Flying Objects</b> 	Compressed air can be hazardous. The air stream can cause injury to soft tissue areas such as eyes, ears, etc. Particles or objects propelled by the air stream can cause injury.

## Operating Procedures

### Filling the Portable Air Tank

Take your portable air tank to any source of clean dry compressed air. A full service gas station or truck stop is preferable. Modern convenience mart type filling stations do not have sufficient air pressure available to allow you to get the most from your air tank. When filling your tank, do not exceed 125PSI. The air tank is filled like a car tire by pressing the chuck from the source to the filler valve.

**PLEASE NOTE:** Tank can be filled and the pressure gauge can be read with the RED ON/OFF KNOB in the OFF position.

### Using the Portable Air Tank

Turn the RED ON/OFF KNOB counter-clockwise to the open position to allow air to flow from the tank into the hose. To prevent air from leaking out of the tank between uses, turn the RED ON/OFF KNOB clockwise to the closed position.

During inflation of objects, the tank pressure gauge does not indicate the pressure in the object being filled. Use a separate gauge to check the pressure of the object being filled.



## Storage

### STORING YOUR PORTABLE AIR TANK

Turn the RED ON/OFF KNOB CLOCKWISE to the OFF position when storing your air tank.

#### **WARNING**

**Failure to remove condensation will cause the tank to rust prematurely.**


Always drain the tank of all air after the last use for the day and before repairing or removing any component parts. Point the safety pressure relief valve AWAY FROM YOUR BODY when releasing air. Use the pull ring on the safety relief valve to vent any pressure inside the tank before attempting to service the tank. Safety goggles must be worn at all times for eye protection. To disperse any accumulated condensation inside the tank, begin by reducing the air pressure inside the tank by pulling out on the

safety valve and holding until the tank gauge reaches 25 psi. Invert the tank with the manifold facing downward and pull the ring on the safety relief valve. We as the manufacturer and you as the consumer have no control over the moisture content of air coming from any fill source. Premature rusting caused by condensation inside the tank is the primary reason for the suggested replacement date stamped on the tank.

- Never attempt to remove any components while tank is pressurized.
- Never remove or deface the information sticker on tank.
- Never attempt to fill the tank if any air leak is detected in the tank body. Discontinue use of the air tank immediately.
- Warranty is void if any attempt is made to alter or change the design of the tank.

## Parts List

1. Carry Handle
2. Pressure Gauge  
Indicates internal air pressure of tank
3. On/Off Valve  
Prevents air from leaking out of the air hose and/or tire chuck, when in the off position.
4. Filler Valve  
Fill tank with compressed air through this point.
5. Safety Pressure Relief Valve  
Prevents tank from being over-pressurized.
6. Air Hose  
Delivers compressed air from the tank.
7. Steel Legs  
Support tank in an upright stable position.
8. Tire Chuck  
Used to inflate tires and other items

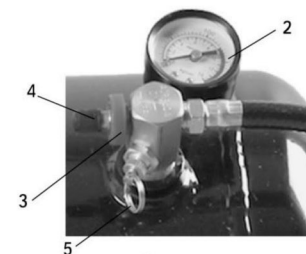

## Replacement Parts

Item No(s).	Part No.	Description	Qty.
2	CT-0001	Pressure Gauge	1
3, 4, & 5	CT-0002	Manifold Assembly	1
6&8	CT-0003	Air Hose w/Chuck	1

For replacement parts call 1-888-376-9601

## Limited Warranty

This product is warranted against defects in materials and workmanship for one (1) year from date of purchase. If within this period a product is found to be defective in material or workmanship, the product must be returned with a copy of the bill of sales as proof of purchase in the original carton to the place of purchase. The Distributor will, at its option, repair, replace or refund the purchase price to the consumer. This warranty does not cover the product becoming defective due to misuse,

accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on how long an implied warranty lasts, the above exclusion and limitation may not apply to you. This warranty gives you specific rights and you may also have other rights which vary from state to state.