



## OPERATION INSTRUCTION

1. Check if the screw cap(1) is firmly closed
2. Fill the high pressure sprayer as far as the 2 litre line and close the screw cap (quantity of liquid no more than 2 litre, otherwise the sprayer develops .insufficient pressure)
3. Pump(2)until resistance is felt (approximately 20 strokes).Spraying by pressing lever(3).
4. Engage trigger lock for continues spraying(4)

## ATTENTION

After use spin the top a quarter turn

To release the remaining pressure

Do not store pressurized and release trigger lock.