


OPERATION INSTRUCTION

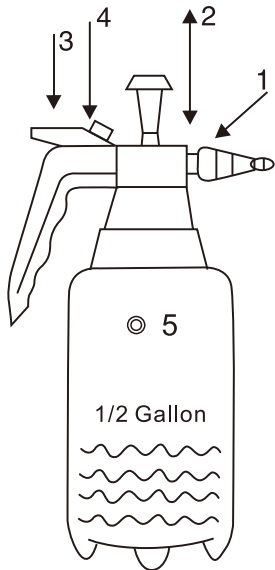

1. Check if the screw cap(1) is firmly closed
2. Fill the high pressure sprayer as far as the 2000ML line and close the screw cap(quantity of liquid no more than 2000ML otherwise the sprayer develops insufficient pressure)
3. Pump(2)until resistance is felt (approximately 20 strokes).Spraying by pressing lever(3).
4. Engage trigger lock for continues spraying(4)
5. To release pressure, pull up on release valve.(5)

Warning: Never leave pressurized sprayer unattended.

CLEANING AND STORAGE

1. Do not store chemicals in the tank, they can clog the system as they dryand destroy the **sprayer**.
2. To extend the life of your sprayer, clean the sprayer after each use.Rinse thoroughly with mild soap and water.Be sure to flush out the hoseand flow control. Then rinse with clean water.
3. **Store your sprayer in clean, dry area, out of sunlight.**