

Manual of sprayer part for TSC web use only

4428585

1. add recommended amount of any plant food to feeder jar (refer to plant food package instructions).

2. Choose the sprayer attachment you want. Use the Gentle Spray Nozzle for potted plants, seedlings, etc. Remove it for general lawn & garden feeding.

3. Turn sprayer switch to OFF, and attach hose. Turn facet on, turn sprayer switch to ON. Begin feeding when jar is completely filled with water (approx. 1-2 min.).

Important: this and other non-clogging sprayers (those without dip tubes) send out a stronger plant food solution at the beginning that weakens as you spray. It's important to move your sprayer back and forth over the entire area you are feeding so that approximately the same amount of plant food falls on all plants in the area.

4. Plant food is completely dispensed when water in sprayer turns clear. For faster feeding, or to clean feeder, turn sprayer upside down. Sprayer will empty in about 1-2 minutes.

Caution: Do not connect to sprinkler or use with watering device that has a built-in shut-off valve. When using a water wand do not use water wand shut-off valve. This will cause pressure buildup in jar, resulting in possible bursting or damage.

Manual of sprayer part for TSC web use only

4428713

1. Unscrew the wand nut from the wand handle (remove the old wand from wand handle)
2. Push the wand through the wand nut(This may be factory installed for you) and into the wand handle until it stops
3. Turn the nut clockwise to tighten.

Manual of sprayer part for TSC web use only

4428705

1. Unscrew the wand nut from the wand handle (remove the old wand keep the wand nut for new wand).
2. Push the wand through the wand nut and into the wand handle until it stops.
3. Turn the nut clockwise to tighten.

Manual of sprayer part for TSC web use only

4428747

1. Unscrew the wand nut from the nozzle tip.
2. Push the wand through the wand nut and into the nozzle tip until it stops.
3. Turn the nut clockwise to tighten.