



# SAFETY & WARNING INFORMATION FOR PROPANE CYLINDERS

MANCHESTER TANK & EQUIPMENT CO., 1000 Corporate Centre Drive, Franklin, TN 37067.

**⚠ DANGER – FLAMMABLE GAS UNDER PRESSURE. LEAKING LP GAS MAY CAUSE A FIRE OR EXPLOSION IF IGNITED CAUSING SERIOUS BODILY INJURY OR DEATH. CONTACT LP GAS SUPPLIER FOR REPAIRS, OR DISPOSAL OF THIS CYLINDER OR UNUSED LP GAS. DO NOT FILL BY OPD.**

**⚠ WARNING – FOR OUTDOOR USE ONLY.\* DO NOT USE OR STORE CYLINDER IN A BUILDING, GARAGE OR ENCLOSED AREA.**

**\*EXCEPT AS AUTHORIZED BY ANSI/NFPA 58 or CSA B149.2. DO NOT REMOVE, DEFACE OR OBLITERATE THIS LABEL.**


- Know the odor of LP gas. If you hear, see or smell leaking LP gas, immediately get everyone away from the cylinder and call the Fire Department. Do not attempt repairs.
- To reduce risk of fire that may cause serious injury or death, BEFORE filling ALWAYS caution your LP Gas supplier to:
  - Be certain cylinder is purged of trapped air prior to first fill and after replacing valve.
  - Be certain not to overfill the cylinder.
  - Be certain cylinder requalification date is checked.
- Inspect the cylinder and valve prior to filling for any damage, defects or other hazards as prescribed by NFPA 58, and replace as needed.
- Replace any cylinder valve that is 10 years old or older.
- Fill the cylinder by weight or using the fixed liquid level gauge as required by NFPA 58. Do not rely on the overfill protection device (OPD) to prevent overfilling.
- LP gas is heavier than air and may settle in low places while dissipating.
- Contact with the liquid contents of cylinder will cause freeze burns to the skin.
- Do not allow children to tamper or play with cylinder.
- When not connected for use, keep cylinder valve turned off.
- Do not use, store or transport cylinder where it would be exposed to high temperatures. Relief valve may open allowing a large amount of flammable gas to escape.
- When transporting, keep cylinder secured in an upright position with cylinder valve turned off.
- Use only in compliance with applicable codes.
- Read and follow manufacturer's instructions.

#### WHEN CONNECTING FOR USE:

- Consult manufacturer's instructions concerning the cylinder connection provided with your appliance.
- Be sure regulator vent is not pointing up.
- Turn off all valves on the appliance.
- Ensure that the cylinder valve handwheel is in the closed position when connecting or disconnecting an appliance.
- Ensure that the appliance coupling nut is fully hand tightened before opening the cylinder valve and operating the appliance.
- Do not check for gas leaks with a match or open flame.
- Apply soapy water at areas marked "X". Open cylinder valve.

- If bubble appears, close valve and have LP gas service person make needed repairs. Also, check appliance valves and connections to make sure they do not leak before lighting appliance.
- Light appliance(s) following manufacturer's instructions.
- When appliance is not in use, keep the cylinder valve closed.

**⚠ DANGER – DO NOT STORE A SPARE LP CYLINDER UNDER OR NEAR A BARBECUE GRILL, OR OTHER HEAT SOURCES. NEVER FILL AN LP CYLINDER BEYOND 80% FULL: A FIRE CAUSING DEATH OR SERIOUS INJURY MAY OCCUR.**

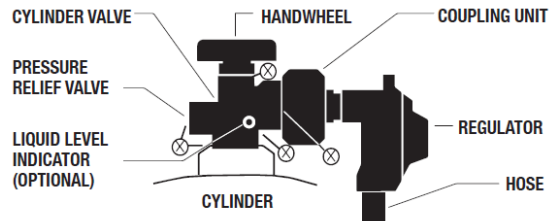

S33901 Rev.C