


A	B	C
		
x4	x4	x4





1. Open the compartment door with the key.



2. Put the adjustable chute from inside.

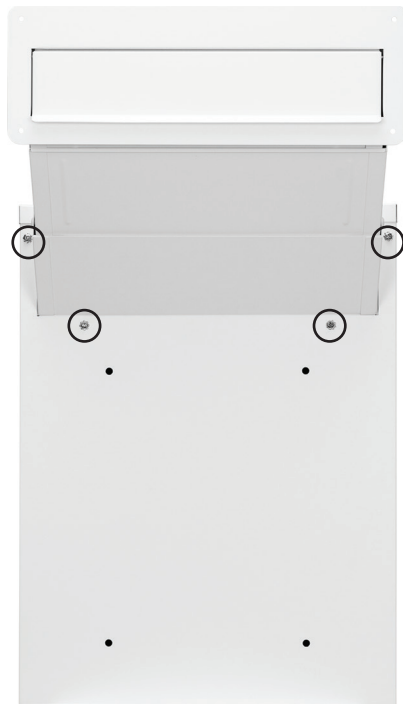

3. Put on the screws on both sides of the slot.

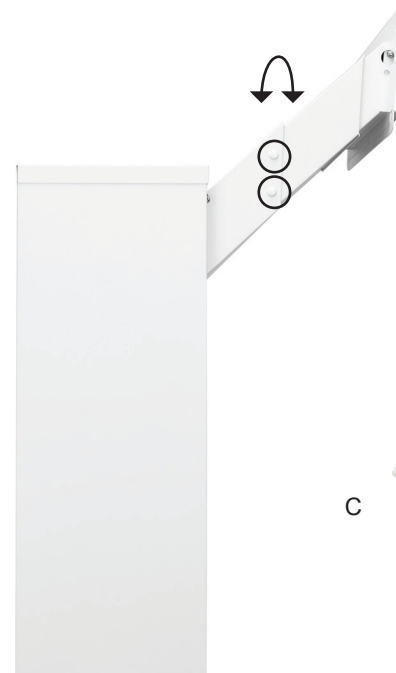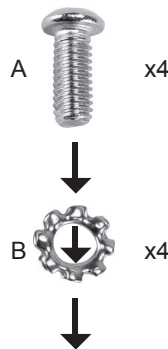

4. Put on the screws between chute on both sides.
Adjust chute to desired length.

