



Presents our ghoulish collection of Halloween décor from

FRASER HILL FARM

Thank you for choosing Haunted Hill Farm!
If you have any questions, concerns or suggestions, please
contact us directly.

Boo@HauntedHillFarm.com (Anytime)

1-888-840-4559

(9AM to 9PM Eastern Time, Monday - Friday)

(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.

See the full Haunted Hill Farm collection and get online support for assembly, troubleshooting, care and maintenance at:

www.HauntedHillFarm.com

Please follow the step by step guide and enjoy your 400W Fog Machine!

HH400FOGMCHN-1F



The model number of your item is printed on the side of your carton.
Always use this number to identify your item.

Thank you for your purchase of this quality Halloween decor. With proper use and care, your Halloween decor will provide you with years of enjoyment. Please follow the instructions on how to assemble and disassemble your item. If you should have any problems with your item, or you have any questions, **DO NOT** return it to the place of purchase. Please call our toll-free number: **1-888-840-4559** and a customer service representative will assist you. Enjoy your Holiday!

 
PARTS LIST

A. Fog Machine
B. Handle

C. Handle Screw (2 Pieces)
D. Fog Liquid (not included)

E. Receiver
F. Power Cable

G. Cap
H. Transmitter

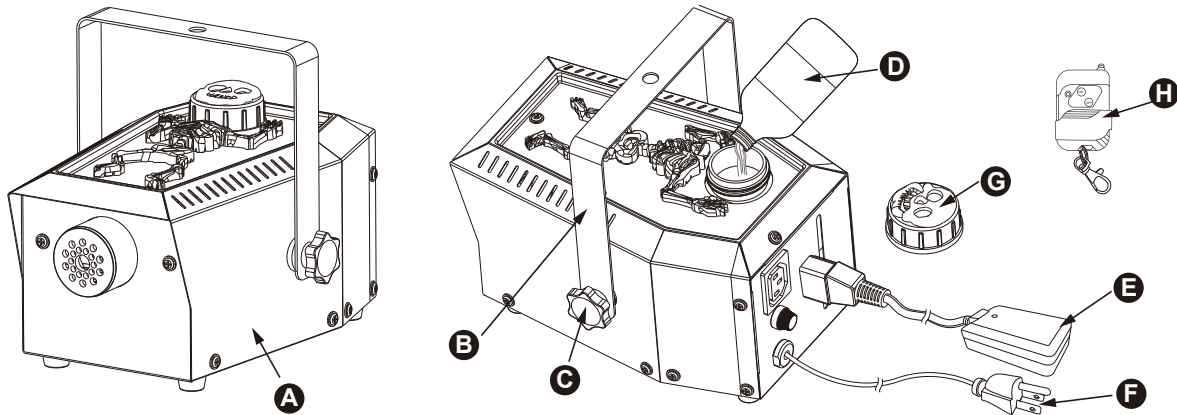

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT. CONTACT CUSTOMER SERVICE AT BOO@HAUNTEDHILLFARM.COM, OR BY PHONE FROM 9:00AM TO 5:00PM EST AT 1-888-840-4559.

 
CARE AND STORAGE INSTRUCTIONS

For indoor use only, Don't use it as a toy. Do not operate outdoors. When not in use, store this product in its original packaging. Keep away from heat and moisture. Important safety instruction. Save this instruction sheet for future reference.


IMPORTANT TIPS:

- The fog machine needs time to warm up before it can produce fog. This may take 3-5 minutes. The fog machine will be ready to produce fog when the light on the (E) Receiver lights up. When filled to the max fill line, the fog machine will run for approximately 90 minutes before running out of fog juice. Refill when fog juice has been depleted.
- To produce fog, when the indicator light on the (E) Receiver is on, locate the (H) Transmitter and push "ON". Fog will flow until the fog machine needs to warm up again. To stop the fog early, press "OFF".
- After each fog blast, the fog machine will need to warm up again. This can take 1-2 minutes. The fog machine will be ready to produce more fog when the light on the (E) Receiver lights up again.
- If you have any broken or missing parts, please contact customer service at customerservice@svichina.com.
- Always make sure there is enough Fog Liquid in the tank before using the fog machine.


ASSEMBLY INSTRUCTIONS

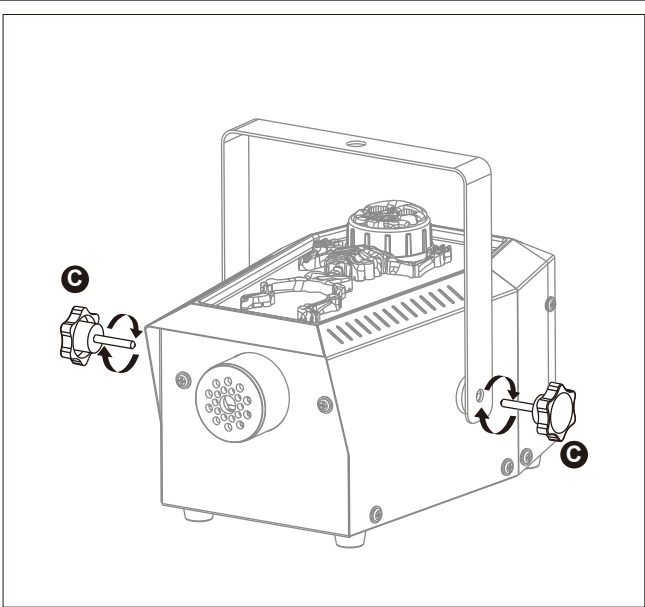

 
STEP 1
Fasten (C) Handle Screws.

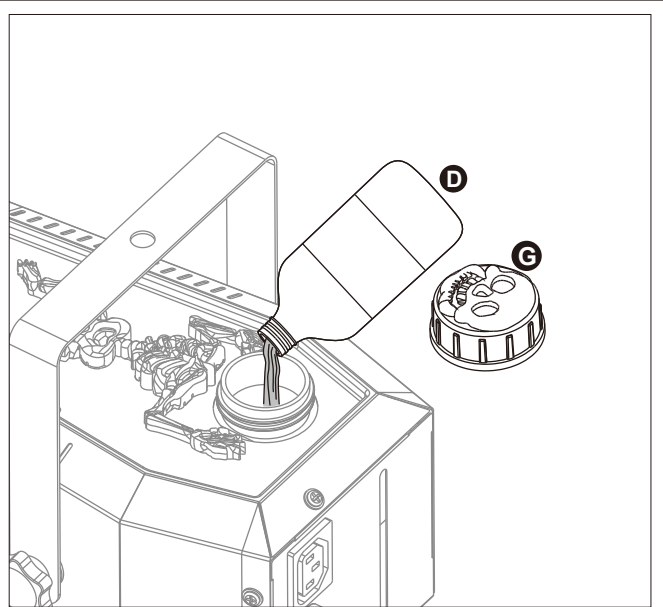

 STEP 2
Remove (G) Cap and add fog juice, do not spill or exceed Max fill line.

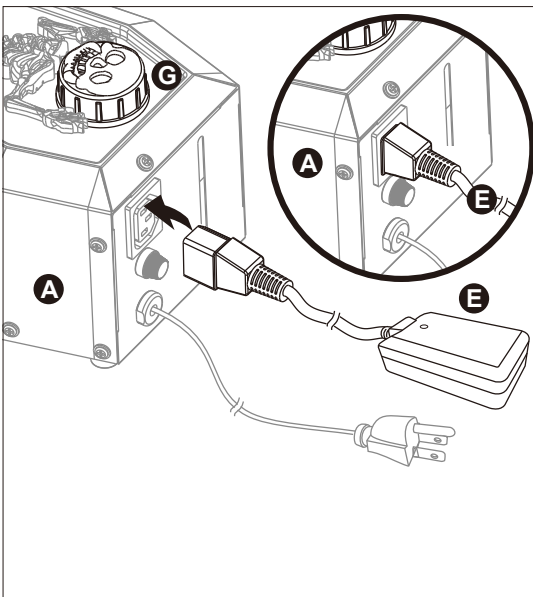

 STEP 3
Replace (G) Cap then plug (E) Receiver into (A) Fog Machine.

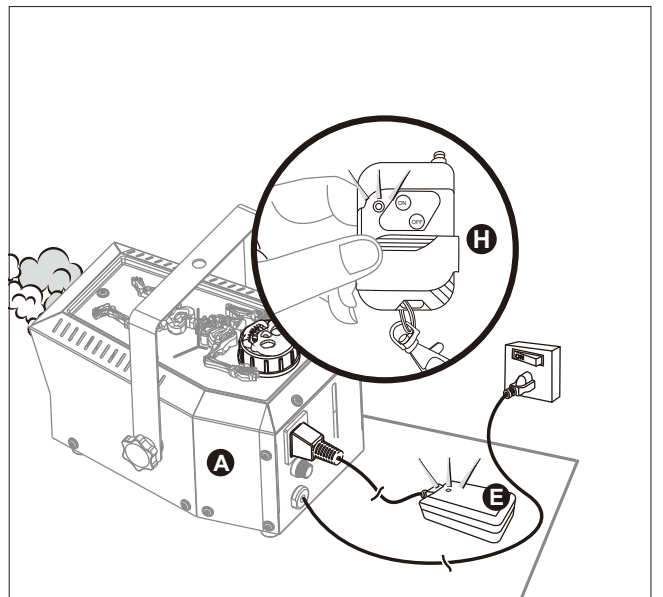

STEP 4
Plug (A) Fog Machine into outlet, wait until (E) Receiver lights up, then activate with (H) Transmitter. Press the "ON" button on the (H) Transmitter to activate fog only when the (E) Receiver light is on. When the (H) Transmitter is toggled "ON", the fog will flow until the (E) Receiver light turns off. The light will turn on again in 1-2 minutes after the (A) Fog Machine has warmed up again.

BATTERY REPLACEMENT INSTRUCTIONS

*Requires 1x23A (12V) Battery (Included)

 
Phillips Head Screwdriver required for assembly (Not Included).

Locate the battery compartment screw on the back of the Transmitter. Remove the battery compartment cover by using a small Phillips Head Screwdriver to unscrew the screw. After removing or installing the battery, place the battery compartment cover into position and secure the battery cover. **DO NOT** overtighten screw.

Battery installation and removal should be performed by an adult.

Use only batteries recommended in the instructions.

- Be mindful to insert batteries with the correct polarity as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the remote before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.

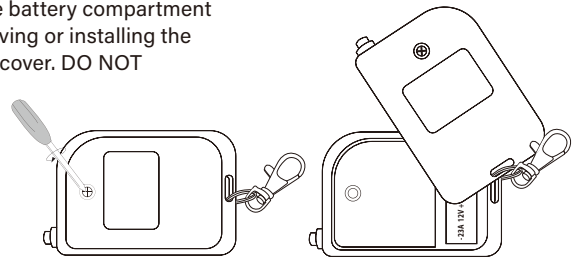

NOTE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

To prevent risk of personal injury, fire, and electric shock:

- **Slip hazard! Do not walk in front of during or after operation. Clean surface in front of fog machine with dry cloth after operation to prevent slip injuries. Place in area with low foot traffic.**
- Never leave unit unattended while plugged in. Unplug when not in use or refilling.
- Connect only to a properly grounded outlet.
- Place product on a flat, level **HARD** surface and connect the cord to prevent the product from overturning.
- For use only in covered areas. Keep unit dry, do not expose to rain or moisture.
- Leave enough space for good ventilation. Keep unit cool and away from other objects.
- Use only with Fog Liquid (sold separately).
- Do not operate unit without Fog Liquid.
- Pour Fog Liquid carefully to avoid spills which could result in electric shock. Do not use if liquid spills onto unit. Let unit dry completely before plugging in.
- Do not overfill the liquid.
- Keep away from flames and flammable/explosive substances to avoid fire or explosions. Never pour flammable liquids such as gas, perfume etc. into the fog machine.
- Keep product and Fog Liquid out of reach of children. Use only under adult supervision.
- Do not spray in the direction of flames or people. Stay at least 20 inches (50cm) from the nozzle at the front of the unit.

- Do not obstruct the nozzle.
- Do not open unit. No user serviceable parts inside, please refer to your vendor. Only an electrician can change the power cord.
- Clean unit before storage to avoid damages.

CAUTION

- Risk of burn, fire or electric shock.
- Please read instruction manual before using.
- Don't immerse in liquid.
- Not for space heating purposes.
- Changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

FUSE REPLACEMENT

If the Fog Machine does not work at all when it is connected to the power socket, then it is probably that the fuse has been broken.

- Risk of electric shock and fire. Disconnect from power socket before replacing the fuse.
- Turn the fuse knob counterclockwise to reveal the fuse.
- Replace the fuse with the same size and type fuse: 5A, 125V
- Place fuse in cover and reinstall by turning clockwise. Be sure not to over tighten.

ADDITIONAL INFORMATION

- (a) It is normal for condensation to appear on the nozzle of the Fog Machine.
- (b) A small amount of fog may spray during or after operation.

MAINTENANCE & SERVICING

Use of fog liquids other than Fog Liquid are not recommended and may result in blockage, leakage, or other damage to the unit.

INSPECTION

Before each use, check unit for any cracks in the enclosure, remote control, cords, and plugs. Make sure there are no exposed wires. Do not use if any of the above conditions are found.

CLEANING

Should you experience low fog output after many hours of continuous operation or after the machine has been idle or in storage for a long time, it is recommended to run a cleaning solution through the system to prevent the accumulation of particles in the heating element.

- (a) While the unit is unplugged and cool, empty all Fog Liquid from the machine and replace with a fog machine cleaning solution in the tank. Fog Machine Cleaning Fluid (not included) is recommended. Plug unit in and allow to warm as usual.
- (b) Run unit in a well-ventilated area until tank is empty.
- (c) Cleaning is now complete. All fog machines are prone to clogging due to the consistency of Fog Liquid and the high temperatures at which it vaporizes. However, a well-maintained machine should provide years of reliable use.

STORAGE

It is important to remove all fluid from the unit when storing for an extended period of time.

1. When the unit is unplugged and cool, empty all Fog Liquid from the machine. Plug in unit and allow to warm as usual.
2. Before storage, it is recommended to follow the CLEANING procedure available in this instruction sheet.
3. Run unit in a well-ventilated area for 10-seconds to confirm tank is empty and dry.
4. Store on a flat, level surface. Keep in a well-ventilated, cool and dry location.

For best performance, operate unit for 10-minutes every 3 months. Follow the Operation Instructions and Storage instructions accordingly.

TROUBLESHOOTING

Issue	Correction
Fog machine will not produce fog	· Ensure there is sufficient Fog Liquid in the tank. · Ensure the fog machine is plugged into a working outlet. · Ensure the fog machine has been given 3-5 minutes to heat up. · Ensure the light on the transmitter turns on when pressing the buttons. If not, try replacing the batteries. · Ensure the fuse is not blown. Follow instruction under Fuse Replacement section of manual. · Ensure you are standing close enough to the fog machine for the receiver to pick up the signal from the transmitter (remote).
Fog machine will not produce constant fog, it stops and starts	This is how the fog machine is supposed to work. You will need to wait for the machine to reheat between fog bursts. You can purchase a fog machine timer (sold separately) which will enable you to not have to press the button on the remote each time. However, the fog machine will still need to reheat between each burst of fog.
Fog output is low	· Try cleaning the machine (details in "Cleaning" section). · Ensure there is sufficient Fog Liquid in the tank.

TECHNICAL SPECIFICATIONS

FOG MACHINE

Item Code: 5724316
Model #: FM400-2-SA
Rating Voltage: AC120V, 60Hz
Power: 400W
Ambient Temperature: -10 ~ 45°C
Fuse: 5A, 125V
Preheat Time: 3 ~ 5 Minutes
Tank Capacity: 0.50 Liter
Dimensions: L237 × W150 × H194 mm
L9.3 × W5.9 × H7.6 inch

TRANSMITTER

Item Name: Transmitter
Working Voltage: 12V DC
Model Number: IL-1
Working Current: 15mA Max.
Require: Includes (1) 12 volt, type 23A battery.
Battery is Replaceable.

RECEIVER

Item Name: Receiver
Rating Voltage: AC120V, 60Hz
Model Number: FRC-4
Working Current: 50mA Max.

SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK CAREFULLY FOLLOW THESE INSTRUCTIONS

When using electrical products, basic precautions should always be practiced including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

Read and follow all instructions that are on the product or provided with the product.

For a cord-connected or direct plug-in power unit, do not use an extension cord.

Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.

Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.

For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

- This product is for decoration only and is not a toy. Small parts and choking hazard. Use caution with children under the age of 14.
- Do not position the decoration near candles, sources of heat, or in direct sunlight.
- The decoration cannot be connected to the power supply directly.
- Decoration should be on a level, stable surface to prevent it from falling over.
- This product is fragile and should be assembled with care.
- Surface washable only.
- Please follow the steps and requirements specified in the instruction to ensure safety and reliability during the installation.

WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**

Storage tips: We suggest saving the carton for storing your fog machine. Store in a cool, dry area where the temperature does not exceed 100°F.

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Haunted Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HAUNTED HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Boo@HauntedHillFarm.com