

# Haunted Hill Farm®

Presents our ghoulish collection of Halloween décor from

## FRASER HILL FARM

Thank you for choosing Haunted Hill Farm!  
If you have any questions, concerns or suggestions, please  
contact us directly.

**Boo@HauntedHillFarm.com** (Anytime)

**1-888-840-4559**

(9AM to 9PM Eastern Time, Monday - Friday)

(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

**Please do not return this item to the retailer.**

See the full Haunted Hill Farm collection and get online support for assembly, troubleshooting, care and maintenance at:

**[www.HauntedHillFarm.com](http://www.HauntedHillFarm.com)**

# IMPORTANT SAFETY INSTRUCTIONS

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

---

### CAUTION:

- The product and its adapter are intended for INDOOR & OUTDOOR use.
- Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources.
- Do not use product outdoors in case of extreme weather conditions.
- Keep the product well ventilated. Do not cover product with cloth, paper, or any material not part of the product when in use.
- Do not use with a voltage converter. Use only with the outdoor/indoor transformer that is provided.
- Do not leave product unattended when children are present.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Never operate the product if it has a damaged cord or plug. In case the external flexible cable or cord of the adapter is damaged: **DO NOT USE THAT DAMAGED ADAPTOR, DO NOT OPEN TO REWIRE! THROW ADAPTOR AWAY.**
- Use of product in extreme weather conditions if not recommended.
- Do not use this product for any purpose other than its intended use.
- Do not secure wiring of the product with sharp hooks or nails.
- Not intended for permanent installation.
- This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where children can reach it.

### CARE AND MAINTENANCE

---

- Before using or reusing, inspect product carefully. Discard any product that has cut, damaged or frayed wire insulation or cords, or exposed copper wire.
- When not in use, store neatly in a cool, dry location protected from sunlight.

# ASSEMBLY INSTRUCTIONS



---

**1. Remove all the parts from carton (as below).**

- Blow Mold Figurine
- 2PCS Sandbag (sand not included)
- Ground Stake Kit

**2. Inserting the batteries**

- Unscrew the cover for the battery compartment and insert 3. AA size batteries (not included) into the battery compartment. Align "+" and "-" as marked inside the battery compartment.
- Screw tight to close the battery compartment cover.
- Move the switch to "ON" position to light the mechanism.
- Move the switch to the "OFF" position to turn off the lights.

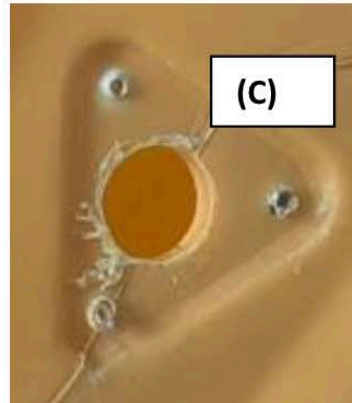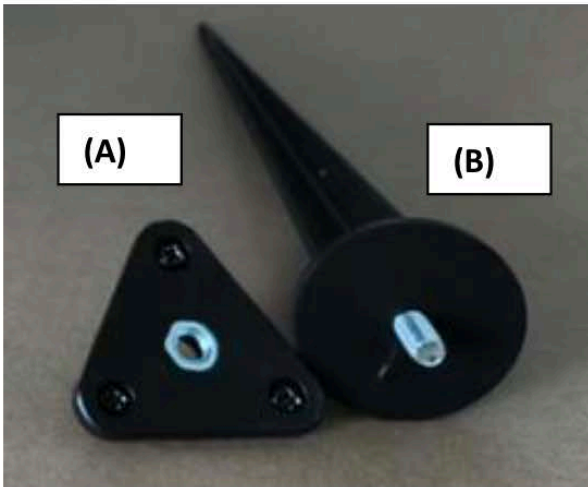

**3. If displaying your blow mold outdoors on a soft surface, use the provided ground stakes to stabilize the figurine**

- Align the stake holders with the pre-drilled holes on the blow mold (A & C)
- Secure each stake holder using the included screwdriver and three screws
- Insert the ground stake into the stake holders (B)
- Your blow mold is now ready for display

**4. If you choose to display your blow mold on hard surfaces, the included sandbags can be filled with sand and placed against the base or lower portion of the figure to provide additional stability and prevent movement.**

**DO NOT CONNECT THE POWER SUPPLY TO THE DECOR WHILE IN PACKAGING.**

## **TROUBLESHOOTING**

### **If the product does not light:**

1. Make sure batteries are inserted correctly. Make sure to align the "+" and "-" as marked inside the battery compartment.
2. Switch is in "OFF" position. Move the switch to the "ON" position.
3. Batteries are exhausted. Change to new batteries.

## **BATTERY INSTRUCTIONS**

1. Do not dispose of batteries into a fire. Batteries may explode or leak.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. Replace batteries of the same brand.
5. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
6. Remove fully discharged batteries immediately.
7. Remove all the batteries for storage of the unit to avoid battery leakage.
8. Batteries should be recycled or disposed of as per state and local guidelines.

## **SAVE THESE INSTRUCTIONS!**

# Haunted Hill Farm®

## Register your product today!

Congratulations on your new Haunted Hill Farm product! Register your item using the link below to activate your warranty and stay updated with product news, helpful tips, troubleshooting support, maintenance advice, and any important recall or safety notices.

<https://hauntedhillfarm.com/register-your-product>



---

## Warranty Information

Haunted Hill Farm provides a one-year Limited Warranty from the purchase date, covering repair or replacement of defective components. This warranty applies only to the original purchaser and requires the original sales receipt with the purchase date and location. Warranty coverage for replacements defaults to the original purchase date.

**Contact Warranty Services at: 1-888-840-4559**

**Email us at: [Boo@HauntedHillFarm.com](mailto:Boo@HauntedHillFarm.com)**

**[www.Hauntedhillfarm.com](http://www.Hauntedhillfarm.com)**

# 1-YEAR LIMITED WARRANTY

## “Limited” Warranty Program

For a period of one (1) year after purchase, Haunted Hill Farm (“Manufacturer”) will either repair or replace defective components in accordance with this Limited Warranty.

**Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.**

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser’s sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

### **Certain items are not covered by this warranty. These include, but are not limited to the following:**

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold “as is” or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer’s option.

**THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HAUNTED HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.**

**Boo@HauntedHillFarm.com**