

CLEANING

WARNING: Do not use abrasive cleansers. The unit is dishwasher safe (top rack only).

- Clean the unit soon after each use. This greatly simplifies the cleaning process.

1. Rotate the Handle a few times in order to remove the leftover fruit or vegetable. Discard the leftover pieces.
2. Remove the used blade from the unit. Refer to p.5 of the manual.
WARNING: Blades are extremely sharp, handle with care. Do not place fingers and hands on the blade itself, pick it up by the plastic frame.
3. Wash all parts in a mild soap solution or place in the dishwasher (top rack only). Do not use abrasive cleansers.
4. Wipe the Main unit with a soft damp cloth, if needed you may place in dashwasher (top rack only). Certain foods can discolor the main body and and the blades. Rub it gently with a soft cloth or sponge.

NUTRISLICER™ ITEM NO. 6091ENQ
DISTRIBUTED BY EMSON® NEW YORK, NY 10001, USA
©2024 EMSON® ALL RIGHTS RESERVED. MADE IN CHINA.

NutriSlicer™

ROTARY CHEESE GRATER

Shred Cheese,
Vegetables & More
Easily!



INSTRUCTION
MANUAL



3 STAINLESS STEEL BLADES



Fine Shredder



Coarse Shredder



Slicer

**Safer Slicing That
Protects Fingers**

**Cut Fruits, Vegetables
& Cheese Faster**



Before using NutriSlicer, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Close supervision is necessary when the unit is operated near children. Do not allow children to use this unit.
3. The use of accessories not recommended by the manufacturer may cause injuries to persons.
4. Do not use the unit for other than its intended use.
5. Avoid contact with sharp blades while in use to prevent injury.
6. To avoid injury, never put hands or sharp objects on the blade or touch the blade when the operating the unit.
7. Do not use fruits with hard seeds as it may damage the blades.
8. After slicing some vegetables and fruits, staining of the unit and blades may occur. It is normal and will not the performance of the unit.
9. Never feed fruit or vegetable by hand. Always use crank handle.
10. Do not use fingers to scrape food away from the stainless steel blade. Cut type injury may result.
11. Prior to using the device, always check to ensure that all parts are properly assembled.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
13. Do not clean the unit with any abrasive cleaning agents or steel wool.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY.

UNPACKING - BEFORE FIRST USE

PACKAGE CONTENTS: Main Unit, Slicer, Fine Shredder and Coarse Shredder blades.

Unpack the unit and all parts and remove all packaging materials. Before using the unit for the first time, wipe the surface of the main unit with damp cloth. Rinse all parts in warm soapy water prior to use. Dry all parts thoroughly. Refer to a full cleaning instructions if needed.

WARNING: Blades are extremely sharp, handle with care. Do not place fingers and hands on the blade itself, pick it up by the plastic frame.





1. Main Unit
2. Lock/Release lever - locks/releases suction for bottom of the unit
3. Handle - rotates the blade
4. Large Feeder - holds food to be cut
5. Angled Dispenser - releases cut up food
6. Food Pusher - helps to push the food down the feeder and towards the blade
7. Stainless Steel Fine Shredder blade (shown inside unit) - for fine shredding
8. Stainless Steel Coarse Shredder blade - perfect for salads
9. Stainless Steel Slicer blade - perfect for large slices
10. Base with suction - secures the unit to the surface

FULL UNIT ASSEMBLY

Note: Your unit may come fully assembled. Use the Assembly instructions to take the Nutrislicer apart for cleaning.


1. Insert the Angled Dispenser into the base. Slide it all the way in until it clicks. See **Diagram A**.
2. Select a blade and insert it into the Angled Dispenser. Push it all the way in until the end goes through the opening. See **Diagram B**.
3. Attach the Handle by aligning the square of the blade and square of the handle. Push handle into the blade until it clicks. See **Diagram C**. Place the Food Pusher inside the Feeder.
4. To change the blade unlock the handle. See **Diagram D**. While pressing and holding on the unlock button, pull on the handle to remove it from blade assembly.

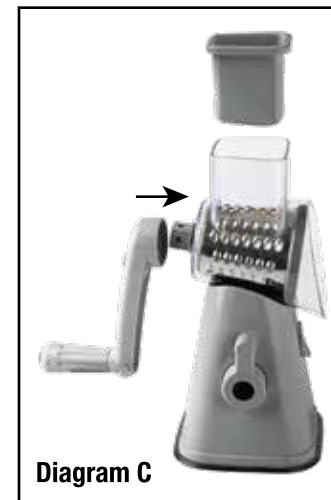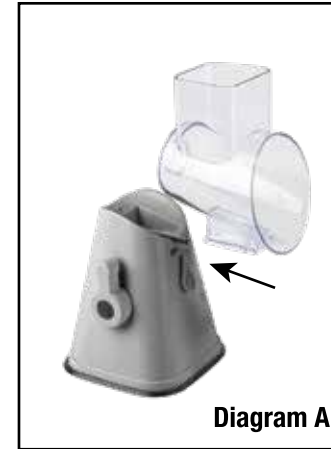

IMPORTANT: Always be extra careful when handling the blades. Blades are very sharp.


TO DISASSEMBLE

1. Unlock the handle. See **Diagrams D+E**. While pressing and holding on the unlock button, pull on the handle to remove it from blade assembly.
2. Next, remove the blade, set aside. See **Diagram F**.
3. To remove the Angled Dispenser from the base, slide down the release button with one hand and pull the Dispenser out. See **Diagram G**.

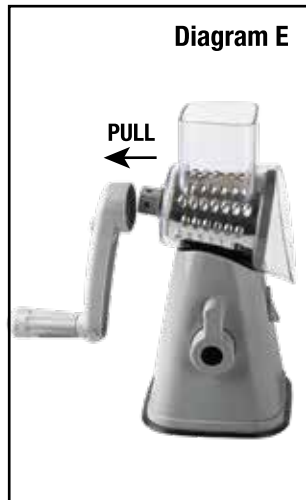

IMPORTANT: Always be extra careful when handling the blades. Blades are very sharp.

1. Place the appliance on a smooth, flat surface like a table or countertop. While using light force, firmly press down on the unit and turn the lever to LOCK position. See Diagram on right. This will activate the suction on the bottom of the base and ensure proper position for operation.
2. Select the desired blade (Slicer, Fine Shredder or Coarse Shredder blades), refer to page 3 for selection. See page 4 for correct assembly. **Important: Do not use fruits with hard seeds as it may damage the blades.**
3. Place desired food into the Large Feeder. Place the Food Pusher inside the Feeder to help guide the food towards the blade. While holding down the Food Pusher with one hand, turn the handle to start cutting food. In order to **cut thicker slices** using the Slicer blade, push the vegetable down firmly. Refer to Diagram on right.

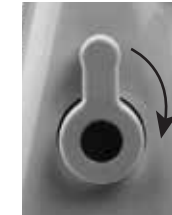

OPEN POSITION



LOCKED POSITION

