

USER MANUAL

SKU# 6020372



2500LB HEAVY DUTY PROFESSIONAL STEEL AUTO DOLLY SET



Operation Instruction Manual

Please read and save these instructions. Read through this owner's manual carefully before using product. Protect yourself and others by observing all safety information and warnings. Failure to comply with instructions could result in personal injury and/or damage to product or property. Please retain instructions for future reference.

Specifications

Maximum Weight Capacity	2500lb. (per Dolly)
Wheels	Two Swivel Casters with Locks Two Swivel Casters without Locks
Maximum Tire Width	16"

Important Safety Information

1. Study, understand, and follow all instructions before operating the device.
2. Do not exceed rated capacity.
3. Use only on a hard, level surface capable of supporting the load.
4. Before moving the vehicle, ensure that the vehicle wheels are centered and secure.
5. Activate the wheel and/or caster-locking devices after moving a vehicle.
6. Never work on, around, or under a vehicle supported by vehicle-moving dollies.
7. Failure to heed and understand these instructions may result in personal injury and/or property damage.
8. Use of this product is limited to transporting only.
9. No alterations shall be made to this product.
10. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly and use.
11. Keep clear of load's path while placing on and removing from dollies, and while moving.
12. Do not use for aircraft purposes.
13. Inspect before every use; do not use if parts are loose or damaged.
14. Be aware of dynamic loading! Sudden load movement may briefly create excess load causing product failure.
15. Use Vehicle Dollies to support FRONT or REAR end of the vehicle. Do not use Dollies to support one side of vehicle. Use four Dollies (two pairs) to support entire vehicle.
16. Read vehicle owner's manual and instruction manual for Jack (not included) for proper jacking positions before use.
17. Assemble only according to these instructions. Improper assembly can create hazards.
18. Keep assembly area clean and well lit.
19. Keep bystanders out of the area during assembly.
20. Do not assemble when tired or when under the influence of drugs or medication.
21. Weight capacity and other product capabilities apply to properly and completely assembled product only.
22. Position Dollies so that rails are parallel to the wheels.
23. Make sure each tire is centered on each Dolly used.
24. Move supported vehicle carefully and slowly. Keep all people and body parts out of path of moving vehicle.

25. Keep lifting area free of spectators and do not allow anyone into vehicle while on Dollies.
26. Use wheel chocks at opposite end of vehicle when lifting.
27. This product is not a toy. Do not allow children to play with or near this item.
28. Maintain product labels and nameplates. These carry important safety information.




SAVE THESE INSTRUCTIONS.

Assembly and Use Instructions

1. Insert Swivel Caster with Lock (2) through holes in V-Platform (1).
2. Fasten Caster with Lock (2) using Flat Washer (6), Lock Washer (5) and Nut (4). Tighten hardware securely. Repeat steps one and two to secure Swivel Caster without lock on other side. **See Diagram, below.**
3. Repeat for other Dolly.
4. Once Dollies are assembled, roll Dollies along surface to verify all connections are secure and Dollies roll freely.
5. Chock wheels (or chock dollies if another set of dollies is already in use) on opposite end of vehicle. Use appropriate jacks to safely lift front or rear end of vehicle. Place Dollies in position under raised wheels and lower vehicle slowly onto them.
6. If raising front and rear of vehicle, use jack to raise other end, remove wheel blocks, and set up four Dollies (sold in sets of two). Once vehicle is resting on all Dollies, carefully guide vehicle.

Parts List and Diagram

Part	Description	Qty
1	V-Platform	2
2	3" Swivel Caster with Lock	4
3	3" Swivel Caster without Lock	4
4	Nut 1/2"	8
5	Lock Washer 1/2"	8
6	Flat Washer 1/2"	8

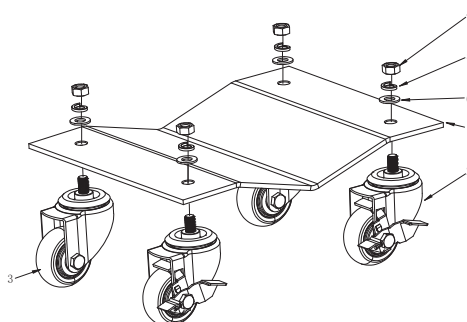



SKU# 6020372

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Distributed By:
TRACTOR SUPPLY COMPANY
5401 VIRGINIA WAY
BRENTWOOD, TN 37027
For customer support, call: 1-888-376-9601
www.TractorSupply.com
MADE IN VIETNAM