

Transportation and Storage

Secure the drum lift properly during transport to prevent movement or tipping.

Use appropriate straps or chains to fasten the lift to the transport vehicle.

Regularly inspect and maintain hydraulic components, especially before and after transportation.

Store the drum lift in a temperature-controlled environment to prevent freezing of hydraulic fluid or overheating, which may affect system performance.

Keep the lift in a dry location away from direct sunlight to prevent UV damage.

Warranty

This product includes a twelve (12) month warranty covering workmanship, excluding normal wear and tear. The warranty period begins on the purchase date and applies only to material defects and workmanship issues. It does not cover damage caused by improper use or modifications. Any tampering or operation outside the specifications of this manual will void the warranty.