

## Storage

- 1) Clean thoroughly all components before storage.
- 2) Store all components separately in a dry area at not less than -10°C.

## 10. WARRANTY

Twelve (12) months for workmanship of the product, except for wearing parts. Warranty period starts from the product purchase date. Warranty covers material quality and workmanship only. Warranty does not cover product for issues caused by improper usage or any operation not in accordance with the specifications of this manual. Any modification or tampering with the product in any way voids the warranty.

## 11. TROUBLE SHOOTING

Problem(s)	Possible Cause	Corrective Action
<b>The power cart does not run.</b>	Battery is not charged.	Charge the battery pack according to the instructions included with your model.
	The wire is loose.	Check all the connectors to see if any parts are loose.
	The controller is damaged.	Replace the damaged controller.
<b>The power cart runs sluggishly.</b>	Battery volume is low.	See the battery indicator to check the volume. Charge the battery pack according to the instructions included with your model.
	The battery is old and does not accept full charge.	Replace the battery with a new one.
	The conditions are too stressful for your power cart.	The cart is intended for residential use. If slopes are too steep or the terrain too bumpy, your cart might experience a noticeable decrease in performance.