

Instructions for Use

1. **Unwinding:** Manually pull the power cord out from the reel to the desired length.
2. **Powering:** Plug the reel's main cord into a 125V power source. Use the four outlets on the hub for your devices.
3. **USB Charging:** Utilize the integrated USB ports for charging devices.
4. **Rewinding:** Turn the manual hand crank clockwise to wind the cord back onto the reel.