

Storage

1. When storing the equipment, ensure there is no residual gasoline or oil inside, and that the carburetor is free of gasoline. It is prohibited to store fuel in enclosed spaces, as fuel is toxic to humans and animals and poses a fire hazard.
2. When storing the product for an extended period, cover it with a dust cover to prevent dust accumulation.
3. It is recommended to store the equipment in a dry, well-ventilated environment, avoiding prolonged exposure to humid conditions.

WARNING

1. Check all fasteners to ensure that all bolts and nuts are tight.
2. Inspect the intake port to confirm there are no foreign objects.
3. Examine all hoses to ensure they are not aging or detaching.
4. Check the engine oil lines for blockages; lubricate the lines if necessary.
5. Inspect the engine oil tank for any residual gasoline; if present, drain it completely.
6. Check the carburetor for any residual liquids; if there are remnants, empty them out and clean the carburetor if necessary.

Warranty

Twelve (12) months for workmanship of the product, except for wearing parts. Warranty period starts from the product purchase date. Warranty covers material quality and workmanship only.

Warranty does not cover product for issues caused by improper usage or any operation not in accordance with the specifications of this manual. Any modification or tampering with the product in any way voids the warranty.

Troubleshooting

1. Regular maintenance will extend the life of your equipment. However, prolonged or continuous use may eventually require servicing to ensure continued performance.
2. The troubleshooting guide below outlines the most common issues, their possible causes, and recommended solutions.
3. Refer to the following pages for instructions on how to perform basic maintenance and adjustments. If preferred, these tasks may also be completed by your local service provider.

WARNING

- 1. TO AVOID SERIOUS INJURY, PERFORM MAINTENANCE ON THE UNIT ONLY WHEN THE ENGINE IS STOPPED.**
- 2. ALWAYS DISCONNECT THE SPARK PLUG WIRE AND FASTEN IT AWAY FROM THE PLUG BEFORE BEGINNING THE MAINTENANCE, TO PREVENT ACCIDENTAL STARTING OF THE ENGINE.**