

### MONTHLY MAINTENANCE

Monthly cylinder lubrication and pumping mechanism maintenance is recommended, only use light oil. Be aware that any dirt, rust, etc. can damage the internal components.

### YEARLY MAINTENANCE

For best performance and longest product life, hydraulic jack oil needs to be changed, at least once a year.

### ADDING OIL

1. With saddle fully lowered.
2. Remove the oil filler plug.
3. Fill, until oil reached the lower rim of the oil plug.
4. Reinstall oil filler plug.
5. Follow BLEEDING AIR procedure.

### REPLACING/CHANGING OIL

1. Fully lower the saddle.
2. Remove the oil filler plug.
3. Lay the floor jack on its side.
4. Drain the fluid into a suitable container.
5. Fill with new oil, until it reached the lower rim of the oil plug.
6. Reinstall oil filler plug.
7. Follow BLEEDING AIR procedure.

**NOTE: Disposal of hydraulic oil fluid should be always done in accordance with your local regulations.**

### BLEEDING AIR

1. Open the release valve by turning the lifting arm counterclockwise.
2. Pump for 6 to 8 full strokes to eliminate any air in the system.
3. Open oil filler plug to allow the trapped air to escape.
4. Close back the oil filler plug.

**Note: Before putting into use, always test several times for proper operation. Repeat if necessary.**



