


### MFJ-P2T, MFJ-P3T, MFJ-PL2T

**Note : Never touch the adjustment screws, it will modify the jack's lifting capacity and can result in accidents and injuries.**

1. Make sure that the retaining device has been removed from the arm base.

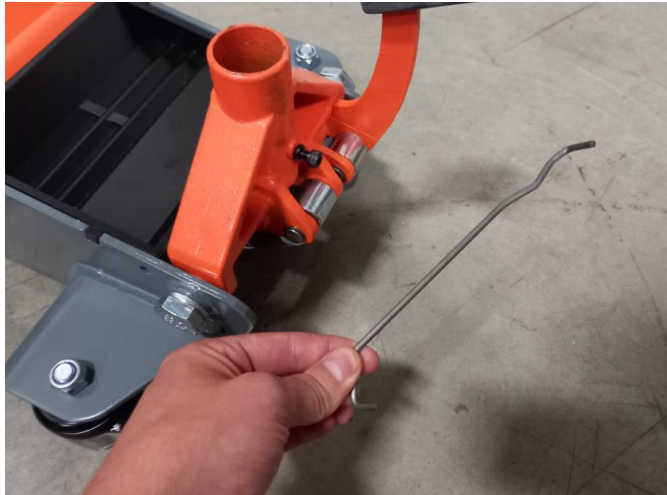

2. Check that the handle is correctly positioned inside the base. It should be secured with the provided fastener.



3. If you have problems with lifting, remove the panel cover and make sure the pressure relief valve is not stuck. While turning the T handle, the valve mechanism should turn and return to position freely.



If the valve mechanism does not return freely, slightly unscrew the guiding screw.



4. If the pressure relief valve is working correctly, make sure the oil level is topped and there is no air trapped in the system. See user manual for procedure.