





Assembly Instructions

Caution: You must read this before you proceed

Caution: Important Safety Instructions


- This product is for indoor use only
- This seasonal use product is not intended for permanent installation or use.
- When decorating trees, use miniature light bulb strings or LED light strings only.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat
- Do not secure included wiring with staples or nails. Do not place wiring on sharp hooks or nails
- Unplug this tree when leaving the house, when retiring for the night, or if otherwise leaving unattended
- **CAUTION:** This is an electrical product, not a toy. To minimize risk of fire, burns, personal injury, or electric shock, do not play with this product or place within reach of small children
- Do not allow lamps to rest on the supply cord or on any wire
- Do not use this tree for any other use than its intended decorative purpose
- Do not hang ornaments or other objects from cords, wires, or light strings
- Never operate this product if the power cord or plug is damaged. Inspect the power cord and plug before each use.
- Use only manufacturer specified replacement bulbs
- Read and follow all instructions that are on this product or provided with the product
- **USE AND CARE INSTRUCTIONS**
- When storing your tree, to avoid undue strain or stress on the product conductors, connections, and wires, when storing your tree, ensure that all pieces are fully removed
- When not in use, store neatly in a cool, dry location protected from sunlight

Part List

Label	Picture	Description	QTY
A		Top Tree Section (larger Trees include one or more Sections)	1
B		Metal Tree Stand	1

Assembly Steps

Step 1

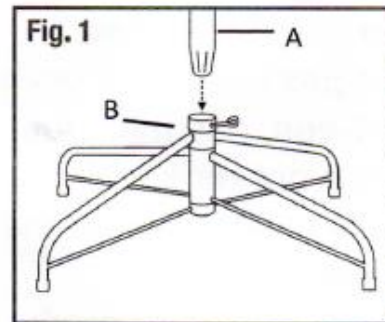

Each carton contains one top tree section (A) or one bottom tree section and a metal tree stand (B).
Larger trees include one or more middle sections

Unfold metal stand (B) and insert the eye bolt



Remove packing material from ends of poles

Insert bottom section pole into tree stand, ensuring that it is seated properly (fig. 1)

Tighten eye bolt

WARNING: Do not use excessive force to assemble base. Breakage may occur

Step 2

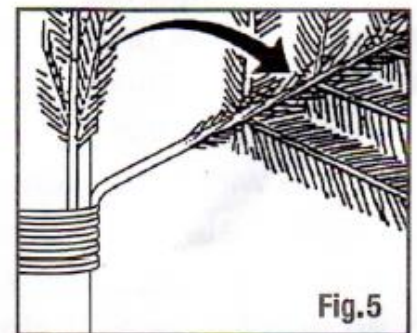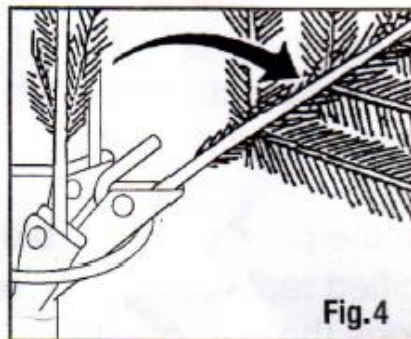



Insert top tree section into green plastic opening of lower tree assembly. This is the "pole cap" which keeps top tree section securely in place (fig. 3). For larger trees with middle section, carefully insert middle section pole(s) into bottom section pole (fig. 4). Finally, insert top section into pole cap

Optional: Lubricating middle section pole ends prior to assembly will make sections easier to separate when disassembling for storage.

Branches should fall into place during assembly. If any branches remain upright, gently lower them into proper position (fig. 5).

Shaping Instructions

Shaping the tree branches is the final step of assembly. The care and attention spent on this step will result in a beautiful and appealing holiday centerpiece.

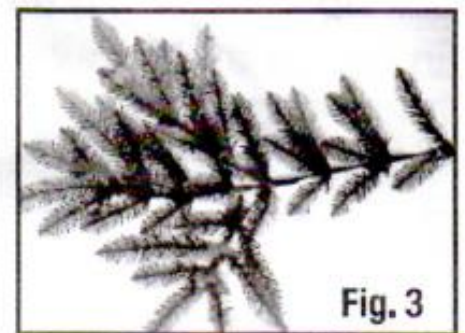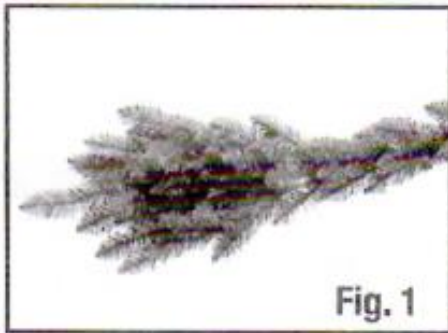

When shipped from the factory, the tips of each branch are compressed to the center (fig. 1). To give the tree a natural look, each branch tip must be shaped to its proper position. To achieve this, gently grasp the left and right wing tips and spread them out away from the center (fig 2).

Each individual tip should then be spread out separately. Bend tips slightly upward to enhance with a more natural appearance. Fig. 3 depicts a typical tree branch after shaping. Branches closer to the top will not have wing tips, but will otherwise shape in the same manner as lower sections.

Pre-Lit Hinged Trees

Fig.6



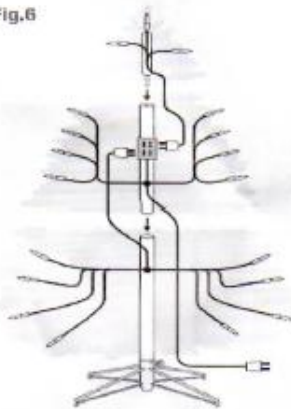


Fig.7

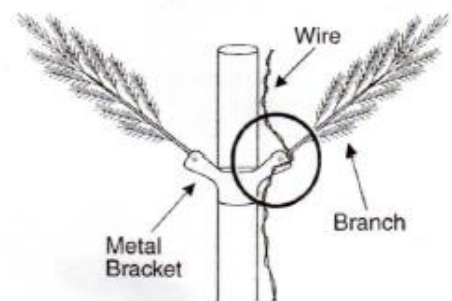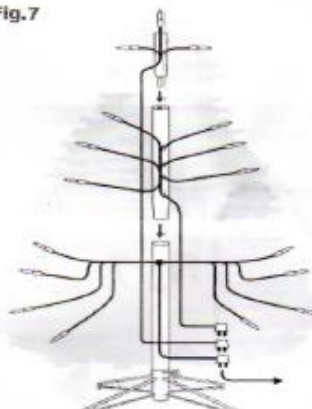

Style 1: These trees contain a single extension cord that runs from the center of the tree to the electrical outlet. All light strings will plug into the single cord (fig. 6).

Style 2: The light string cords from all sections should be pulled down through the center of the tree. Cords can then be plugged into each other and then into an extension cord to power supply (fig. 7)




IMPORTANT NOTE: Use extreme caution when lowering branches. Wire can become tangled in gap between branch and metal bracket

Storage

Remove all holiday decorations. Gently press tips back into center of branches. Raise all branches to original upright position, taking care not to place undue pressure on the attached ends of the branches

When disassembling tree, a twisting motion will help to separate the sections from one another. All tree parts can be replaced in carton and should be stored in a cool, dry place

Bulb Replacement Instructions

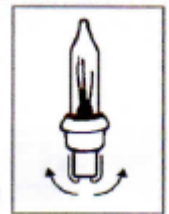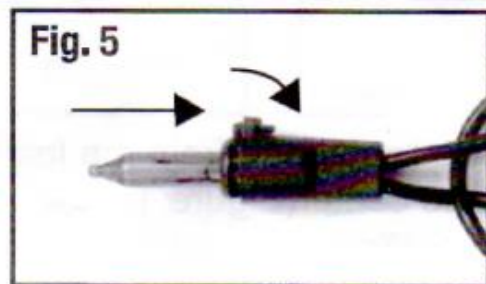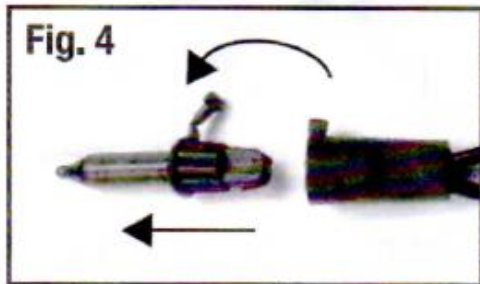



Unplug light string from power source

Pull up on the bulb lock to unlatch bulb from the bulb socket. Gently pull the bulb straight out (fig. 4)

Before inserting the new bulb into socket, ensure that the two wires on either side of the bulb base are oriented straight up and flush with the base (refer to diagram above next to fig. 5)

Carefully insert new bulb into socket and push down base lock until it snaps into place (fig. 5)

Fuse Replacement Instructions

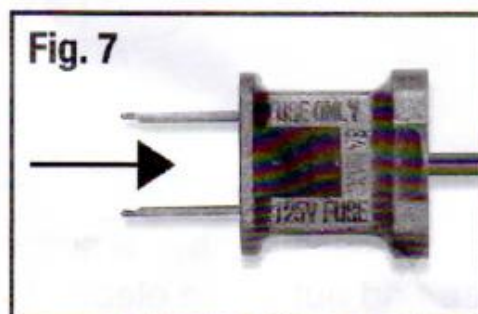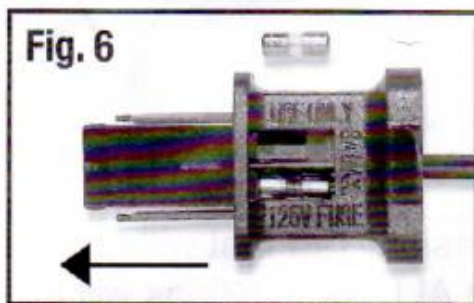

Unplug light string from power source

Fuses are located in light string plug. Slide the fuse access cover away from cord side in direction of arrow (fig. 6) exposing fuses

Remove fuses from compartment and examine. Replace burnt out fuse with new one

Close fuse compartment by sliding access cover back in toward cord side of plug (fig. 7)

Care & Maintenance

Wipe branches clean with a soft cloth

If branches are extra dirty or dull, use warm water and a few drops of dishwashing soap in a spray bottle to spray stained areas of tree and wipe with a soft cloth. Allow tree to dry thoroughly before decorating

Pack individual sections of tree in plastic bags or old bedsheets when storing to protect them from accumulating additional dust and dirt

Exposure to heat or humidity may cause material to warp from its original shape

NO WARRANTY

PRODUCT SOLD AS-IS

This product is sold and delivered on an "AS-IS" and "WITH ALL FAULTS" basis. **Season4Decor** makes no representations or warranties of any kind, whether express or implied.

This product is intended for limited, seasonal use.

By purchasing and using this product, you acknowledge that you assume all risks associated with its temporary and seasonal use.

To the maximum extent permitted by applicable law, in no event shall **Season4Decor** be liable for any indirect, incidental, special, or consequential damages arising from the use of this product.