 




62in Animated Skeleton Cowboy

Instruction Manual

SKU# 6044862







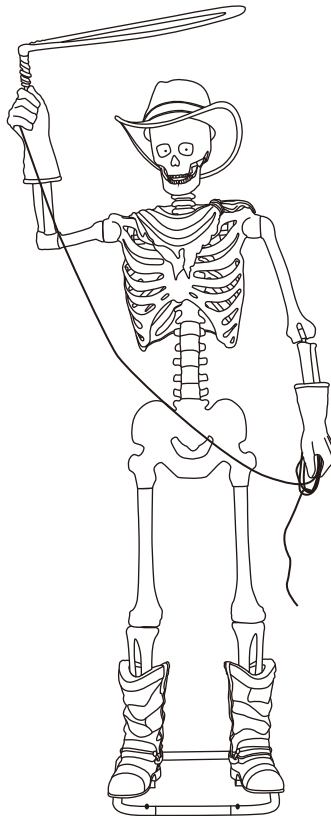


For Decoration Only.
Not a Toy.
Not intended for children.

Distributed by TRACTOR SUPPLY COMPANY
5401 Virginia Way, Brentwood TN 37027
For customer support call 1-888-376-9601
www.TractorSupply.com
MADE IN CHINA



PARTS LIST:

- | | |
|------------------------------|--|
| A. Base - Right X1 | J Left Femur X1 |
| B. Base - Left X1 | K. Body with Head X1 |
| C. Base Connectors X2 | L. Right Arm and Left Arm with Lasso X1 |
| D. Leg Support Rod X2 | M. Hat X1 |
| E. Right Boot X1 | N. Spin the Lasso X1 |
| F. Left Boot X1 | O. AC/DC Adapter & Cable X1 |
| G. Right Shin X1 | P. Disassembly Tool X1 |
| H. Left Shin X1 | Q. TRY ME Step Button X1 |
| I. Right Femur X1 | R. Ground Stakes X2 |

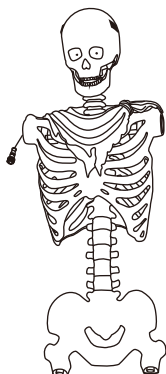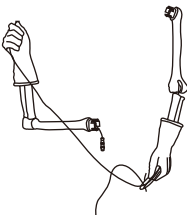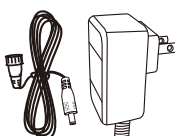       A 	B 	C 	D 	E 
F 	G 	H 	I 	J 
K 	L 	M 	N 	O 
	P 	Q 	R 	





ASSEMBLY:

  NOTE: Throughout the instructions, Right and Left are from the SKELETON COWBOY face forward point of view.

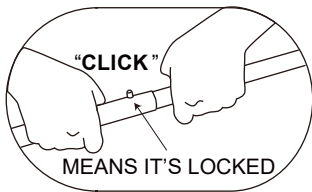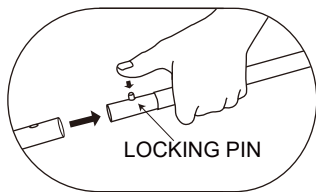





NOTE:

    Follow this 'Click Lock' procedure for all Support Frame assembly.

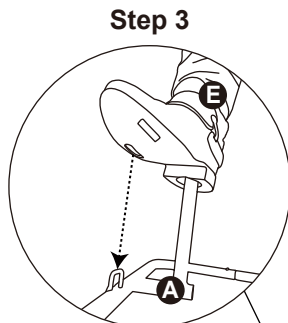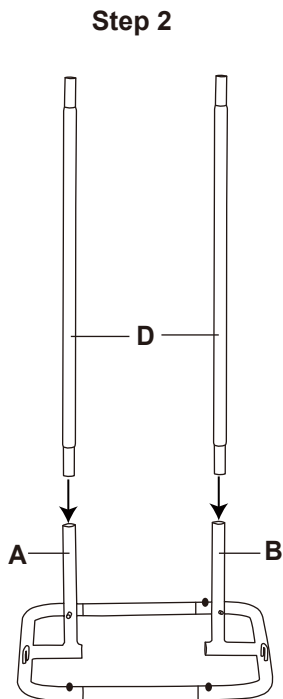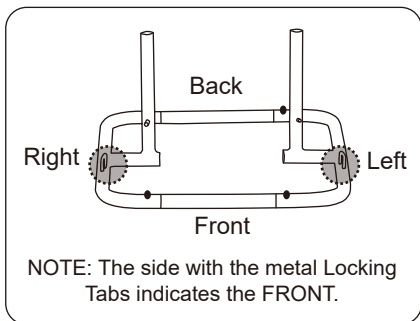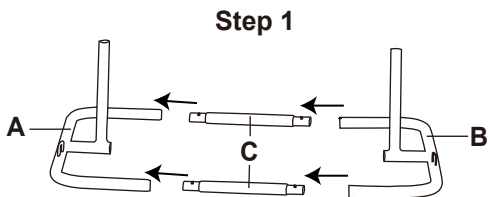

    Align the slot on the bottom of each Boot (E & F) with the metal Locking Tab on the Base. Slide the Boot down firmly until it is fully seated.

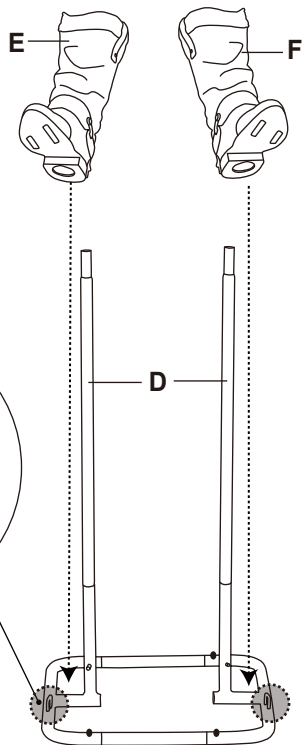

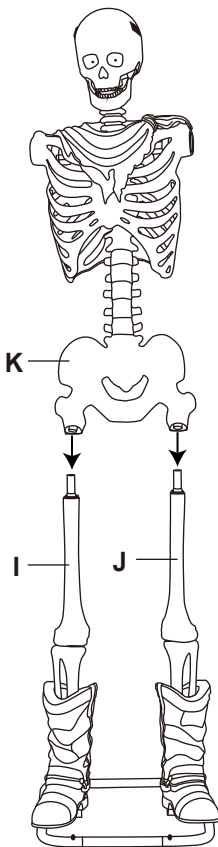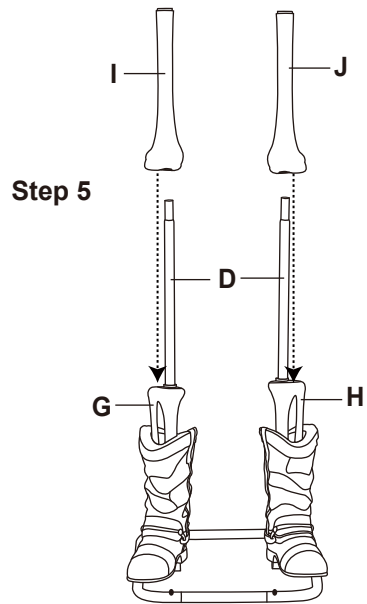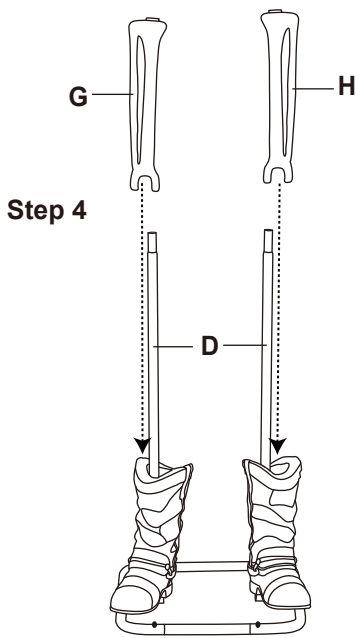

Step 6 Attach Hip Joint onto Skeleton Legs

* 2 people recommended for this assembly

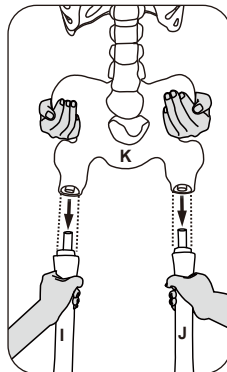 


Fig 1 - Line up Slots on bottom of Hip Joint with the top of Leg Struts.

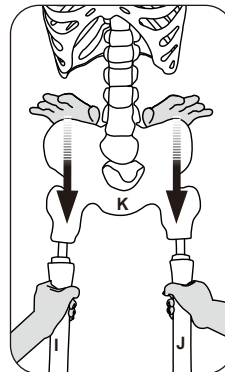 


Fig 2 - Press down firmly until you hear a 'clicking' sound on both sides. This will take some downwards pressure to secure both legs in place.



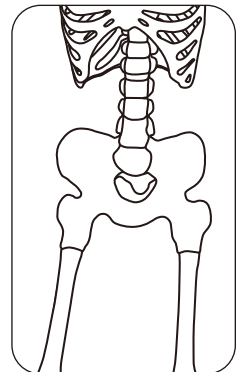 


Fig 3 - Ensure the legs are joined properly with a tight and aligned fit.

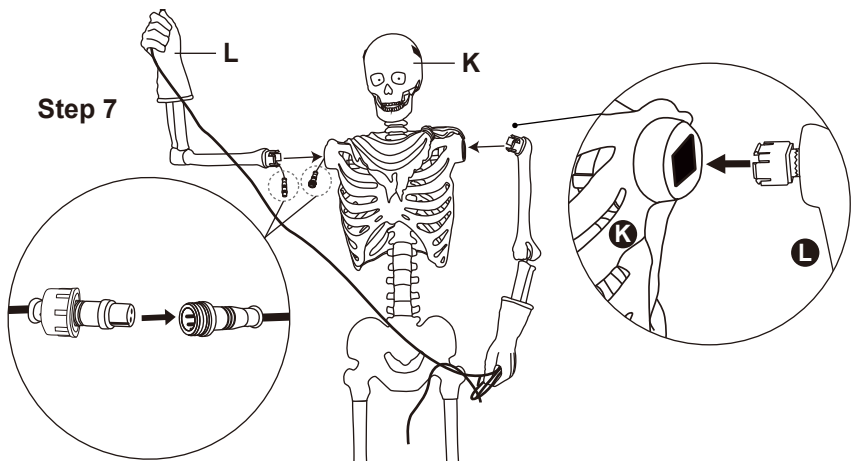 


 Join Push-In Plug Connectors on cable ends from the Right Shoulder to the Right Arm, secure with Turn Lock Fastener.


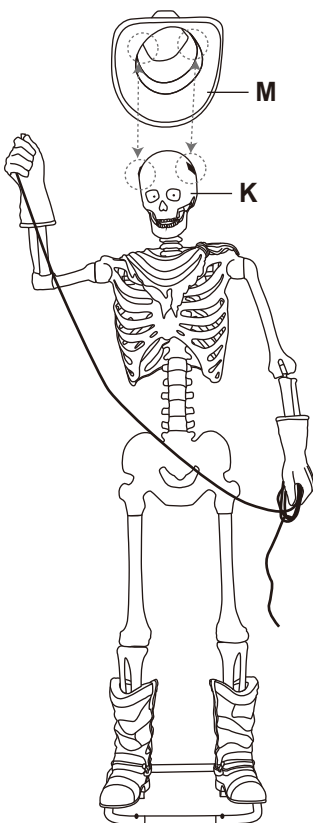


Step 8

 Secure Hat (M) by sticking the 2x Hook & Loop Strips at the left and right side to the corresponding strips on the Head (K). Arrange the head as desired.

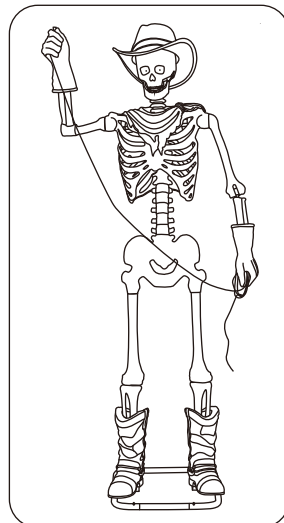


View of partially assembled Skeleton

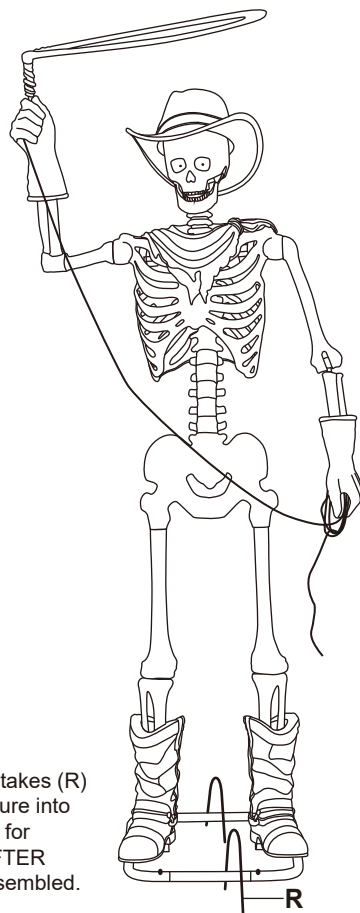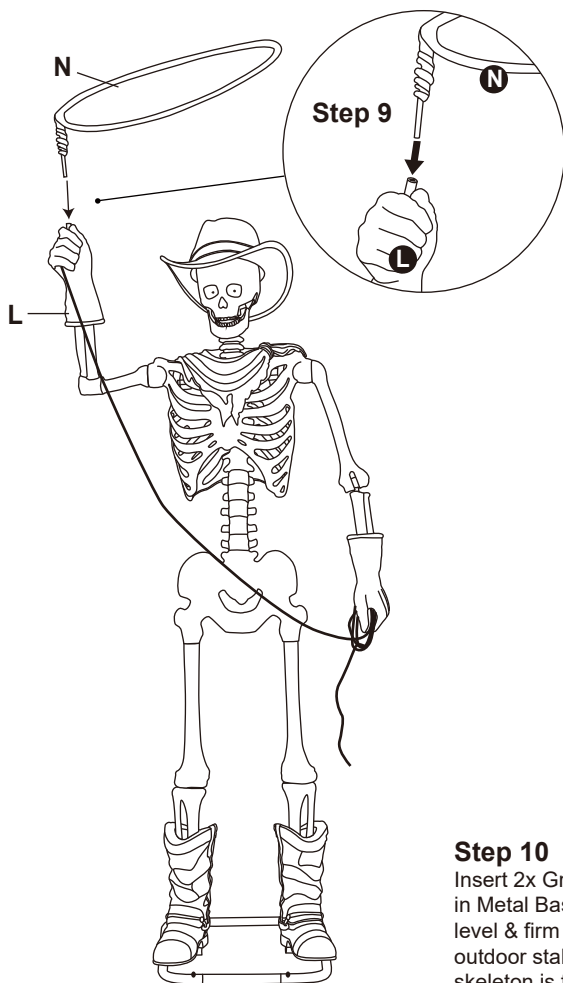  

Step 10

 Insert 2x Ground Stakes (R) in Metal Base. Secure into level & firm ground for outdoor stability AFTER skeleton is fully assembled.

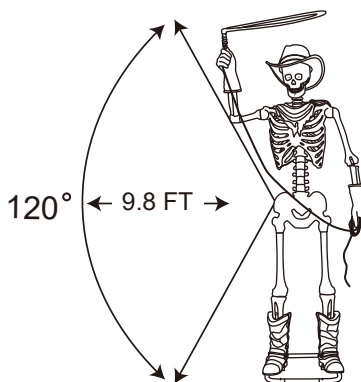



Motion Sensor

Located inside the hip joint

DISASSEMBLY AND STORAGE:

POSEABLE LEFT ARM

  Once the product is fully assembled, the Skeleton's left arm is poseable. You can adjust the arm to create various poses.

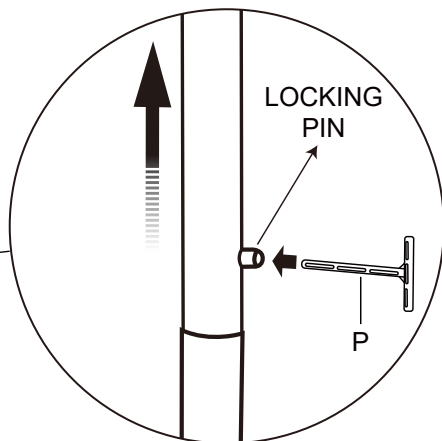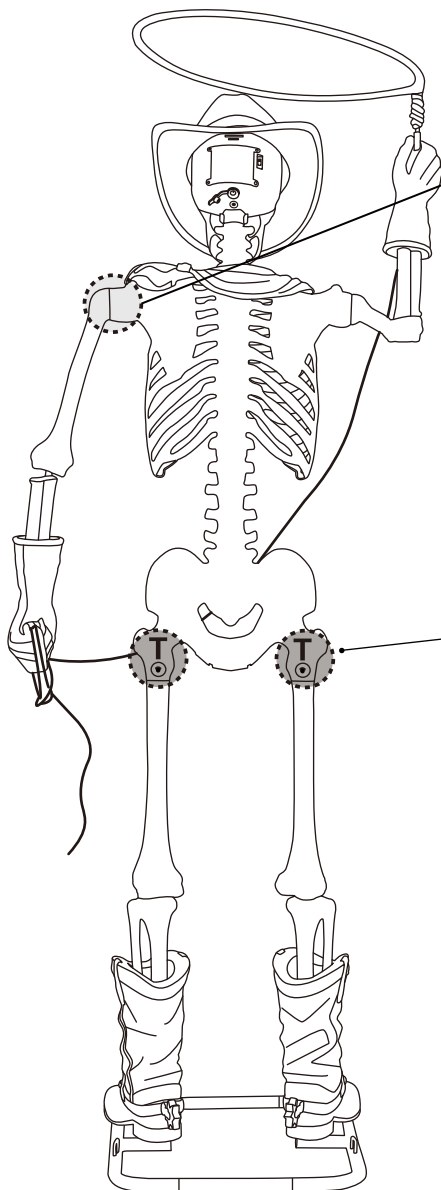


When disassembling the Skeleton

Use the Disassembly Tool (P) to depress the locking pins fully to then separate parts .

The location for each of the locking pins can be identified by the letter "T" sticker attached next to each of the access holes on the Skeleton, as shown.

When not in use, store this product in its original packaging. Keep away from heat and moisture.

 OPERATION INSTRUCTIONS:

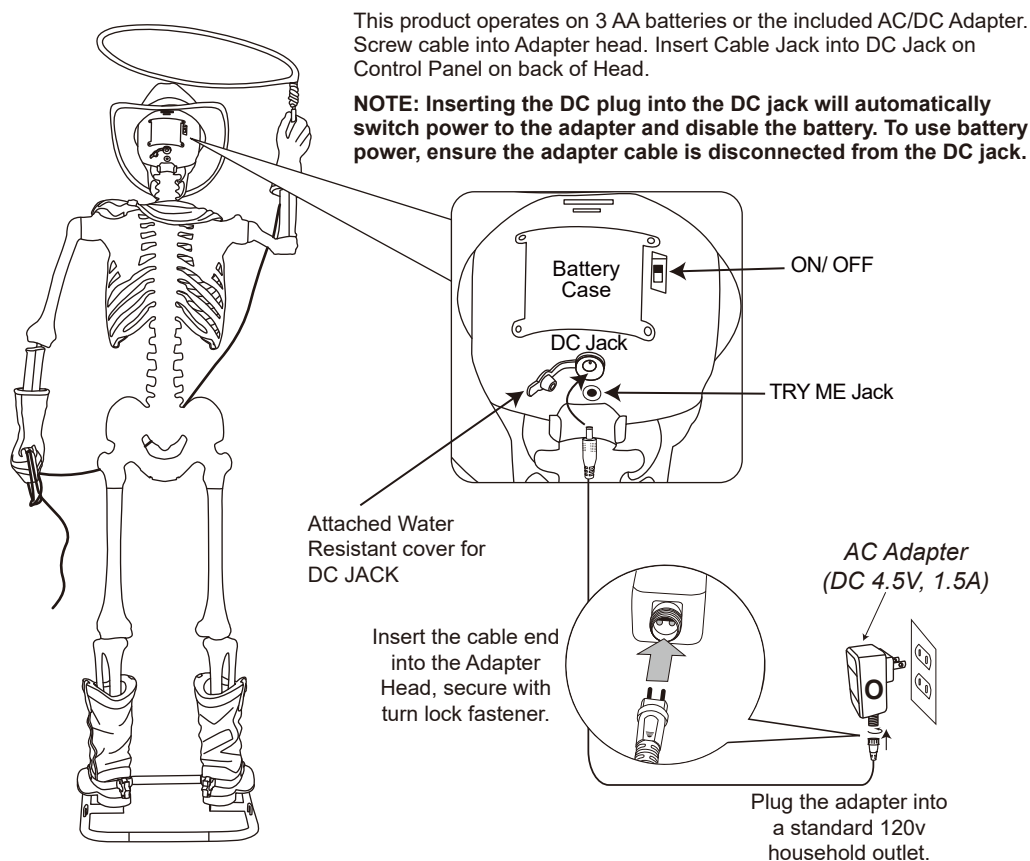

BATTERY REPLACEMENT

1. Locate the battery compartment at the back of the head. Using a small screwdriver, remove the safety screw located on the battery compartment cover.
2. Remove cover and clean both ends of the battery contacts and also the contacts of the device prior to installing the batteries. Insert (3) AA batteries with correct polarity.
3. Replace cover and safety screw.
4. Replace batteries if movement slows or lights dim.
5. Remove batteries if the item will not be used for an extended period of time.

ITEM FUNCTION:

ON

Move the switch into the "ON" position to activate the "Motion Activated" function. When activated, the unit will come to life. The unit will play the full version of sound, motion and lights. (Note: The "Motion Sensor" is activate at angle 120° and the detection zone within 9.8 feet).

OFF

Move the switch in the "OFF" position to activate the Try-Me feature and then press the large Try Me Button for demonstration.

Please read instructions carefully before use.

Retain for future reference.



WARNING: This is not a toy and is for decorative purposes only. For indoor and outdoor covered use. This item is not intended for use by children under the age of 14 years. Do not place product near an open fire or heat source such as a radiator, stove, etc.

WARNING

This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.
4. Strangulation Hazard: This product contains long cords. To prevent strangulation, do not place the reins around the neck. Keep away from young children. This is not a toy.

SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not display figure near any heat source such as radiators, stoves, fireplaces, etc.
3. Display should be set up by a qualified person only. Do not attempt to set up this unit beyond what is described in the operating instructions.
4. Take extra care when displaying any figure that may contain small parts around small children.
5. Use of this decoration should always be supervised by an adult.
6. Unplug AC/DC adapter when not in use.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be practiced including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
2. Read and follow all instructions that are on the product or provided with the product.
3. Do not use an extension cord.
4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
6. Do not install or use within 10 feet of a pool.
7. Do not use in a bathroom.
8. **WARNING:** Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
9. **WARNING:** Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
10. **WARNING:** Risk of Electric Shock. Mount the unit at a height greater than 1 foot from the ground surface.
11. Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

WARNING: SEVERE WEATHER USE

Do not expose this product to high winds, heavy rain, or blizzards. It is not designed for use in severe weather. To prevent damage, you must move this product indoors before severe weather is forecast. Damage caused by failure to follow these instructions is not covered by the warranty.

BATTERY USAGE:

1. Battery hazardous if swallowed. Keep battery away from children. This product is not a toy.
2. Ensure battery contacts are clean and free of debris.
3. Install battery according to correct polarity (+/-).
4. DO NOT mix old and new battery.
5. DO NOT mix alkaline, standard (carbon-zinc) or other battery.
6. DO NOT mix rechargeable and non-rechargeable battery.
7. Remove battery when consumed or while product is not in use for extended period of time.
8. Battery must be recycled or disposed of properly, in accordance with all state and local regulations.
DO NOT crush, puncture, or incinerate.

RECYCLE YOUR BATTERIES: To help protect our environment, we recommend that all batteries be recycled. You can find a local recycling center by going to:
<http://earth911.com/hazardous/single-use-batteries/> Or, in the United States call 1-800-CLEANUP for a recycling location near you.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
“(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”

Responsible Party-U.S. Contact Information
TRACTOR SUPPLY COMPANY 5401 VIRGINIA WAY, BRENTWOOD TN 37027
For Customer Support
Call:1-888-376-9601

TROUBLE SHOOTING:

Problem	Solution
The product does not work	1. Check all wire connections and make sure all parts are securely attached.
	2. Check and make sure the ON/OFF switch is in the “ON” position.
	3. When using the batteries: Check to see if the positive and negative terminals of the batteries are installed correctly. The batteries could be drained. Replace with new batteries and try again.
	4. When using the Adapter: Check to make sure the adapter is connected to a working power source. Make sure the adapter is plugged into a standard 120V household outlet.
The Motion Sensor does not work	1. Check to see that the switch is placed in the “ON” position only. 2. Change the product placement environment and try again. 3. Check to see if the ambient temperature is too high. Place the product in a normal temperature environment.