



INSTRUCTIONS: Requires 3 AA batteries (included). **NOTE:** Unplug “try-me” button and discard. This button is for in-store demonstration purposes only and is not part of the actual item. 1. Carefully remove product from package. 2. Battery compartment is located underneath item. See illustration to insert batteries. 3. For motion and sound activation, slide two-way toggle switch to the “SENSOR” position. Wave hand near item or walk by to activate. Move switch to the “OFF” position to activate the “Try me !” feature. 4. Replace batteries if movement slows or sound becomes distorted. 5. Do not interfere with moving parts as this may damage your item. **BATTERY USAGE:** See illustration. 1. Keep these instructions for future reference because they contain important information. 2. May explode or leak and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, inserted backwards or disassembled. 3. Products that contain batteries should not be disposed of in fire. The batteries inside may explode or leak. 4. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 5. Do not mix old and new batteries. Replace all batteries of a set at the same time. 6. Use only batteries of the same or

equivalent type as recommended by the manufacturer. 7. Be sure to insert batteries with correct polarities and always follow manufacturers' instructions. 8. Remove exhausted batteries from product promptly. 9. Do not short-circuit supply terminals. 10. Remove batteries before storage or extended periods of non-usage. 11. Clean the contacts on the batteries and the device prior to battery installation. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are not recommended for use in this product. If rechargeable batteries are being used, however, please follow these guidelines. (1). Rechargeable batteries should be removed from the product before being charged. (2). Rechargeable batteries should only be charged under adult supervision. **SAFETY WARNING:** Remove all plastic fasteners and tags. These are part of the packaging and should be discarded. **ATTENTION:** Includes 3 AA batteries for in-store demonstration only. Manufacturer makes no guarantee as to the demonstration battery life. The consumer is responsible for replacing batteries with fresh cells to ensure proper operation. **ADULT SUPERVISION IS RECOMMENDED WHEN REPLACING BATTERIES.** For indoor use only. This item is not a toy and should be used for decorative purposes only.