



LANTERN WITH CANDLES WAX WARMER

Instruction Manual

SKU#6045653

Please read instructions carefully before use. Retain for future reference.

IMPORTANT SAFETY INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

WARNING - When using electric products, basic precautions should always be followed, including the following:

- 1) Read all the instructions before using the product.
- 2) To reduce the risk of injury, close supervision is necessary when a product is used near children.
- 3) Do not put fingers or hands into the product.
- 4) To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.
- 5) A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- 6) Do not immerse in any liquid.
- 7) The appliance is intended for household and indoor use only.
- 8) Extension cords are available and are capable of being used if care is exercised in their use.
- 9) If an extension cord is used:
 - a) The marked electrical rating of the extension cord shall be at least as great as the electrical rating of the appliance.
 - b) The longer cord should be arranged so that it is not draped over a counter-top or table-top where it is able to be tripped over, snagged, or pulled on unintentionally (especially by children).
- 10) Hot wax can burn. Do not touch or handle hot wax.
- 11) Do not leave unattended or leave on overnight.
- 12) Use to heat wax only. Not for heating food or drink.
- 13) Warmer is designed with polarized plug which will only fit one way into a polarized outlet. Do not attempt to override this safety feature.
- 14) Do not add water, oil or any liquid to wax.
- 15) Do not use as a toy.
- 16) Remove extra protection before use.

RECOMMENDED TO USE ONLY A WAX/CANDLE FROM [THE Evergreen Tree Industry (Vietnam) Co., Ltd. MODEL#25D-135 WAX/CANDLE, FLASH POINT>175°C] FOR THIS WARMER

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

1. Place warmer on solid, level surface only.
2. Do not use on or near flammable surfaces, glass or any non heat-resistant surface.
3. Do not use on any surface that can be damaged by wax.

OPERATING INSTRUCTIONS

1. Plug into 120 VAC electrical outlet.
2. Place wax in lid. DO NOT OVERFILL
3. Turn switch to 'on' position.

MOVING AND STORAGE INSTRUCTIONS

1. Do not move warmer with hot wax in lid.
2. Clean with a damp sponge when warmer has cooled.
3. Dispose of wax in a dry lined garbage can.
4. Wait until warmer has cooled completely before storing.

USER MAINTENANCE

LID - Discard excess wax, wipe lid with paper towel while warm to remove remaining wax. Clean with soapy water and dry with paper towel to remove traces of fragrance.

WAX CUBES - Wax cubes can be reused until fragrance is exhausted. Pour melted wax into the container and wait until solidified before moving or closing the top of the pack.

HELPFUL HINTS

- Turn on wax warmer for an hour in the morning and in the evening to fill the room with lasting fragrance.
- Automatic timers can be purchased at most hardware stores to control the warmer.
- Use 1 cube at a time and recycle until fragrance is depleted.

Technical Spec.

Product Name: Lantern With Candles Wax Warmer

Model: TT25-1199AAA

Electric Rating: 120Vac , 60Hz , 11W

Wax Container Capacity: less than 5 ounce.

Distributed by: TRACTOR SUPPLY COMPANY 5401 VIRGINIA WAY, BRENTWOOD, TN 37027

For customer support, call: 1-888-376-9601 www.TractorSupply.com