



**RS 7.5IN
WHITE CHRISTMAS
TREE WAX WARMER**
Instruction Manual
SKU# 6050248

Please read instructions carefully before use. Retain for future reference.

Safety Instructions
Tabletop Electric Wax Warmer

PLEASE READ ALL INSTRUCTIONS BEFORE USING.

INSTRUCTIONS PERTAINING TO A RISK OF FIRE,
ELECTRIC SHOCK, OR INJURY TO PERSONS.

OPERATING INSTRUCTIONS:

- 1. Securely attach supplied 25W Type G50 light bulb to the lamp holder in the warmer.
- 2. Place warmer on a level, solid surface only.
- 3. Plug into standard 120VAC electrical outlet.
- 4. Place one scented wax cube into warmer lid. DO NOT OVERFILL LID.
- 5. Turn switch to ON.
- 6. Before disconnecting, turn switch to OFF. Grip plug and pull from wall outlet. Never pull on cord.

MOVING AND STORAGE INSTRUCTIONS:

- 1. Do not attempt to move warmer while wax in the lid is hot.
- 2. Once warmer is cooled and unplugged, clean with a damp sponge or cloth.
- 3. After use, allow warmer to cool before storing.
- 4. Dispose of any used wax in a dry, lined garbage can or other suitable containers.

USER MAINTENANCE:

DO NOT ATTEMPT TO MOVE WARMER WHILE WAX IN THE LID IS HOT.

WARMER

- 1. Clean warmer with a damp cloth or sponge while warmer is cold and disconnected from the electrical outlet itself. Don't immerse or submerge warmer in water.
- 2. If light bulb burns out, turn switch off, unplug the warmer, then replace the bulb with a standard 25W Type G50, 120V globe-shaped candelabra base light bulb.

WARMER LID

- 1. Empty all excess wax, then wipe with a soft paper towel or dry cloth while the lid is still warm to remove residue.
- 2. When changing fragrance type in lid, wash lid in a warm soapy water and dry with a soft paper towel to remove traces of prior scent.

IMPORTANT SAFETY INSTRUCTIONS:

- Do not touch heating surface when hot.
- Do not operate warmer with a damaged cord or plug, after it has malfunctioned, or after it has been dropped or damaged in any manner.
- Do not let cord hang over the edge of table or counter or touch hot surfaces.
- Do not place on or near gas or electric burner, or in a heated oven.
- Use only a 25W Type G50, 120V globe-shaped candelabra base light bulb in warmer. Use of higher wattage bulb may cause risk of electrical short or fire.
- Hot wax may cause serious injury, do not touch or handle liquefied wax.

**IMPORTANT SAFETY INSTRUCTIONS REGARDING
FRAGRANCE WAX:**

- Wax will melt when warmed.
- Wax may stain fabric and other surfaces.
- Avoid prolonged contact with skin.
- May cause irritation.
- Do not add water or any other fluid or material to wax.
- Keep out of reach of children and pets.
- Use as directed to avoid unnecessary damage.

WARNING: When using electric products, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- Keep out of reach of children or pets.
- Do not use as night-light.
- Do not leave on overnight.
- Intended for indoor use only.
- Do not add water to wax.
- Do not operate warmer after it has been damaged in any manner.
- Do not place on or near gas or electric burner, or in a heated oven.
- Use only a standard 25W Type G50, 120V globe-shaped candelabra base light bulb in the warmer. Use of higher wattage bulb may cause risk of electrical short or fire.
- Do not use warmer in a manner other than the use that is intended.
- Do not leave warmer unattended while in operation.
- Do not put fingers or hands into the product or hot wax or touch the heating surface when hot.
- This unit is not intended for wet or potentially wet locations such as showers, tubs, saunas, sinks, Jacuzzis, etc.
- Do not immerse in liquid or water.
- The warmer is only designed to heat wickless scented wax cubes. Do not use to heat food or drink.
- To reduce the risk of injury, close supervision is necessary when a product is used near children.
- To reduce the risk of electric shock, the wax warmer has a polarized plug (one blade is wider than the other). This plug will fit in a polarised outlet only one way. If the plug does not fit into outlet, reverse the plug. If you do not have polarized outlets contact a qualified electrician to install the proper outlet. Do not change the plug in any way.
 - a) A short power-supply cord (or short detachable power-supply cord) is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
 - b) Extension cords (or longer detachable power-supply cords) are available and can be used if care is exercised, especially in the presence of children.
 - c) If an extension cord (or a long detachable power-supply cord) is used: The marked electrical rating of the detachable power-supply cord or extension cord shall be at least as great as the electrical rating of the appliance.

SAVE THESE INSTRUCTIONS

For Decoration Only.
Not a Toy.
Not intended for children.

Distributed by TRACTOR SUPPLY COMPANY
5401 Virginia Way, Brentwood TN 37027
For customer support call 1-888-376-9601
www.TractorSupply.com
MADE IN CHINA