

Product contents

1. Unpack the heater.

Warning: Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.

2. The following items are included:

- . Main unit
- . User manual

3. Technical data:

- Model: FP118-05
- Input voltage: 120 V / 60 Hz
- Power: 500 W
- Dimensions: 4.33 x 3.46 x 6.22 inches
- Visible cord length: 70.9 inches


Product description

1. Tip-over switch
2. Air outlet
3. Air inlet
4. Power switch
5. Power cord



WARNING:

To reduce the risk of fire, plug the heater directly into a wall receptacle. Do not use with an extension cord, power strip, or similar device.

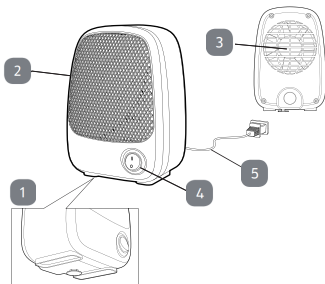

General information

Reading and storing the user manual

Read this manual thoroughly before first use, even if you are familiar with this type of appliance. The safety precautions enclosed reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the purchase receipt and box. If applicable, pass these instructions on to the next owner of the appliance.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the tabletop ceramic personal heater or on the packaging.



DANGER!

This signal word designates a hazard with a high degree of risk which will result in death or severe injury if not avoided.



WARNING!

This signal word designates a hazard with a moderate risk which will result in death or severe injury if not avoided.



CAUTION!

This signal word designates a hazard with a low risk, which may result in minor or moderate injury if not avoided.

NOTICE!

This signal symbol/word warns of possible damage to property.



This symbol provides you with useful additional information on handling and use.

LIMITED WARRANTY

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, call 1-888-376-9601. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, over-heating or alteration. Repairs made by anyone other than Tractor Supply Co. are not covered in this warranty. Tractor Supply Co. will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness for purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either expressed or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty, all such liability will terminate. No other warranties are expressed or implied. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Distributed by:

TRACTOR SUPPLY COMPANY

5401 VIRGINIA WAY

BRENTWOOD, TN 37027

For customer support,

call: 1-888-376-9601

www.TractorSupply.com


Made in Cambodia



SKU#6052148

OWNER'S MANUAL

MINI TABLETOP HEATER

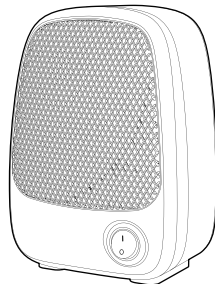

Features:

- 500 Watts Powerful Output
- Heats up to 80 sq ft
- Overheat Protection
- Tip-over Protection
- Power Indicator Light
- 120V A.C./60Hz



Save These Instructions

Safety instructions

Proper use

The tabletop ceramic personal heater is exclusively designed for heating small spaces safely. It is only intended for private use and not suitable for commercial purposes. Only use the tabletop ceramic personal heater as described in this user manual. Any other use is considered improper and may result in damage to property. The manufacturer or vendor cannot be held liable for damages incurred through improper or incorrect use.

Important safeguards

WARNING: When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- This product is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this product. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the product and keep them away from the sides and rear. Do not place towels or other objects on the product.
- Extreme caution is necessary when the product is used by or near children and whenever the product is left operating and unattended.
- Always unplug the product when not in use.
- Do not operate the product with a damaged cord or plug or after the product malfunctions, has been dropped or damaged in any manner. Discard the product, or return to authorized service facility for examination and/or repair.
- Do not use the product outdoors.
- To disconnect the product, turn controls to off, then remove plug from outlet.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
- To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

RISK OF ELECTRIC SHOCK

A faulty electrical installation, excessive line voltage or incorrect operation may result in an electric shock.

- The heater must not be located immediately below a socket-outlet.
- Children of less than 3 years should be kept away unless continuously supervised.

- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- To prevent a possible fire, do not block air intakes or exhaust in any manner.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and socket-outlet.
- Do not leave this appliance unattended when it's in use.
- The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by disconnecting the appliance and vacuum cleaning air vents and grilles.
- For proper operation, heater should be placed on a smooth, non-combustible surface. Do not place the heater on carpet, don't place the cable under carpets. Arrange cord away from traffic areas so that it will not be tripped over.
- Do not store away until the heater cools down, store the heater in cool dry location.
- Never carry or hang the appliance by the cord. When storing the product, loosely coil the cord. Do not wrap the cord around the appliance.
- Use your heater only with a working smoke detector located in the vicinity of your heater.
- Do not place heater on a small, unlevel, uneven or any surface which might allow heater to tip or fall.
- Do not operate the heater with heater guards or any safety device removed or disabled.

CAUTION: The appliance has no user-serviceable parts contained inside.

Do not attempt to repair, disassemble or modify it.

- DO NOT use this appliance for anything other than intended use.



This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Read all instructions

Electrical safety and cord handling

- Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label and your outlet socket is properly grounded.
- The appliance is not intended to be operated by means of an external timer.
- Avoid the use of extension cords. Serious injuries may result from a product being pulled off a counter top.
- To protect against fire and electric shock, injury and material damage, protect the appliance from water. Do not immerse the cord, plug or the appliance in water or other liquids. Do not expose it to water, rain, moisture or any other liquids during use or storage.
- Never operate this product with wet hands or spill liquids into the product.
- If the product falls into water, immediately unplug it from the electrical outlet. Do not touch it or reach into the water.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges. Do not let the power supply cord hang near or over the edge of a table or counter top. Do not let the cord touch hot surfaces when it is in use. Run the cord in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.

Operation

Proper use

- Insert the power plug into a wall socket that complies with the technical data.
- Set the power switch to "I" to turn the appliance on. The indicator light will light up.
- To switch the appliance off completely, set the power switch to "O".

Thermal cut-out

For your safety, the appliance is equipped with a thermal cut-out. If the temperature inside becomes too high, the appliance will switch off automatically.

To reset:

1. Switch the power switch to "O" to turn off the appliance.
2. Allow the unit to cool down completely (approximately 10-15 minutes). The thermal cut-out will then reset automatically.
3. Check whether the air inlet or outlet is obstructed. If an obstruction is found, remove it.
4. After the unit has cooled and the obstruction is cleared, restart the heater by selecting the desired function.

Important:

If you cannot identify a cause and the fault occurs repeatedly, unplug the unit and do not use it. Do not attempt to repair it yourself.

Tip-Over Switch

This appliance is equipped with a tip-over switch located on the bottom. If the unit falls over, the switch will immediately shut off power.

To reset:

Place the appliance upright on a flat surface.

Maintenance

- Always disconnect the appliance and let it completely cool before any maintenance.
- Use a vacuum cleaner to remove dust on grills.
- Clean the outside of the unit with a damp cloth and then dry it with a dry cloth. Never immerse the unit in water, nor let water drip into the unit.

Storing

- Always disconnect the appliance, let it completely cool and clean it before storing.
- If you do not use the device for a long period, put back the unit and the instruction manual to the original carton and store in a dry and ventilated place.
- Do not place any heavy items on top of carton during storing as this may damage the appliance.



Sort the packaging before you dispose of it. Dispose of cardboard and carton as waste paper and wrapping via the recyclable material collection service.

Disposal of the tabletop ceramic personal heater

Old appliances may not be disposed of in the household trash!

- Should the heater no longer be capable of being used at some point in time, dispose of it in accordance with the regulations in force in your city or state.
- Please ensure your recycling information conforms with the local regulations and EPA recommendations (www.epa.gov).



Save These Instructions

Keep the user manual for future reference.